


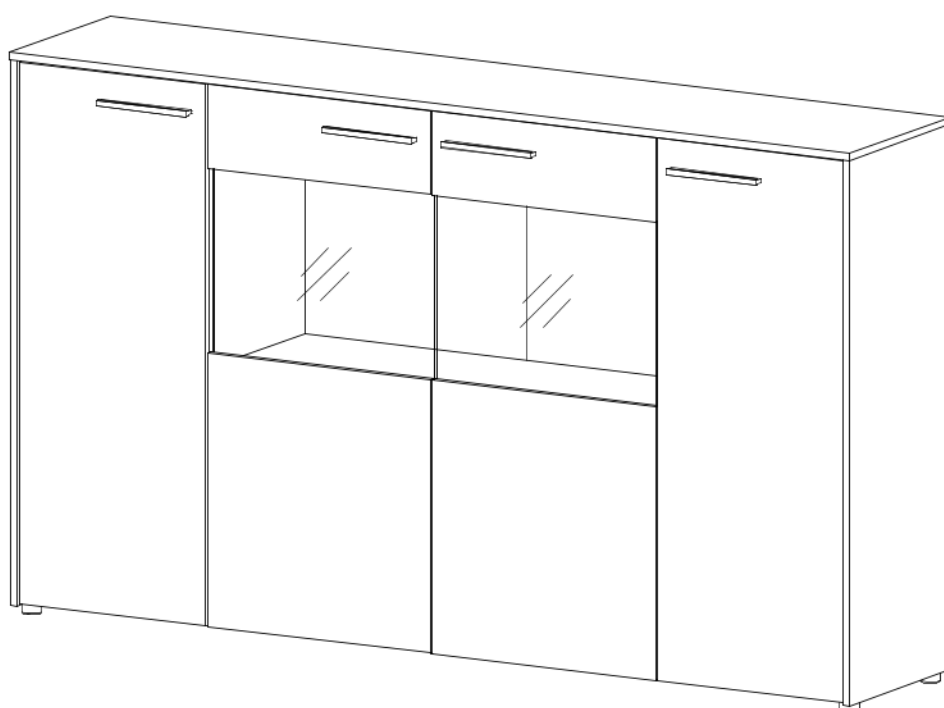
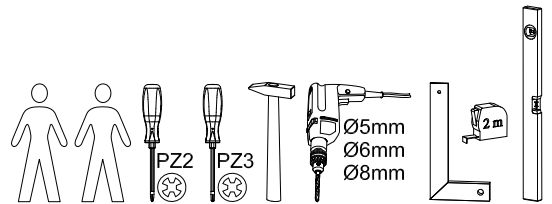


Panama 16, Highboard 4 Türen

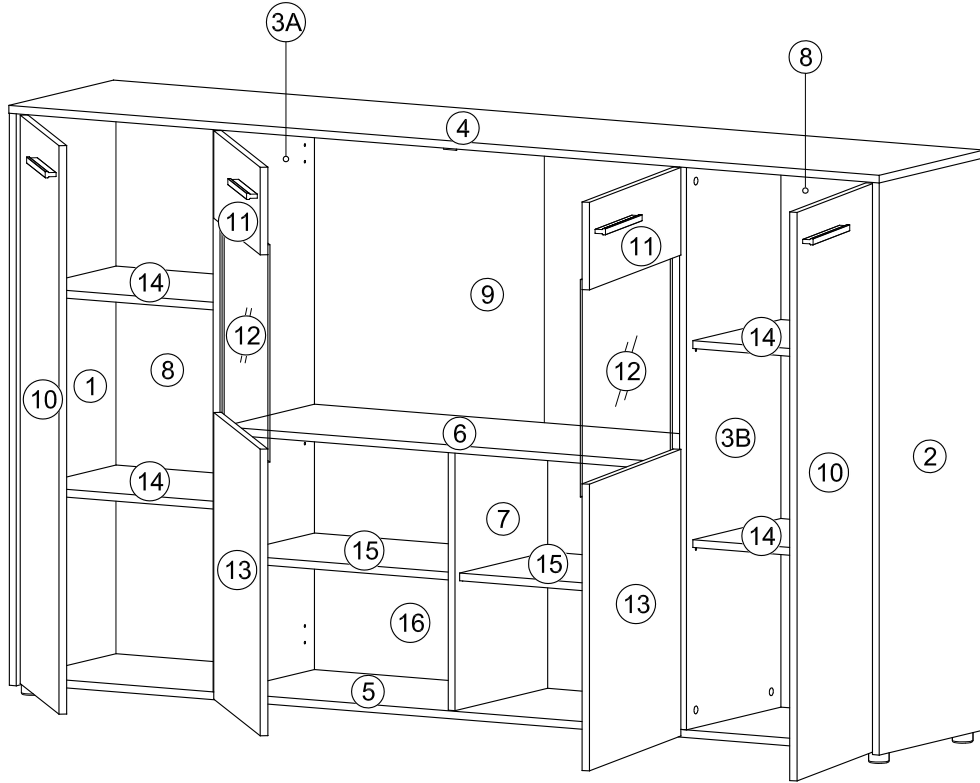





24x EX (Ø15mm)




20x ADK-EX




8x RD8x40



24x VB




6x TB26-8




4x TB26-16




10x KP0-26



21x SP1 (3,5x13)




24x RWS15 (4x15)




8x GH



1x TS




8x SB




20x NA




7x KG




7x SP5 (4x30)





24x BT



8x MS22 (4x22)







1x WBF

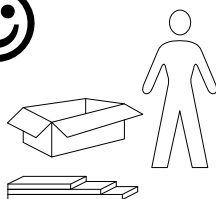











Box 1/3

P-2312

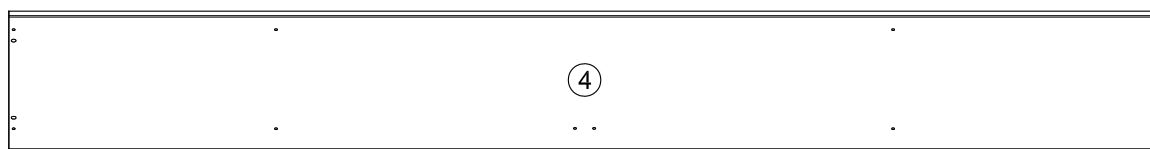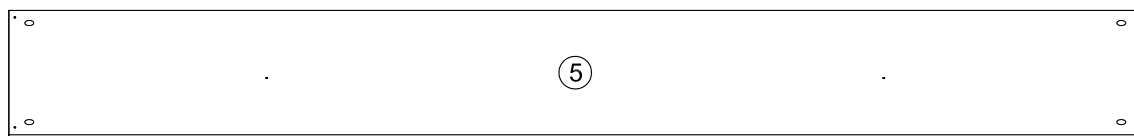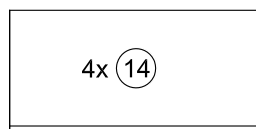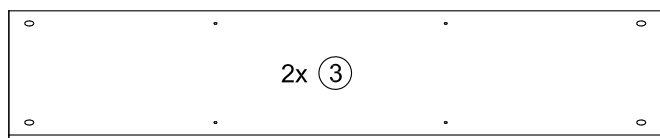



Box 2/3

P-2313

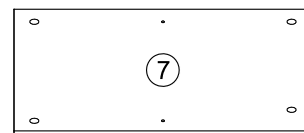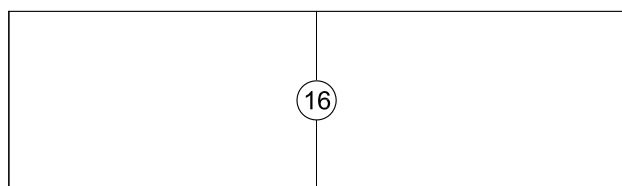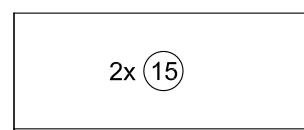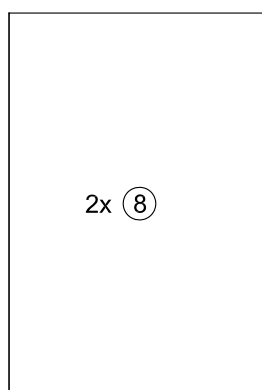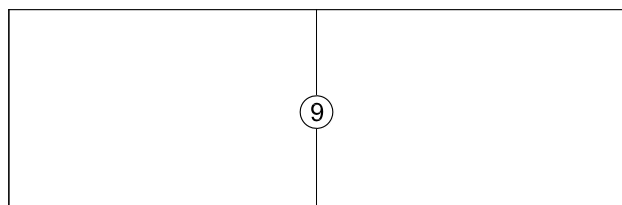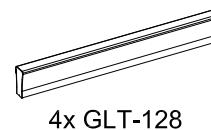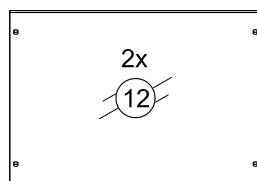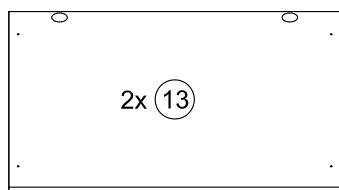


Box 3/3

P-2314

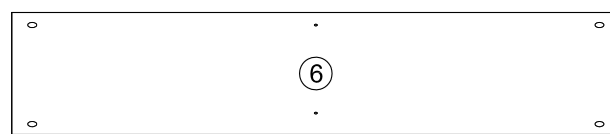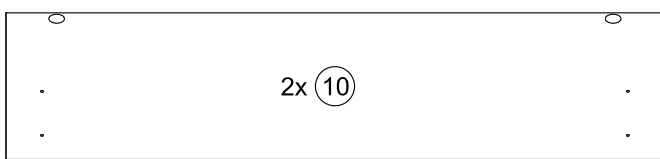

A

8x40




4x RD8x40




Ø15mm


4x EX



14x VB



1x WBF






1x TS

3,5x13






1x SP1











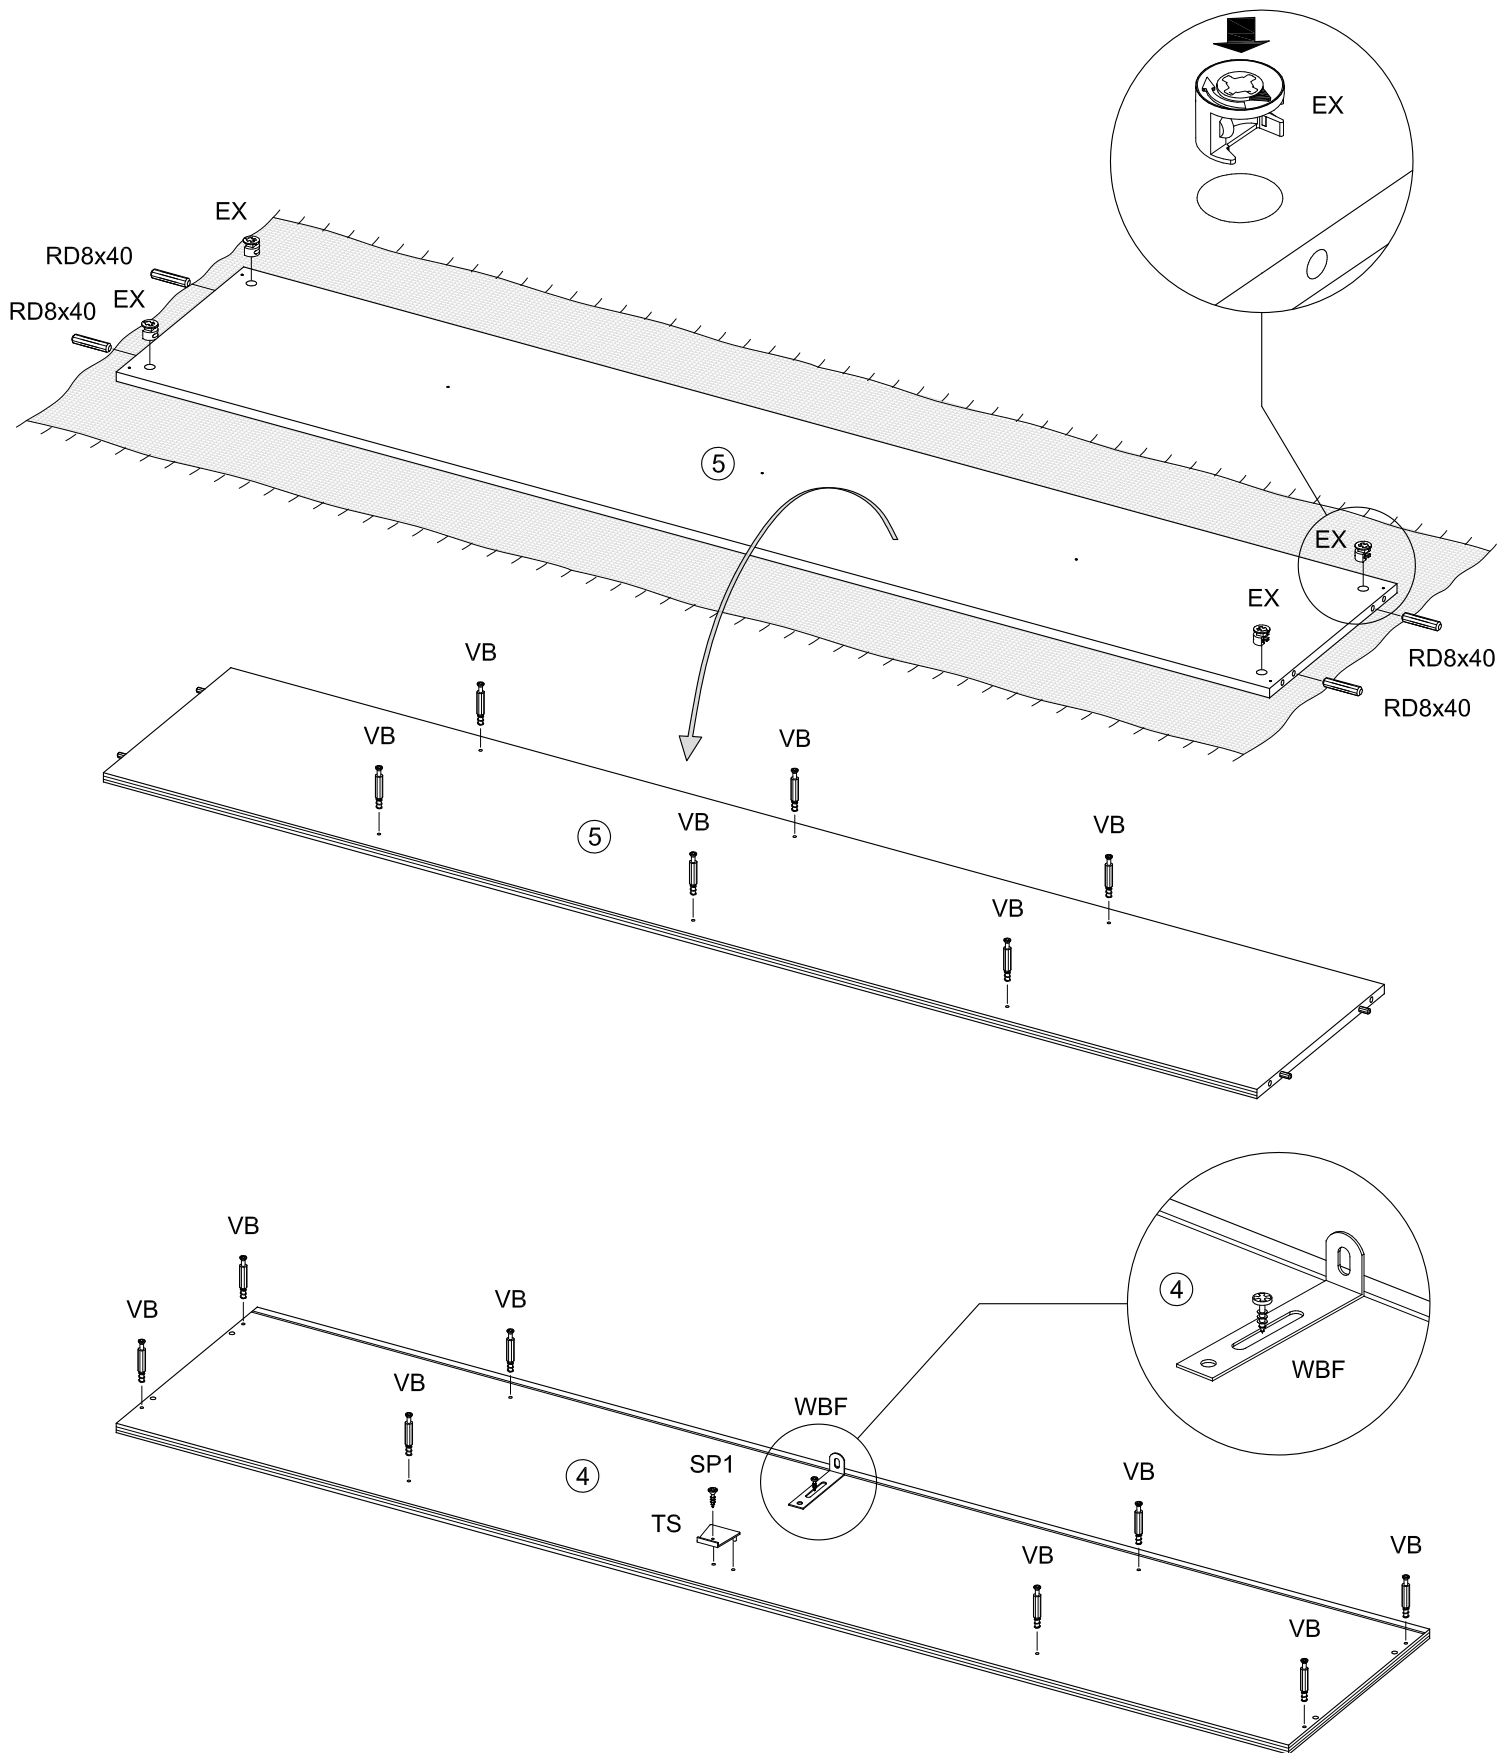


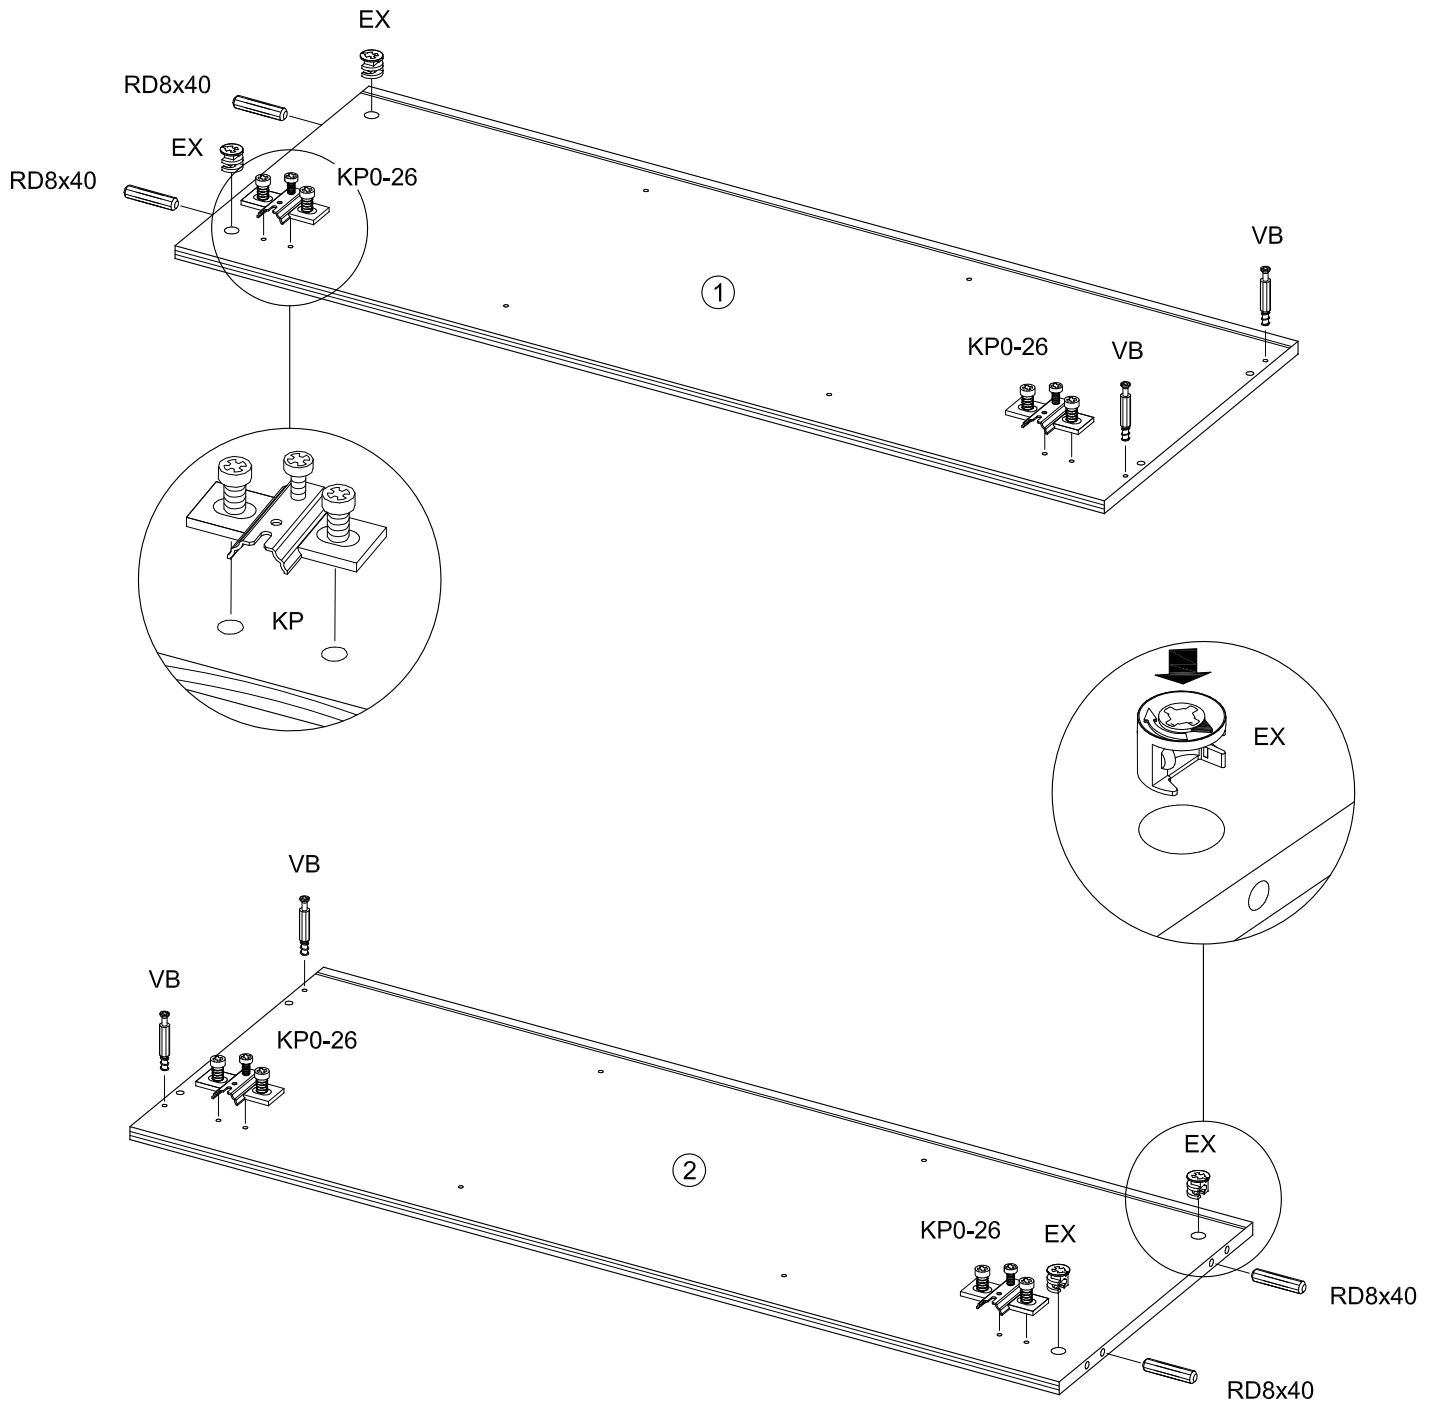



C

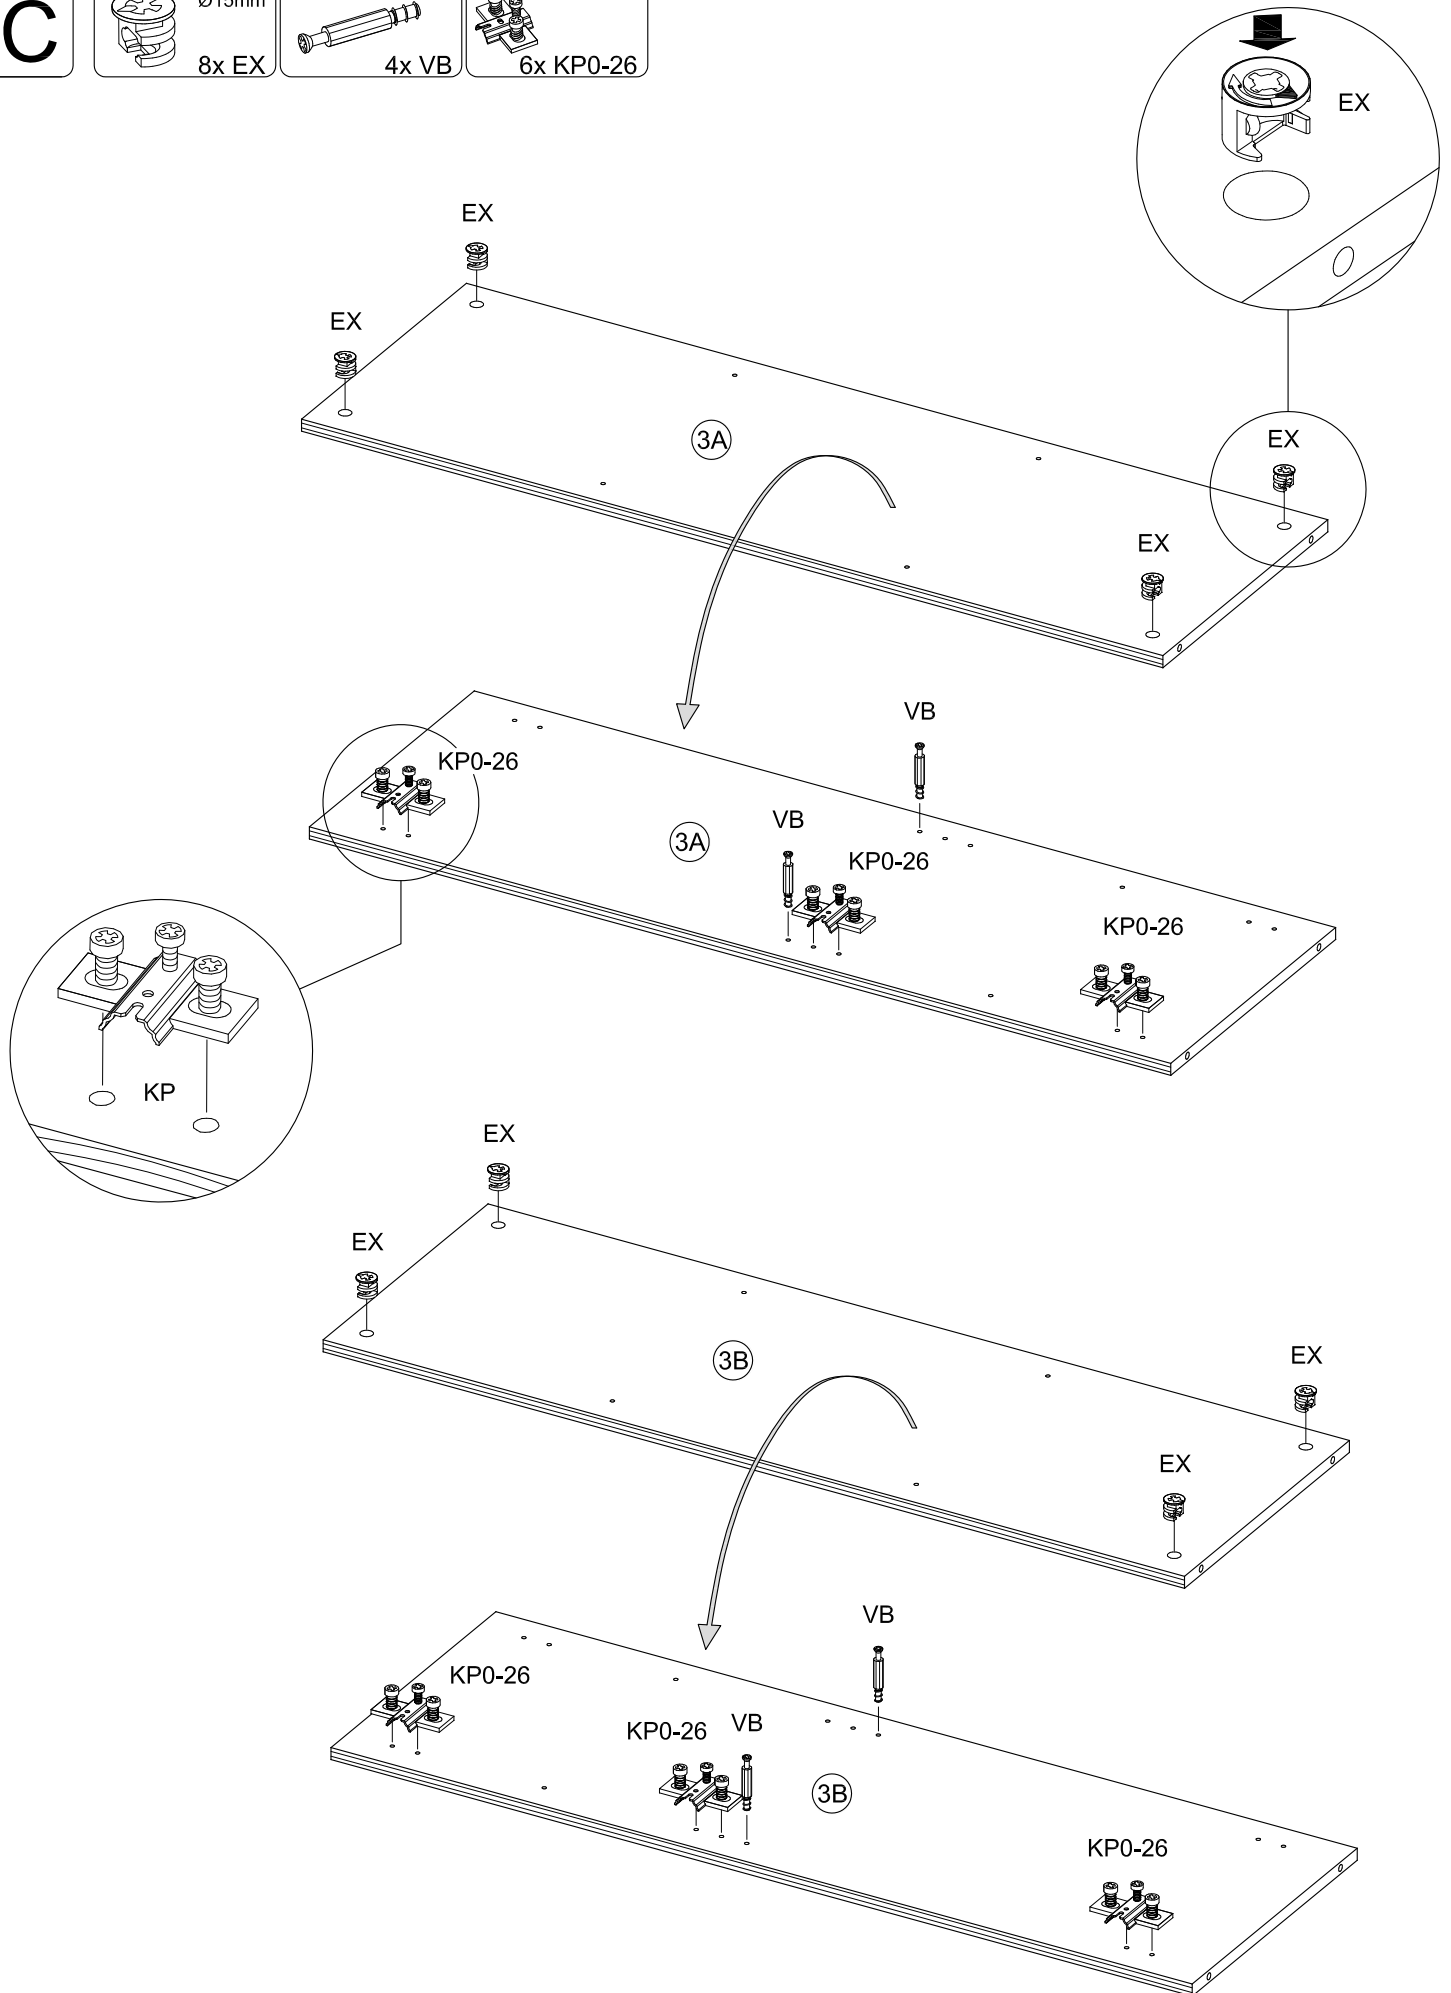


D

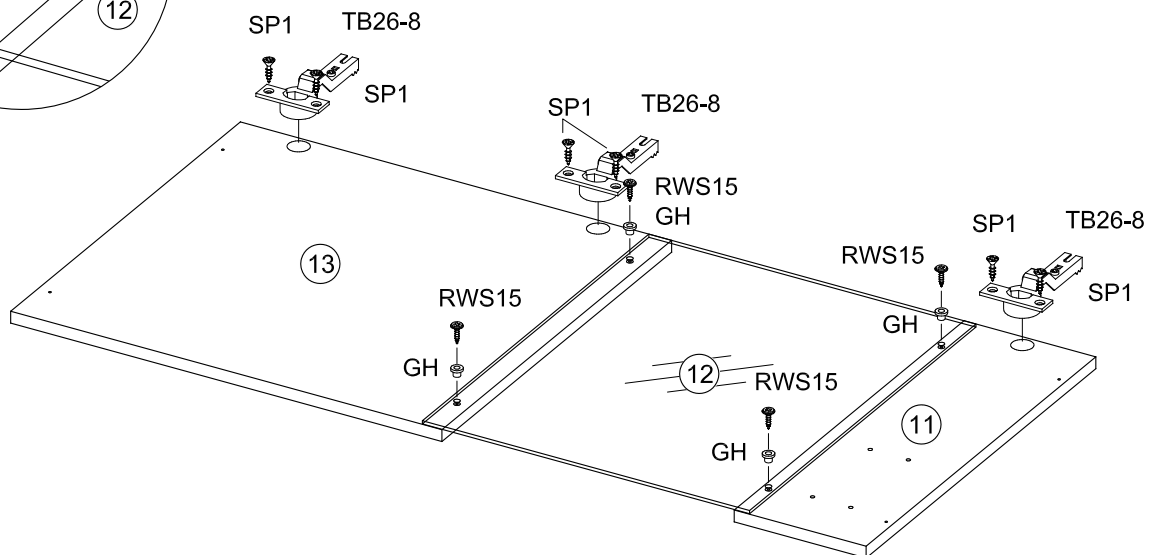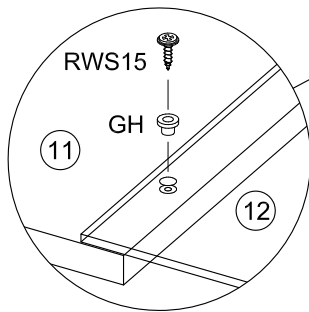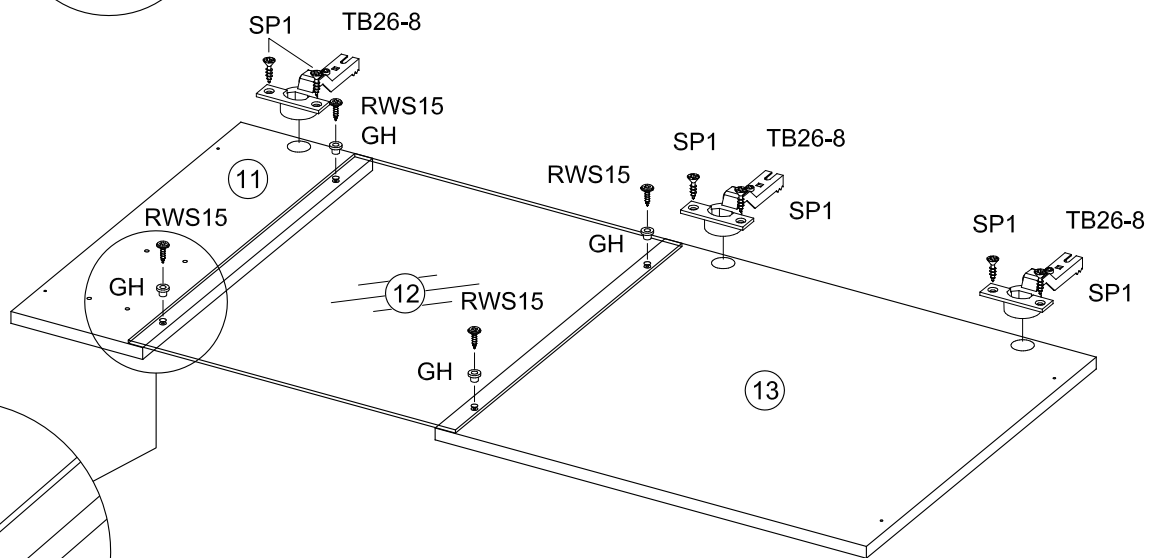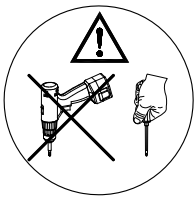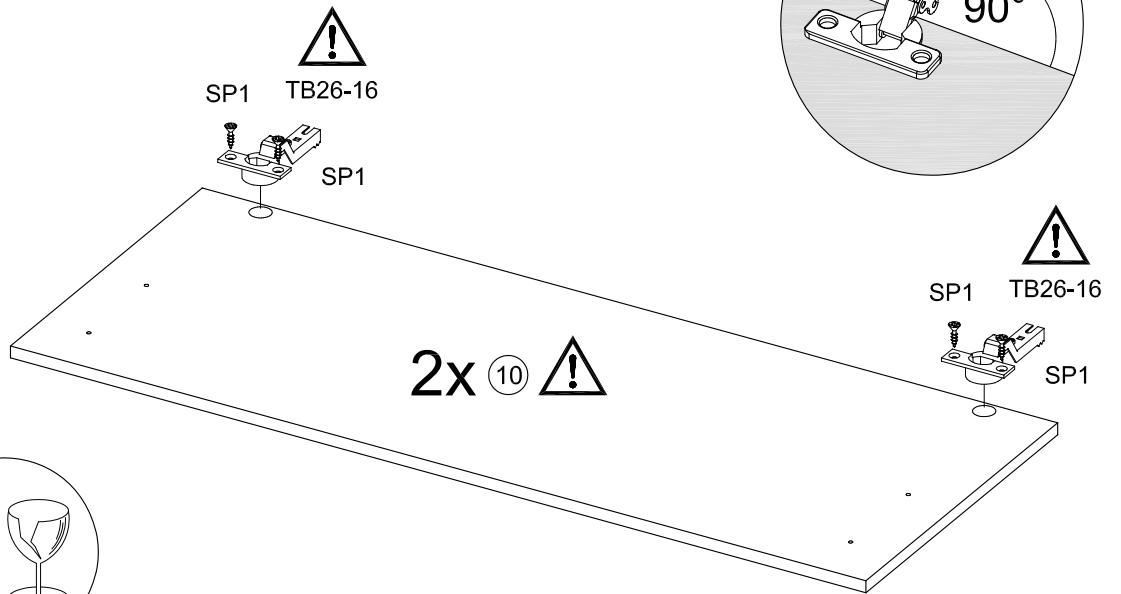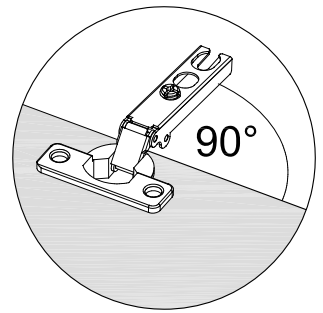


E

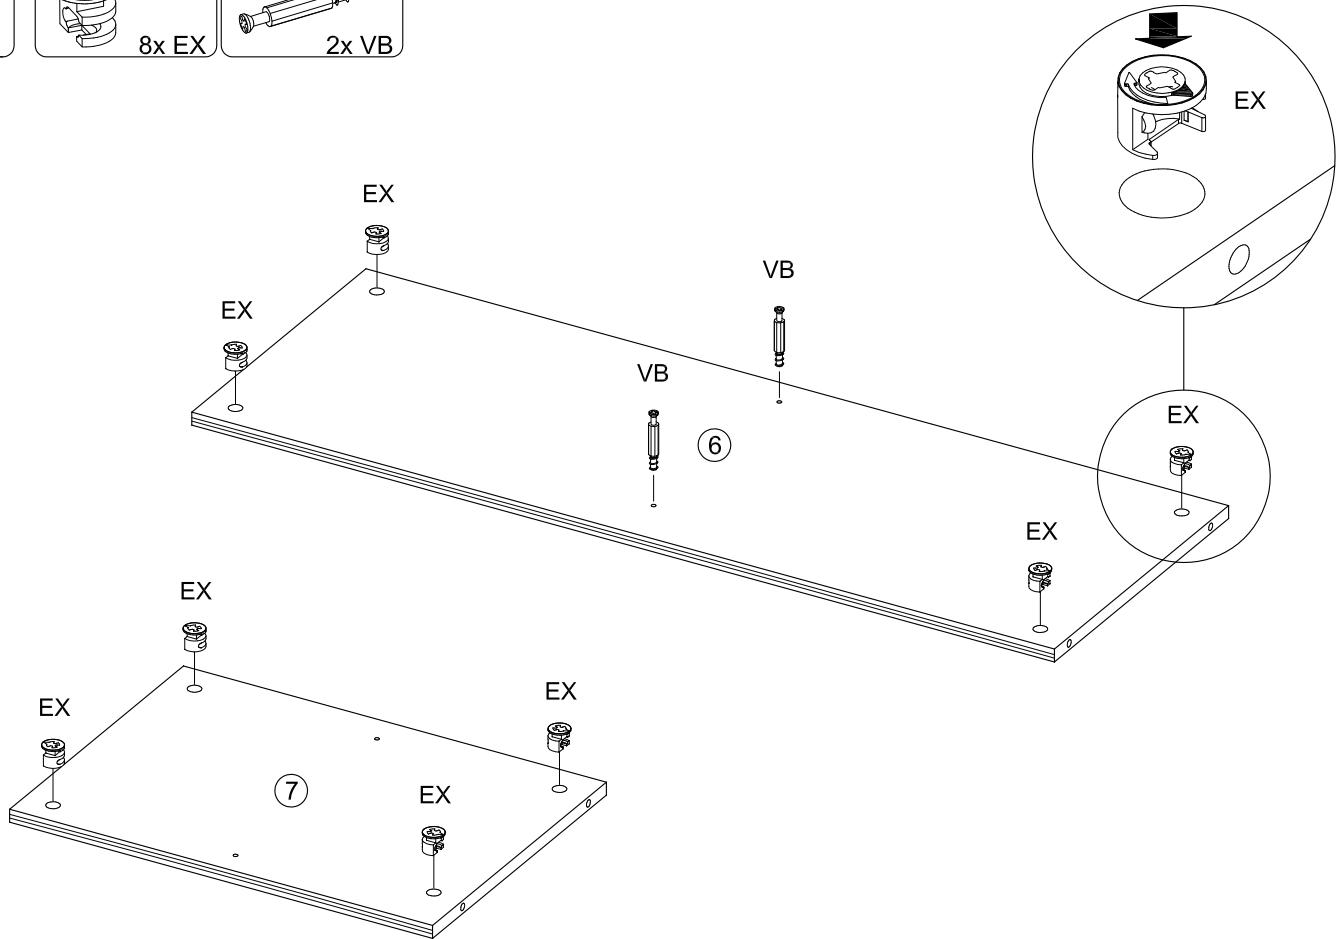


F

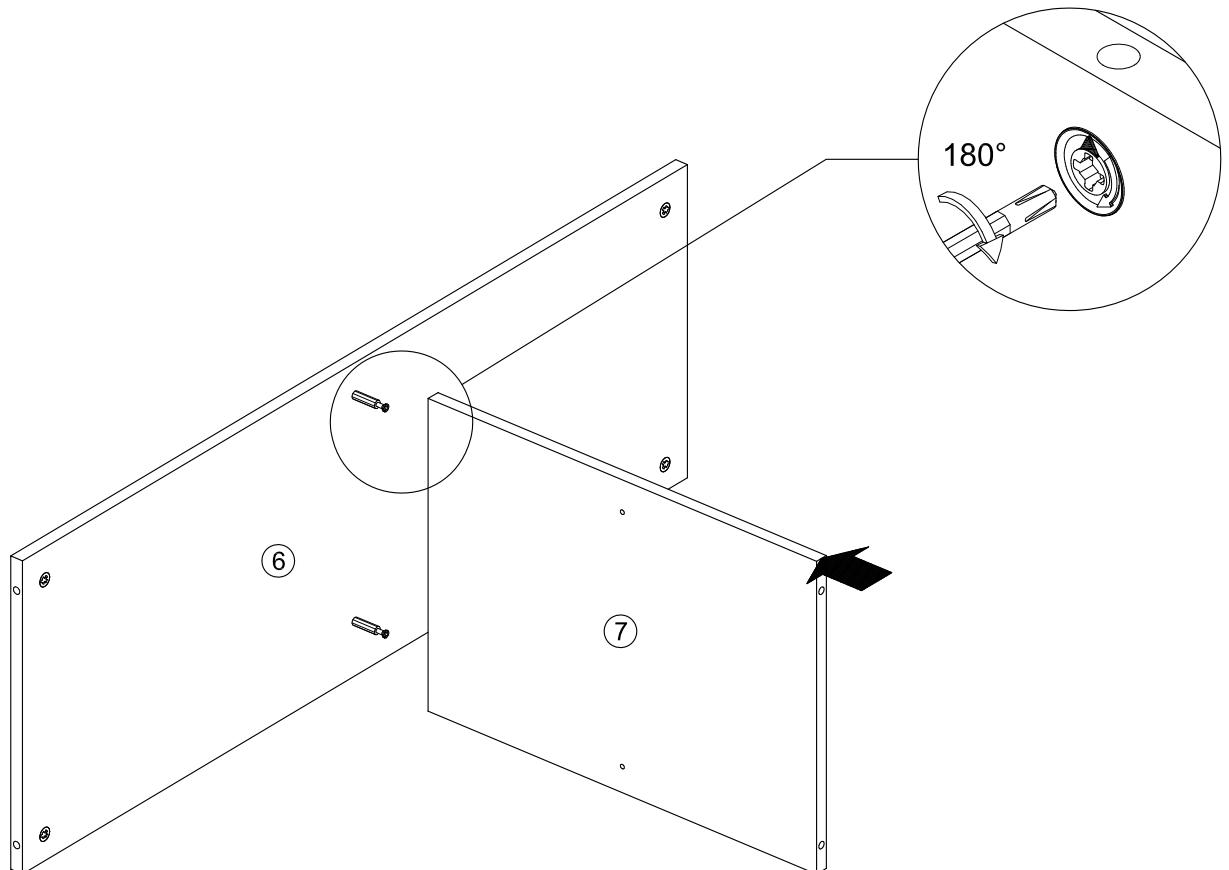


G

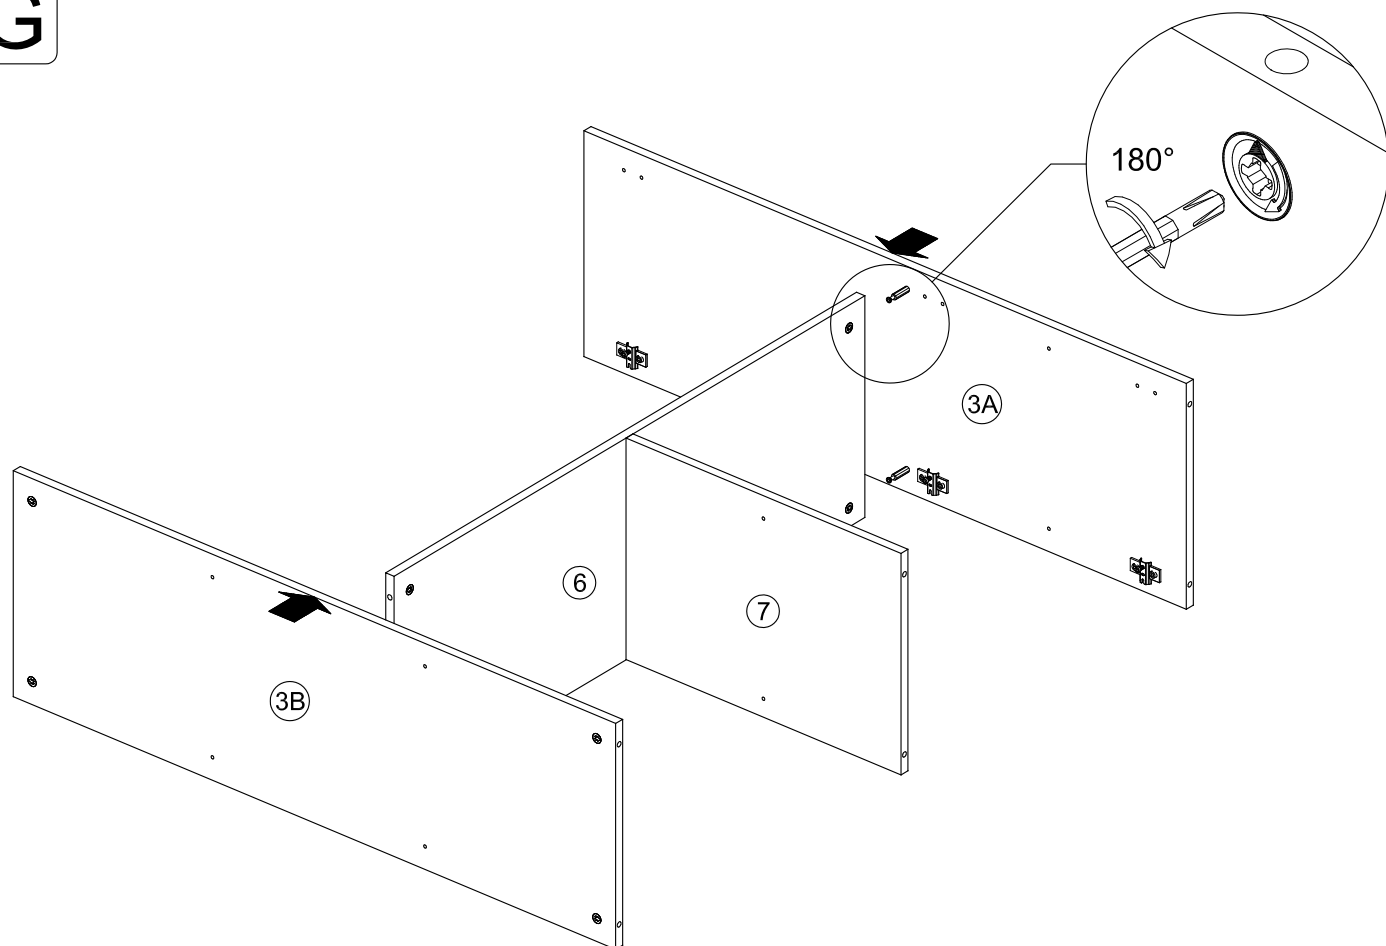


H

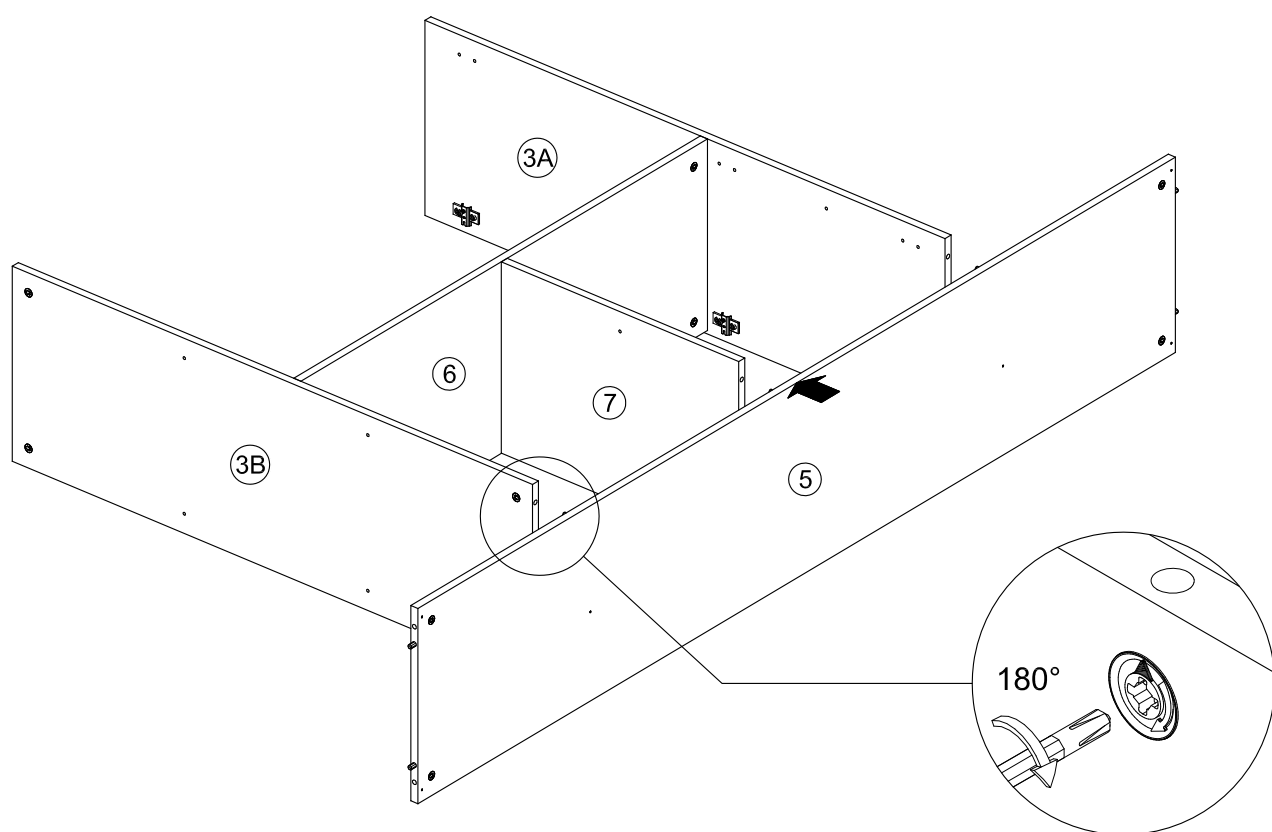


I

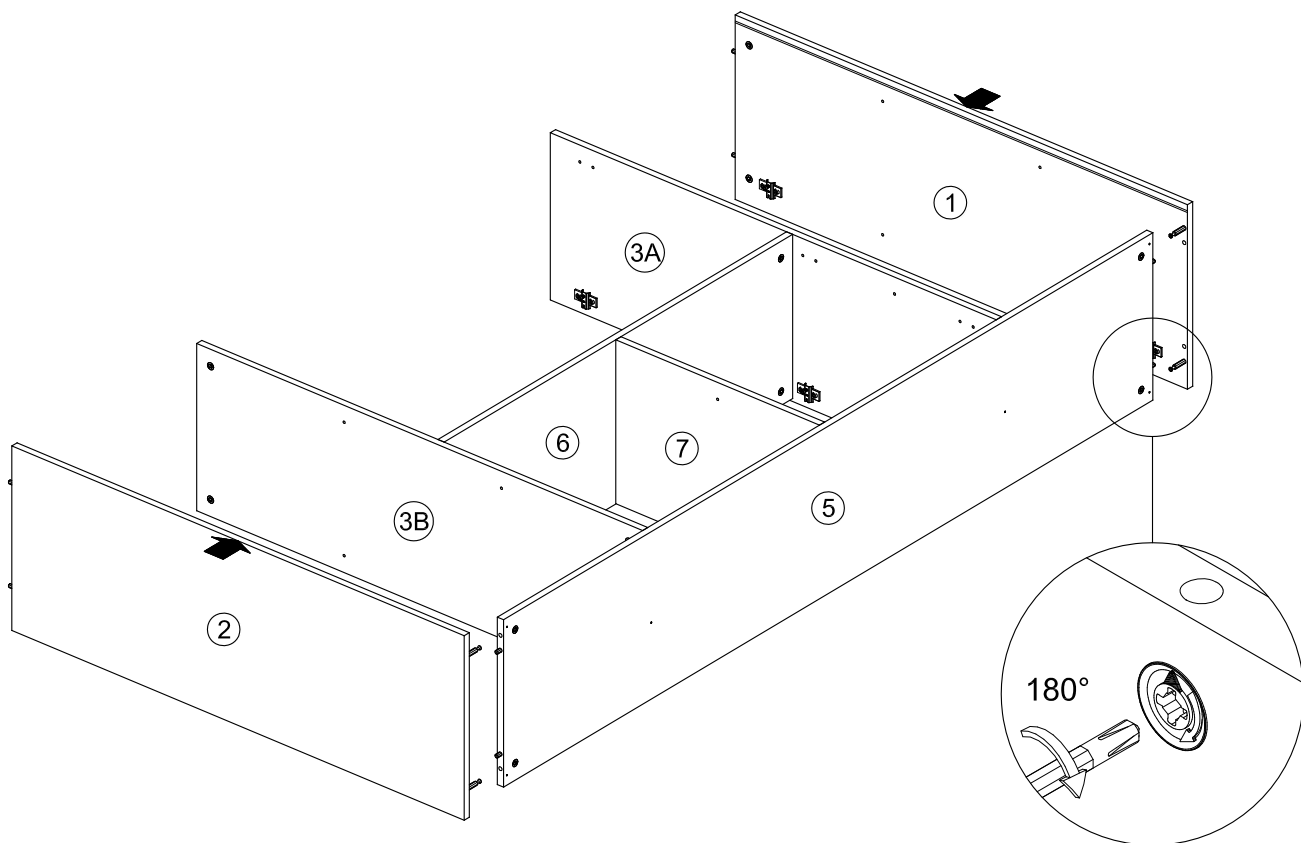









J

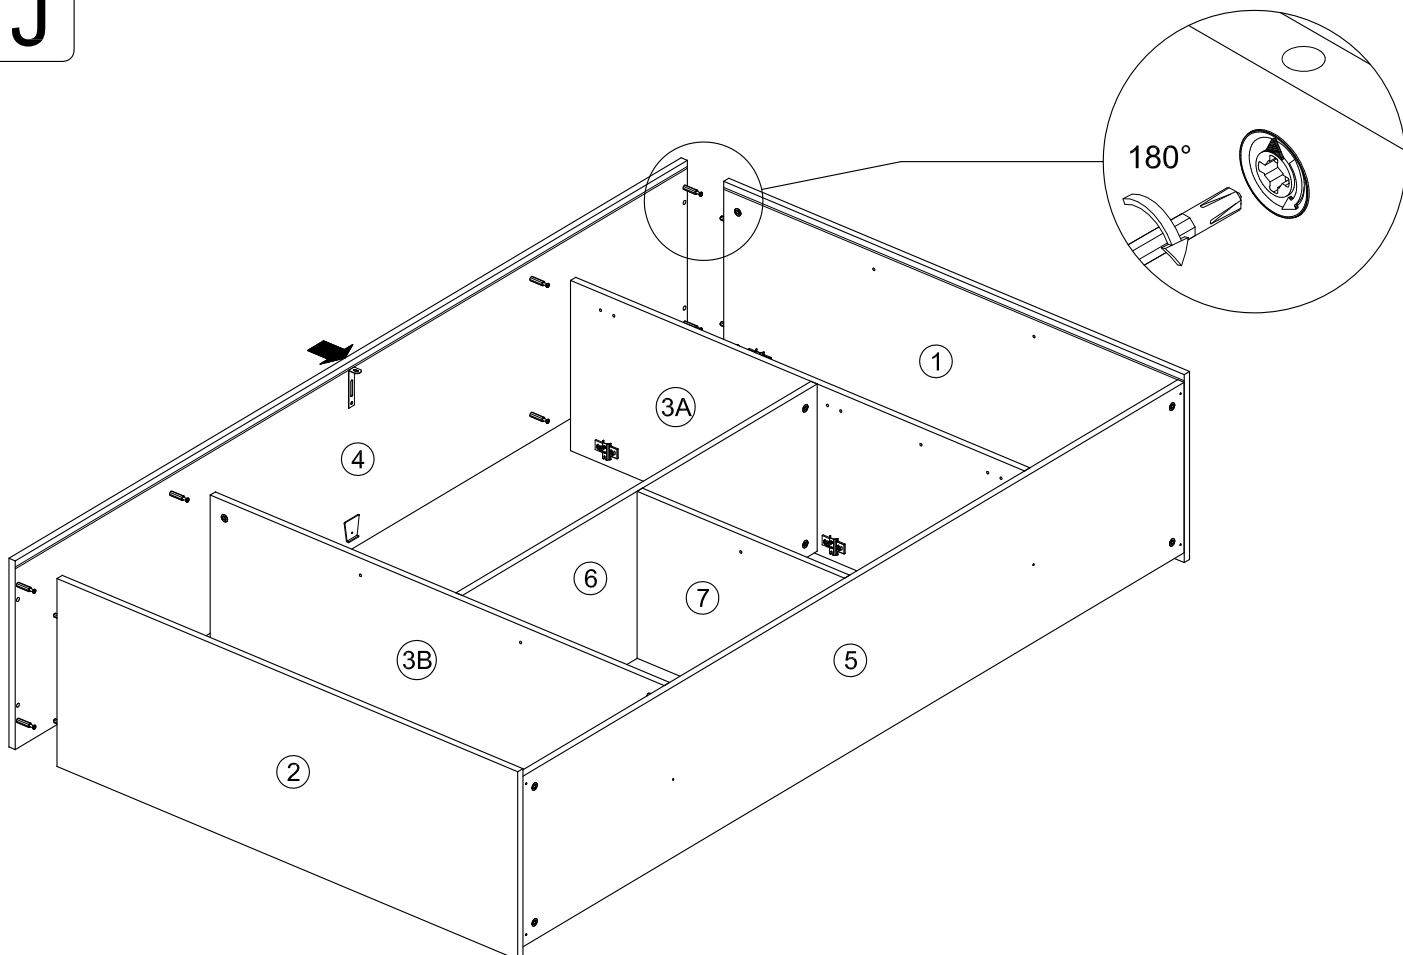




K

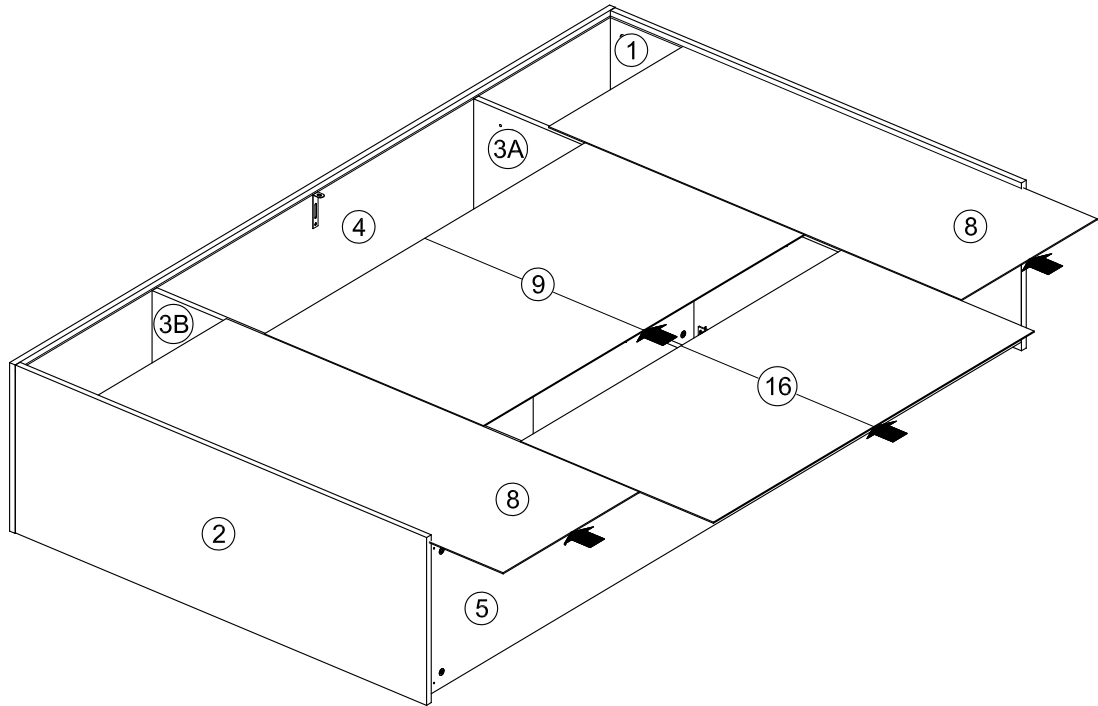

L

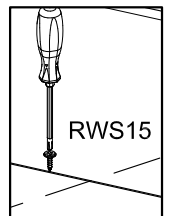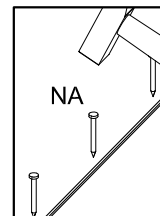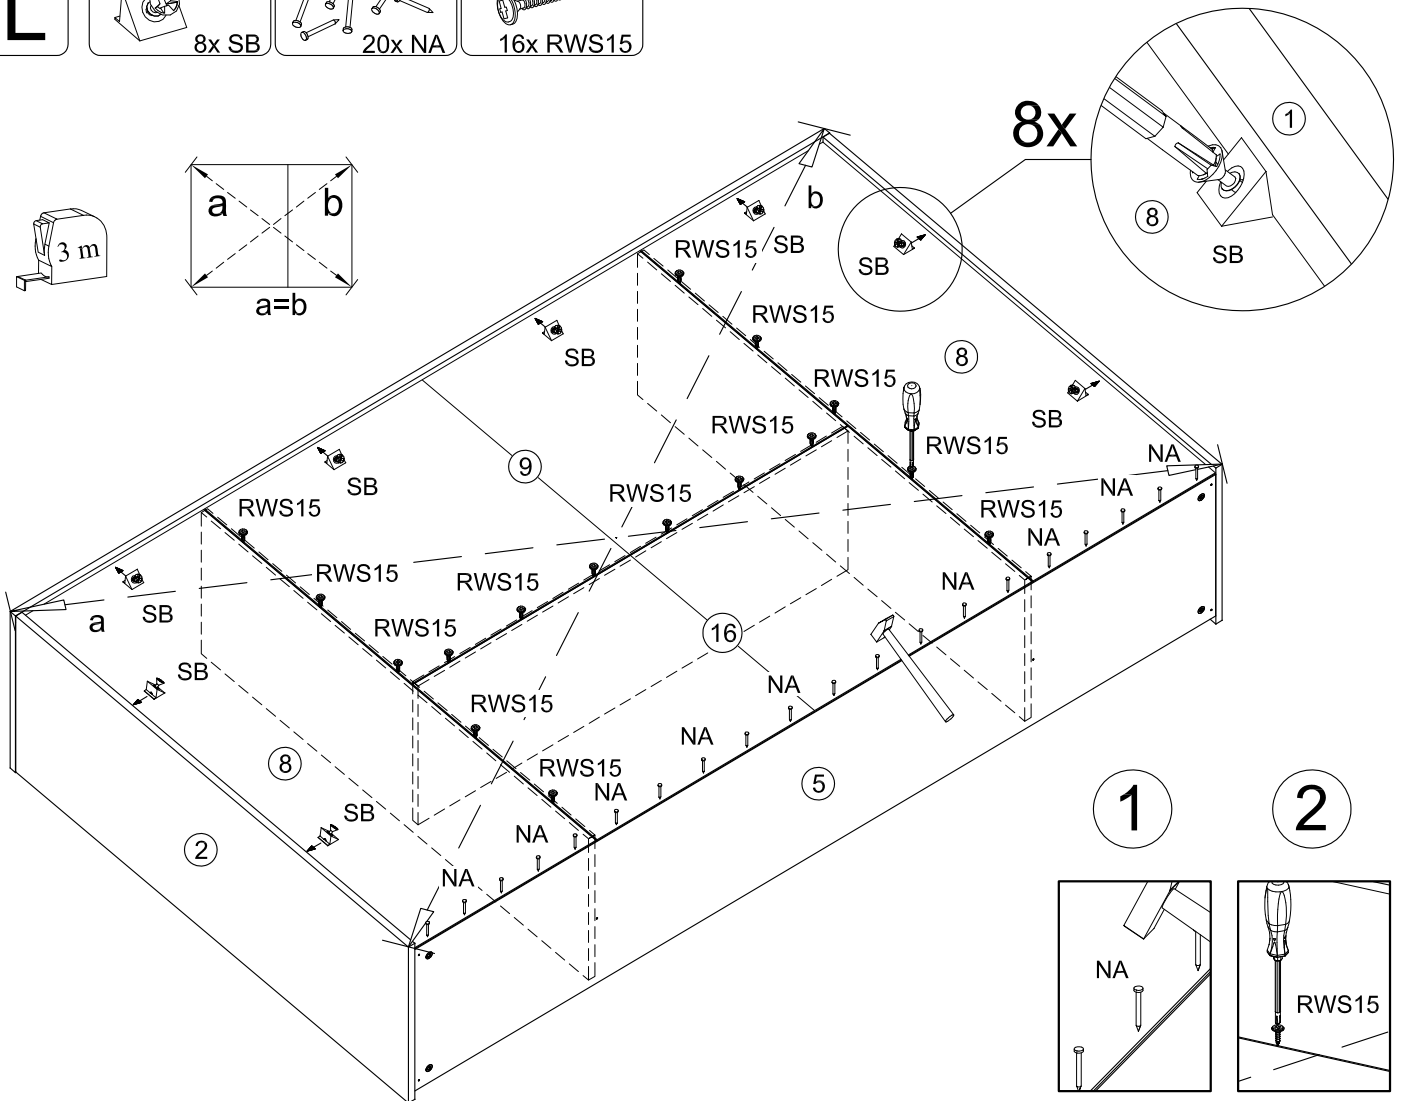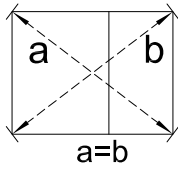

M

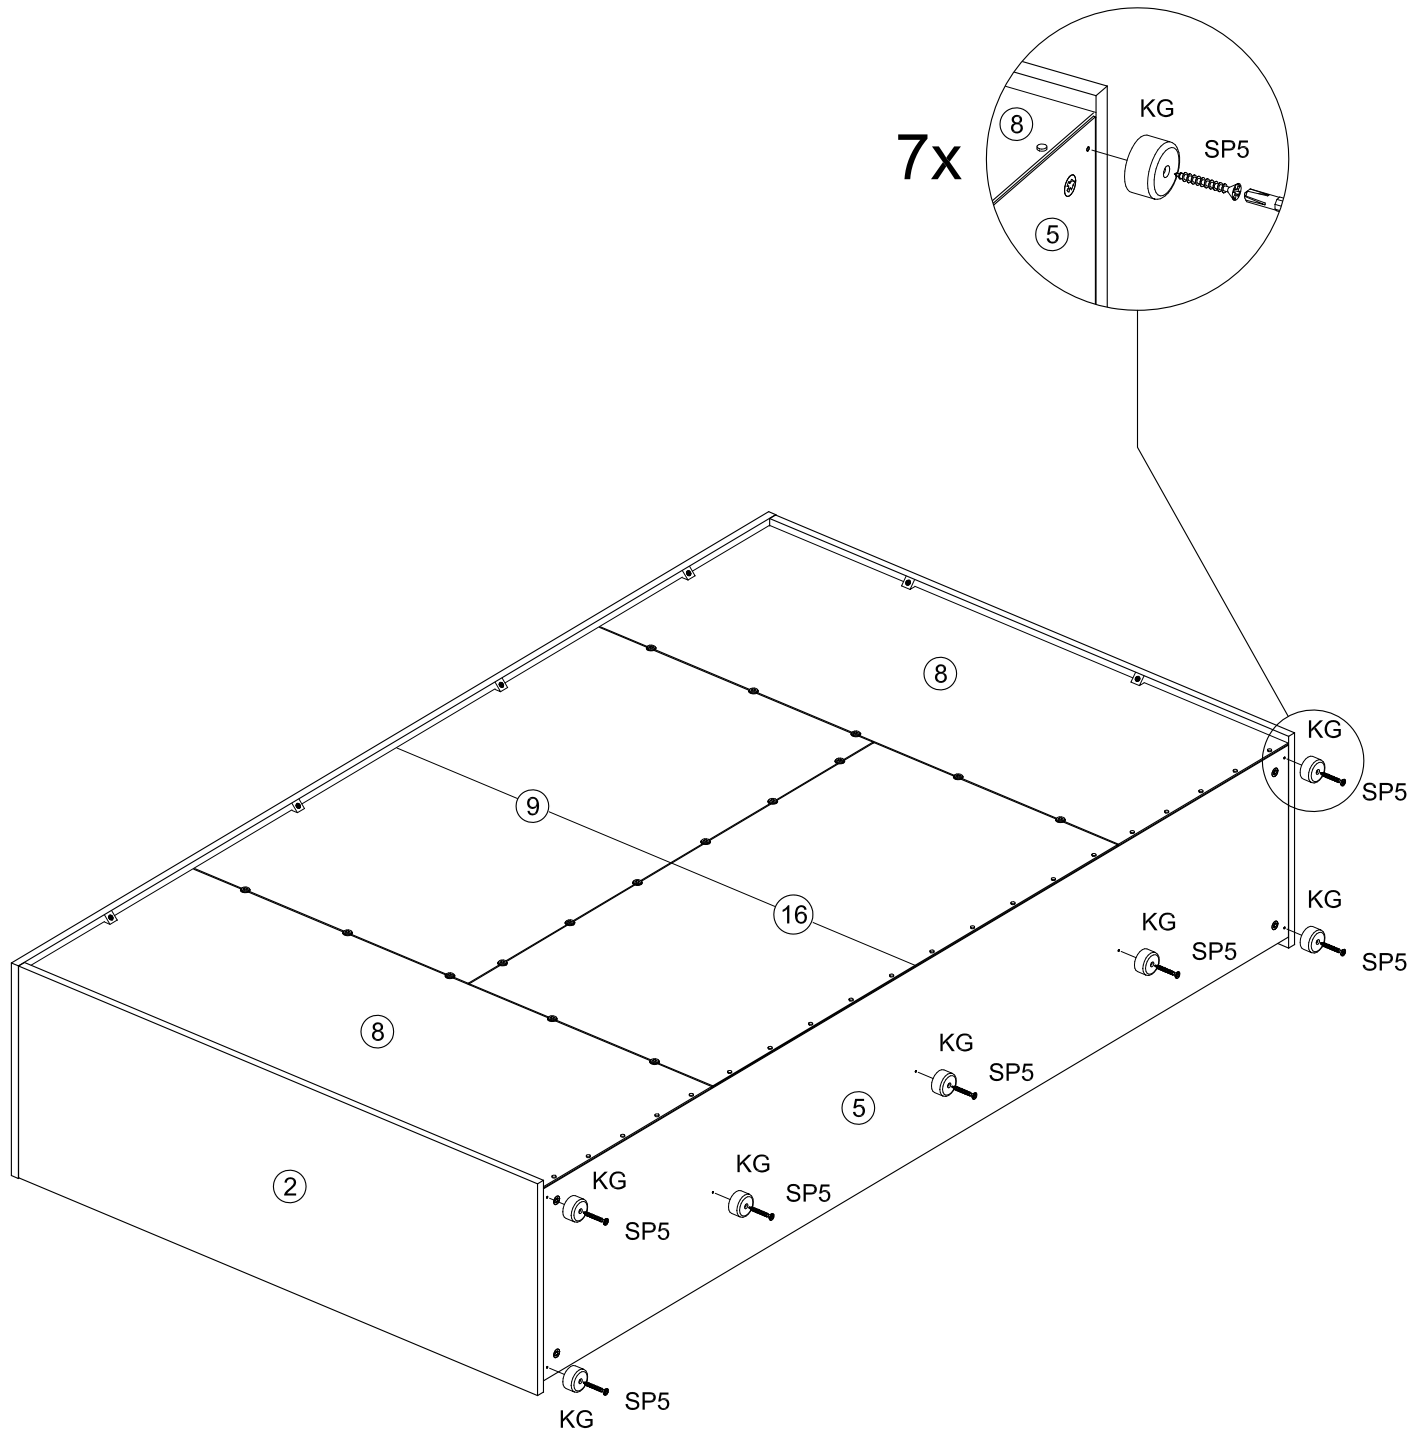


Befestigungsmaterial für die Kippsicherung ist der Wandeigenschaft anzupassen!

Attached wall-fastening-material is for massive walls only. For mounting on all other walls please use special dowels.



matériel de fixation pour le verrou d'inclinaison être adaptés à le matériau du mur.

L'hardware di fissaggio per il blocco dell'inclinazione deve essere adattato al materiale della parete.





Beugel zowel aan de kast als aan de muur bevestigen om kiepen te voorkomen!

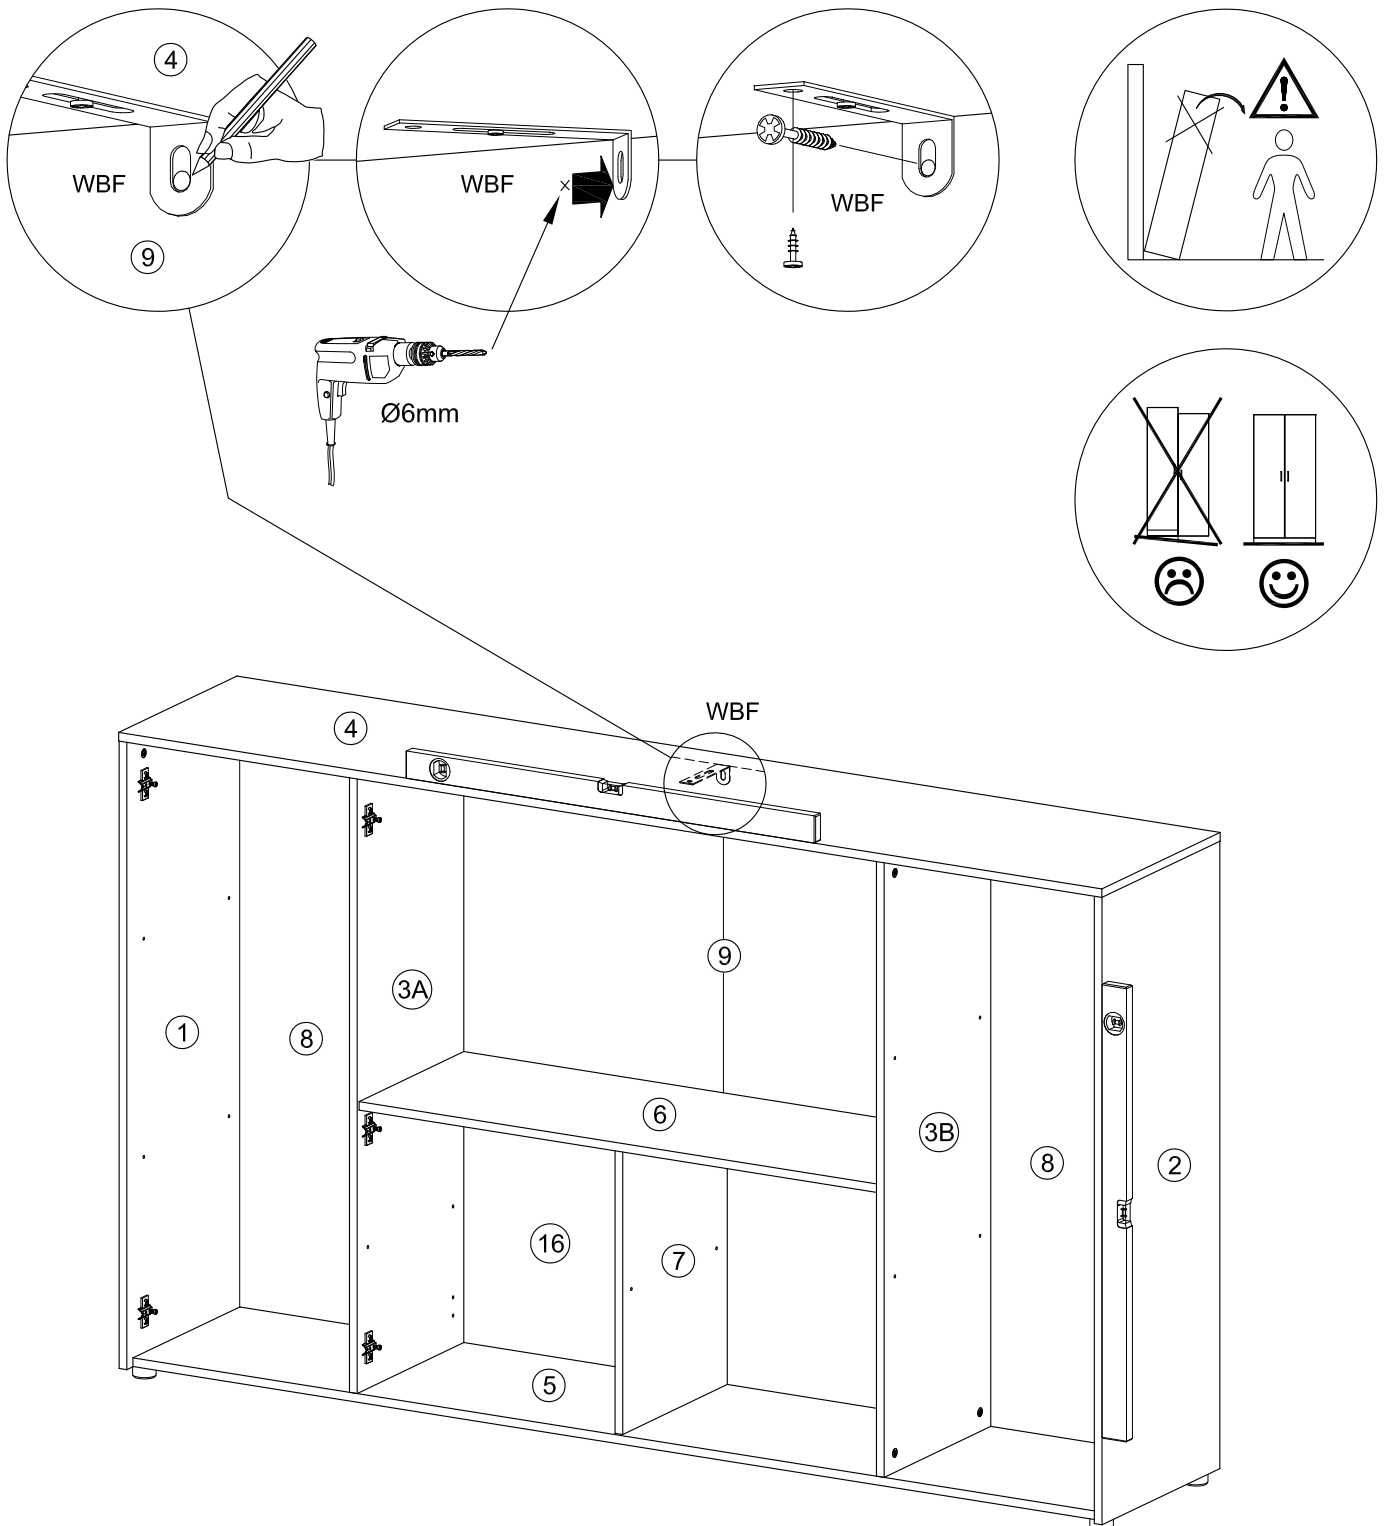

O

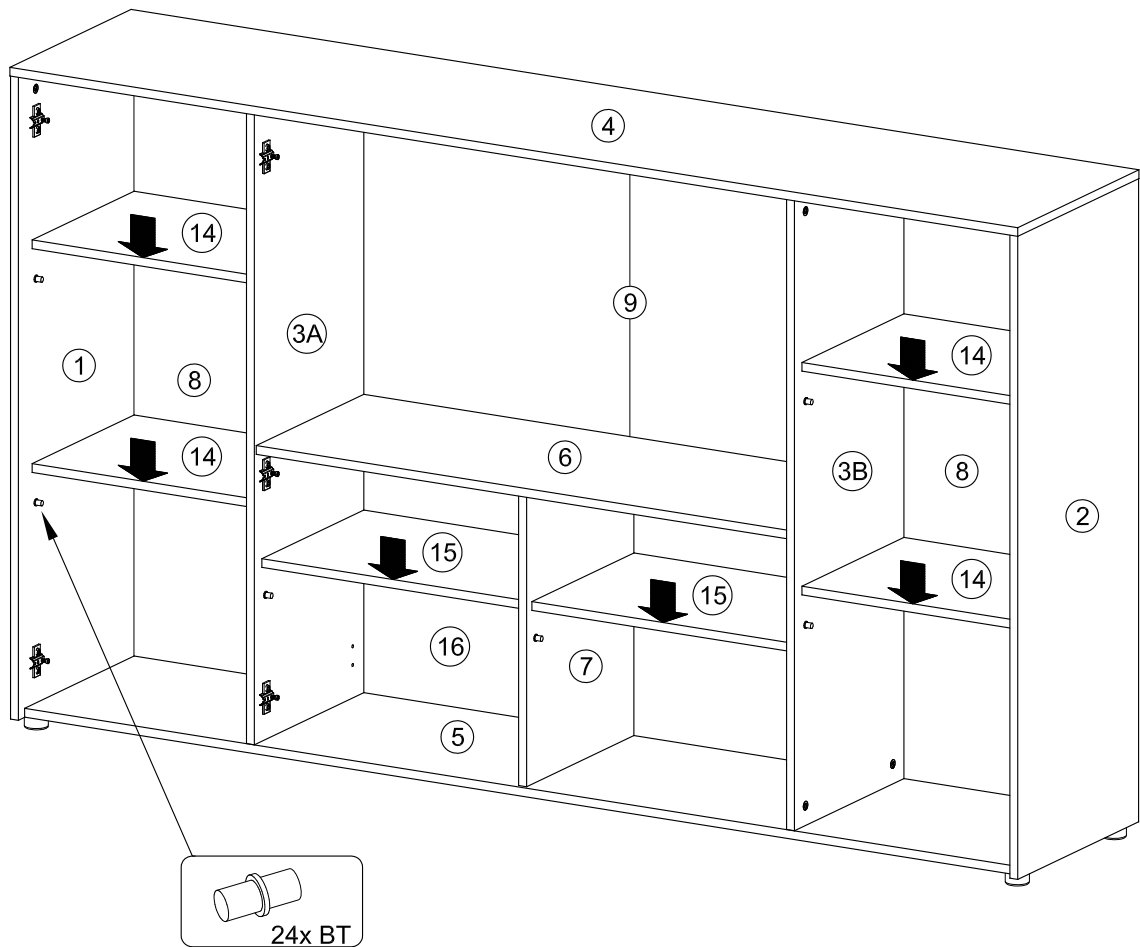

P

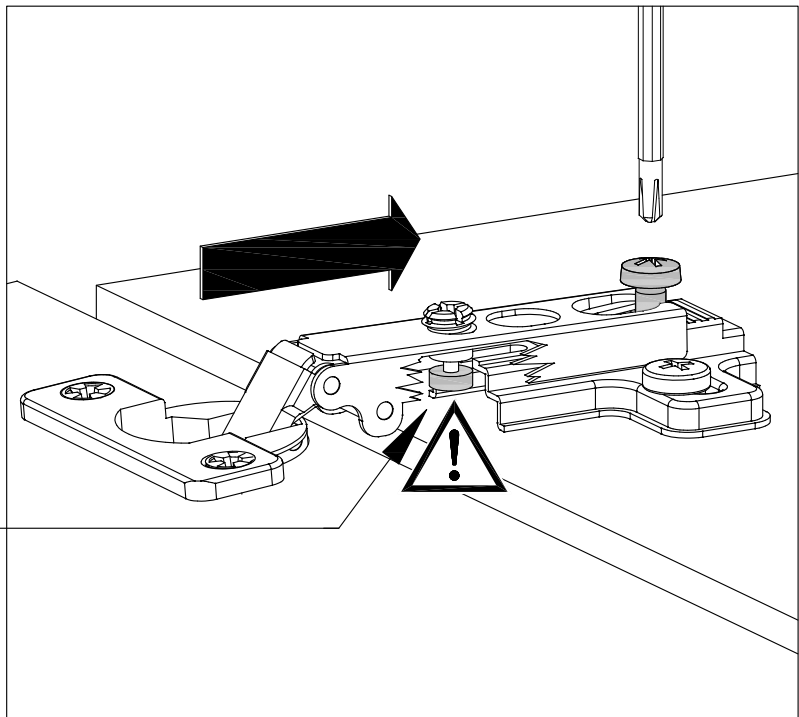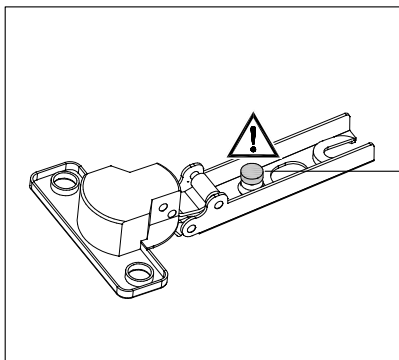


Q


4x GLT-128

M4x22
8x MS22


20x ADK-EX

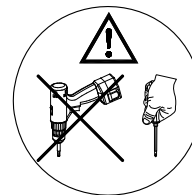




10x

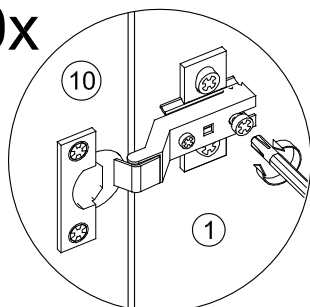


20x ADK-EX

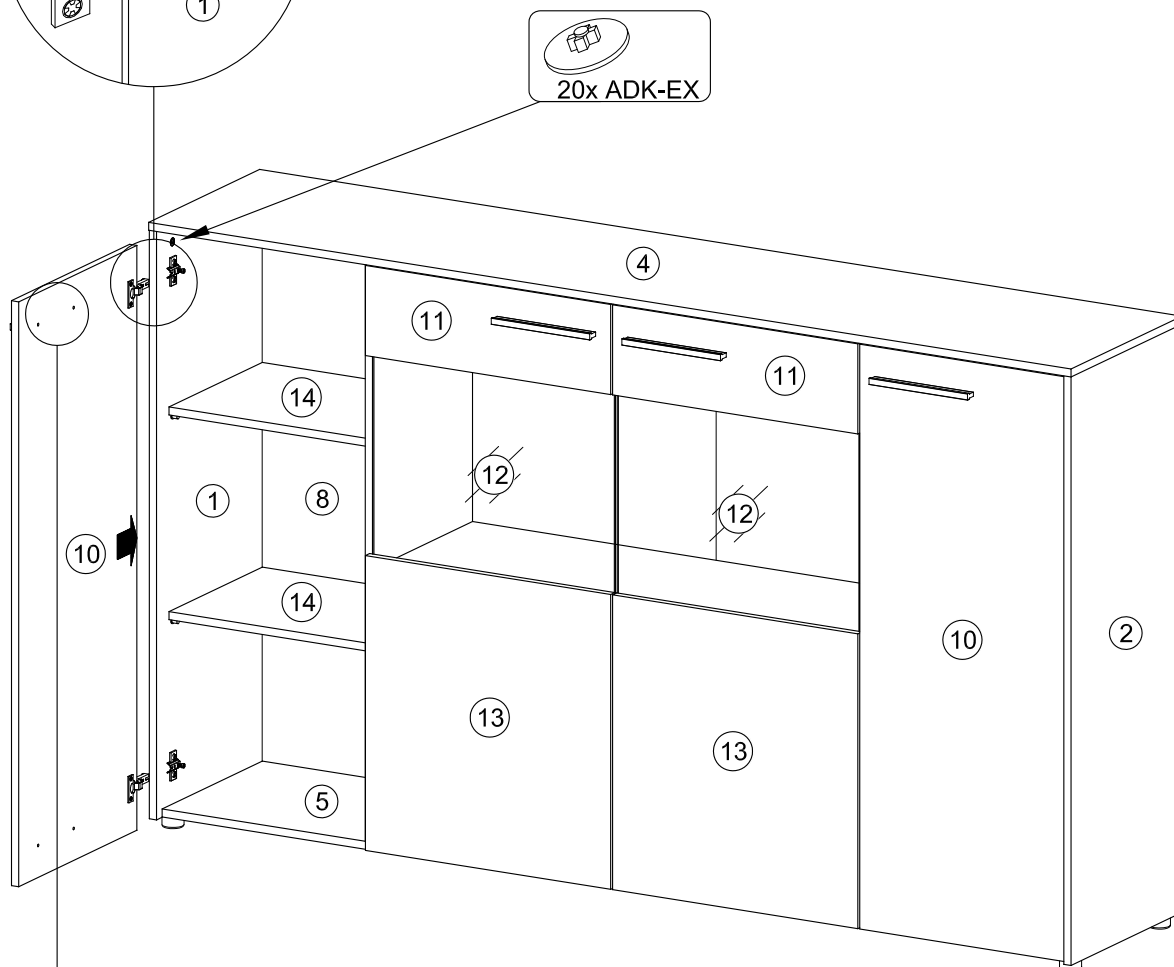




1 4x

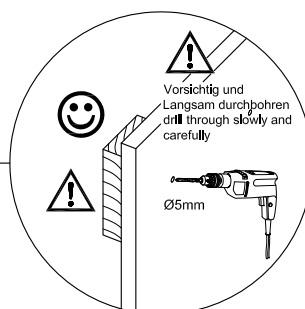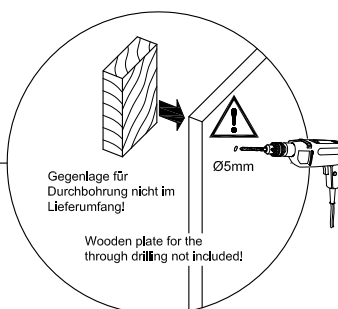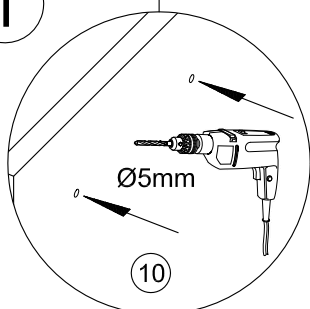

2

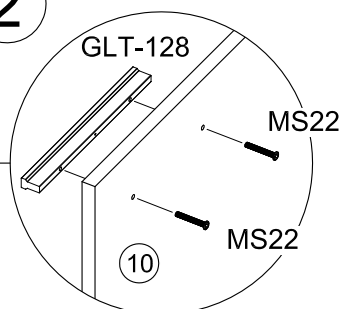

R

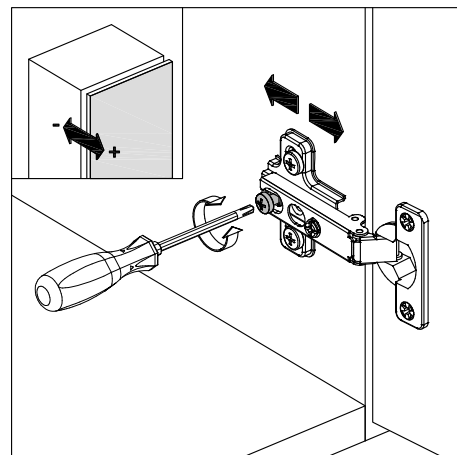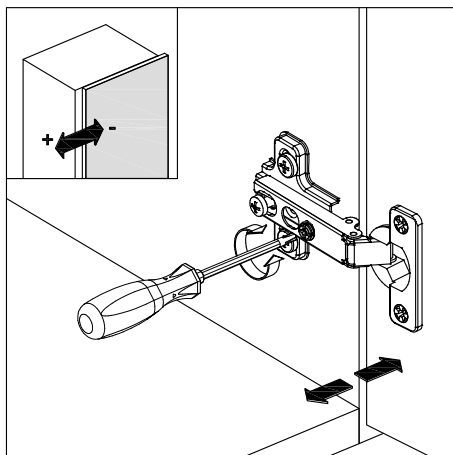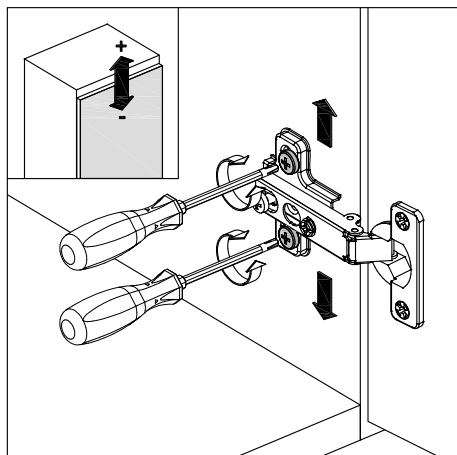

DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

EN - Caution

Follow carefully the assembling instructions described in the directions.

FR - Sécurité

Respecter les instructions de montage décrites dans la notice.

I - Norme di sicurezza

Si prega di assicurarsi di seguire le istruzioni di montaggio.

NL - Veiligheid

De in de Gebruiksaanwijzing beschreven Instructies respecteren.

