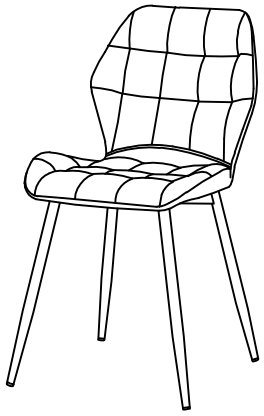

①x1	②x1	③x1
		

Ax4	Bx5	Cx1	Dx1
M6X45		M6X30	

1

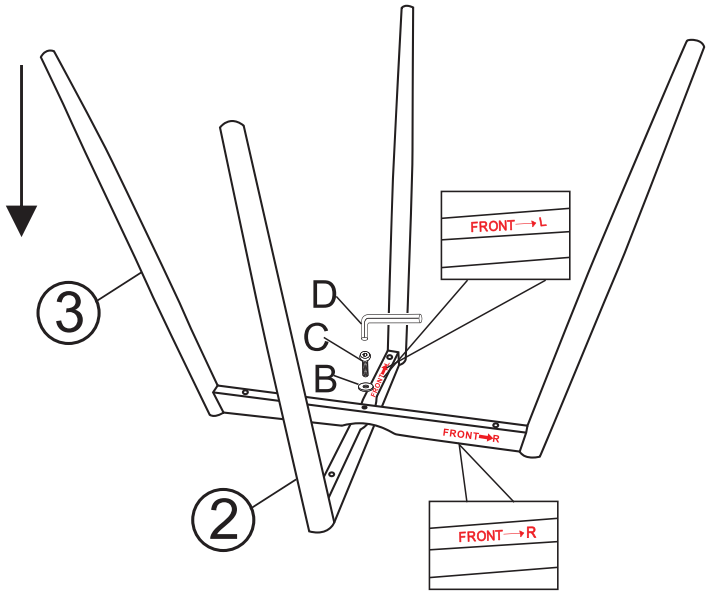

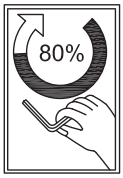

2

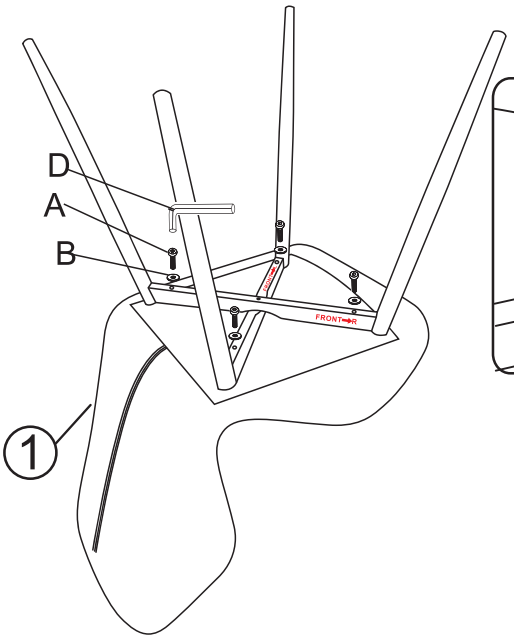

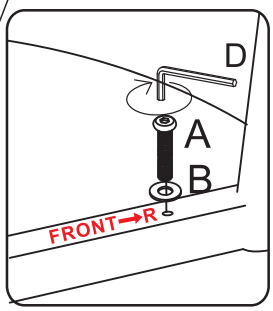

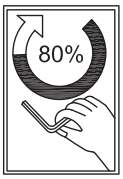

3 Put the chair onto flat place , fully tight all the screws after well adjusted flatness of the chair.