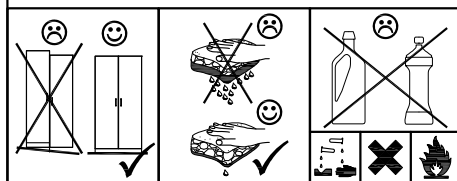
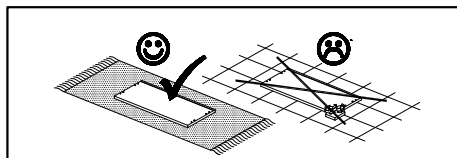


Montageanleitung

Diana Kosmetiktisch



DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

EN - Caution

Follow carefully the assembling instructions described in the directions.

FR - Sécurité

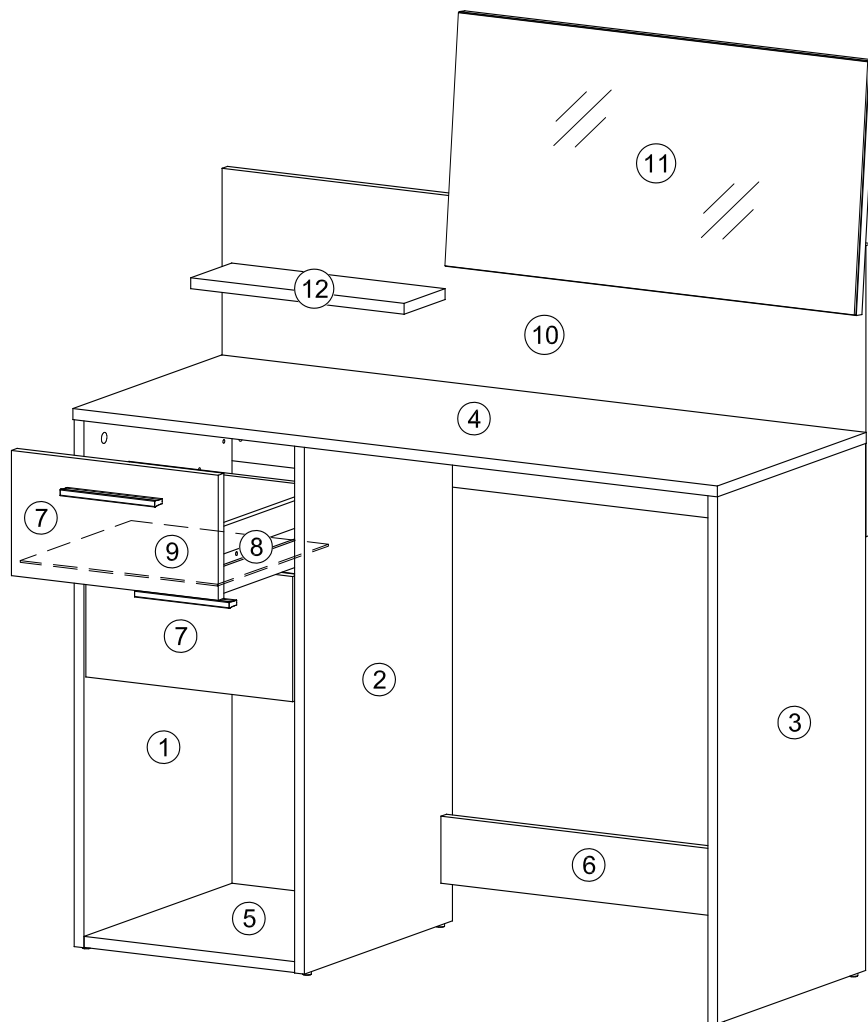
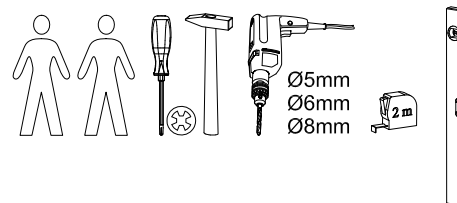
Respecter les instructions de montage décrites dans la notice.













I - Norme di sicurezza

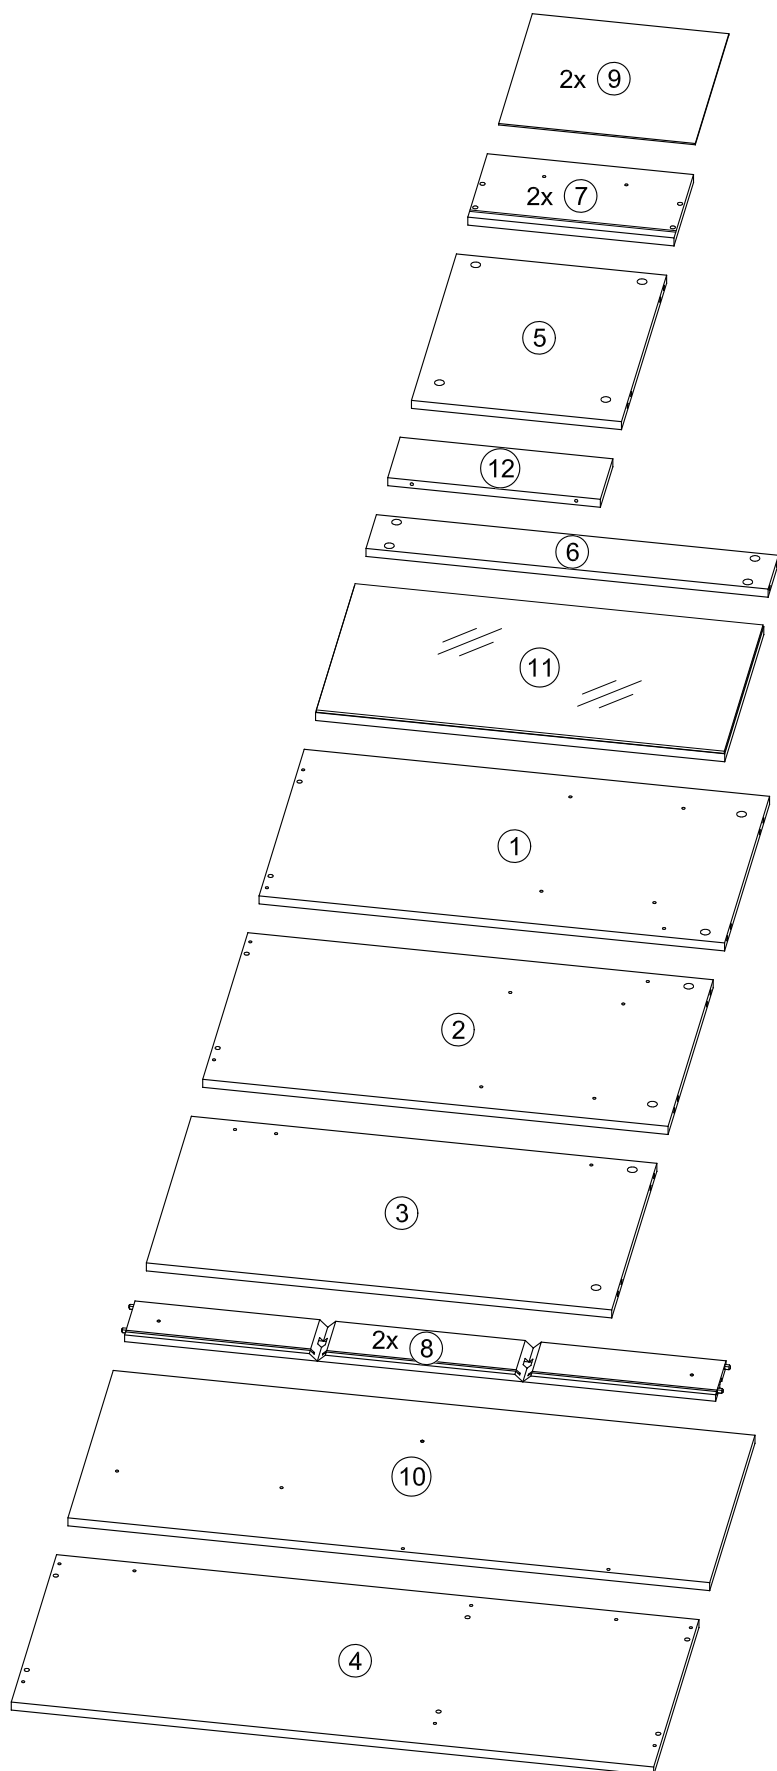
Si prega di assicurarsi di seguire le istruzioni di montaggio.

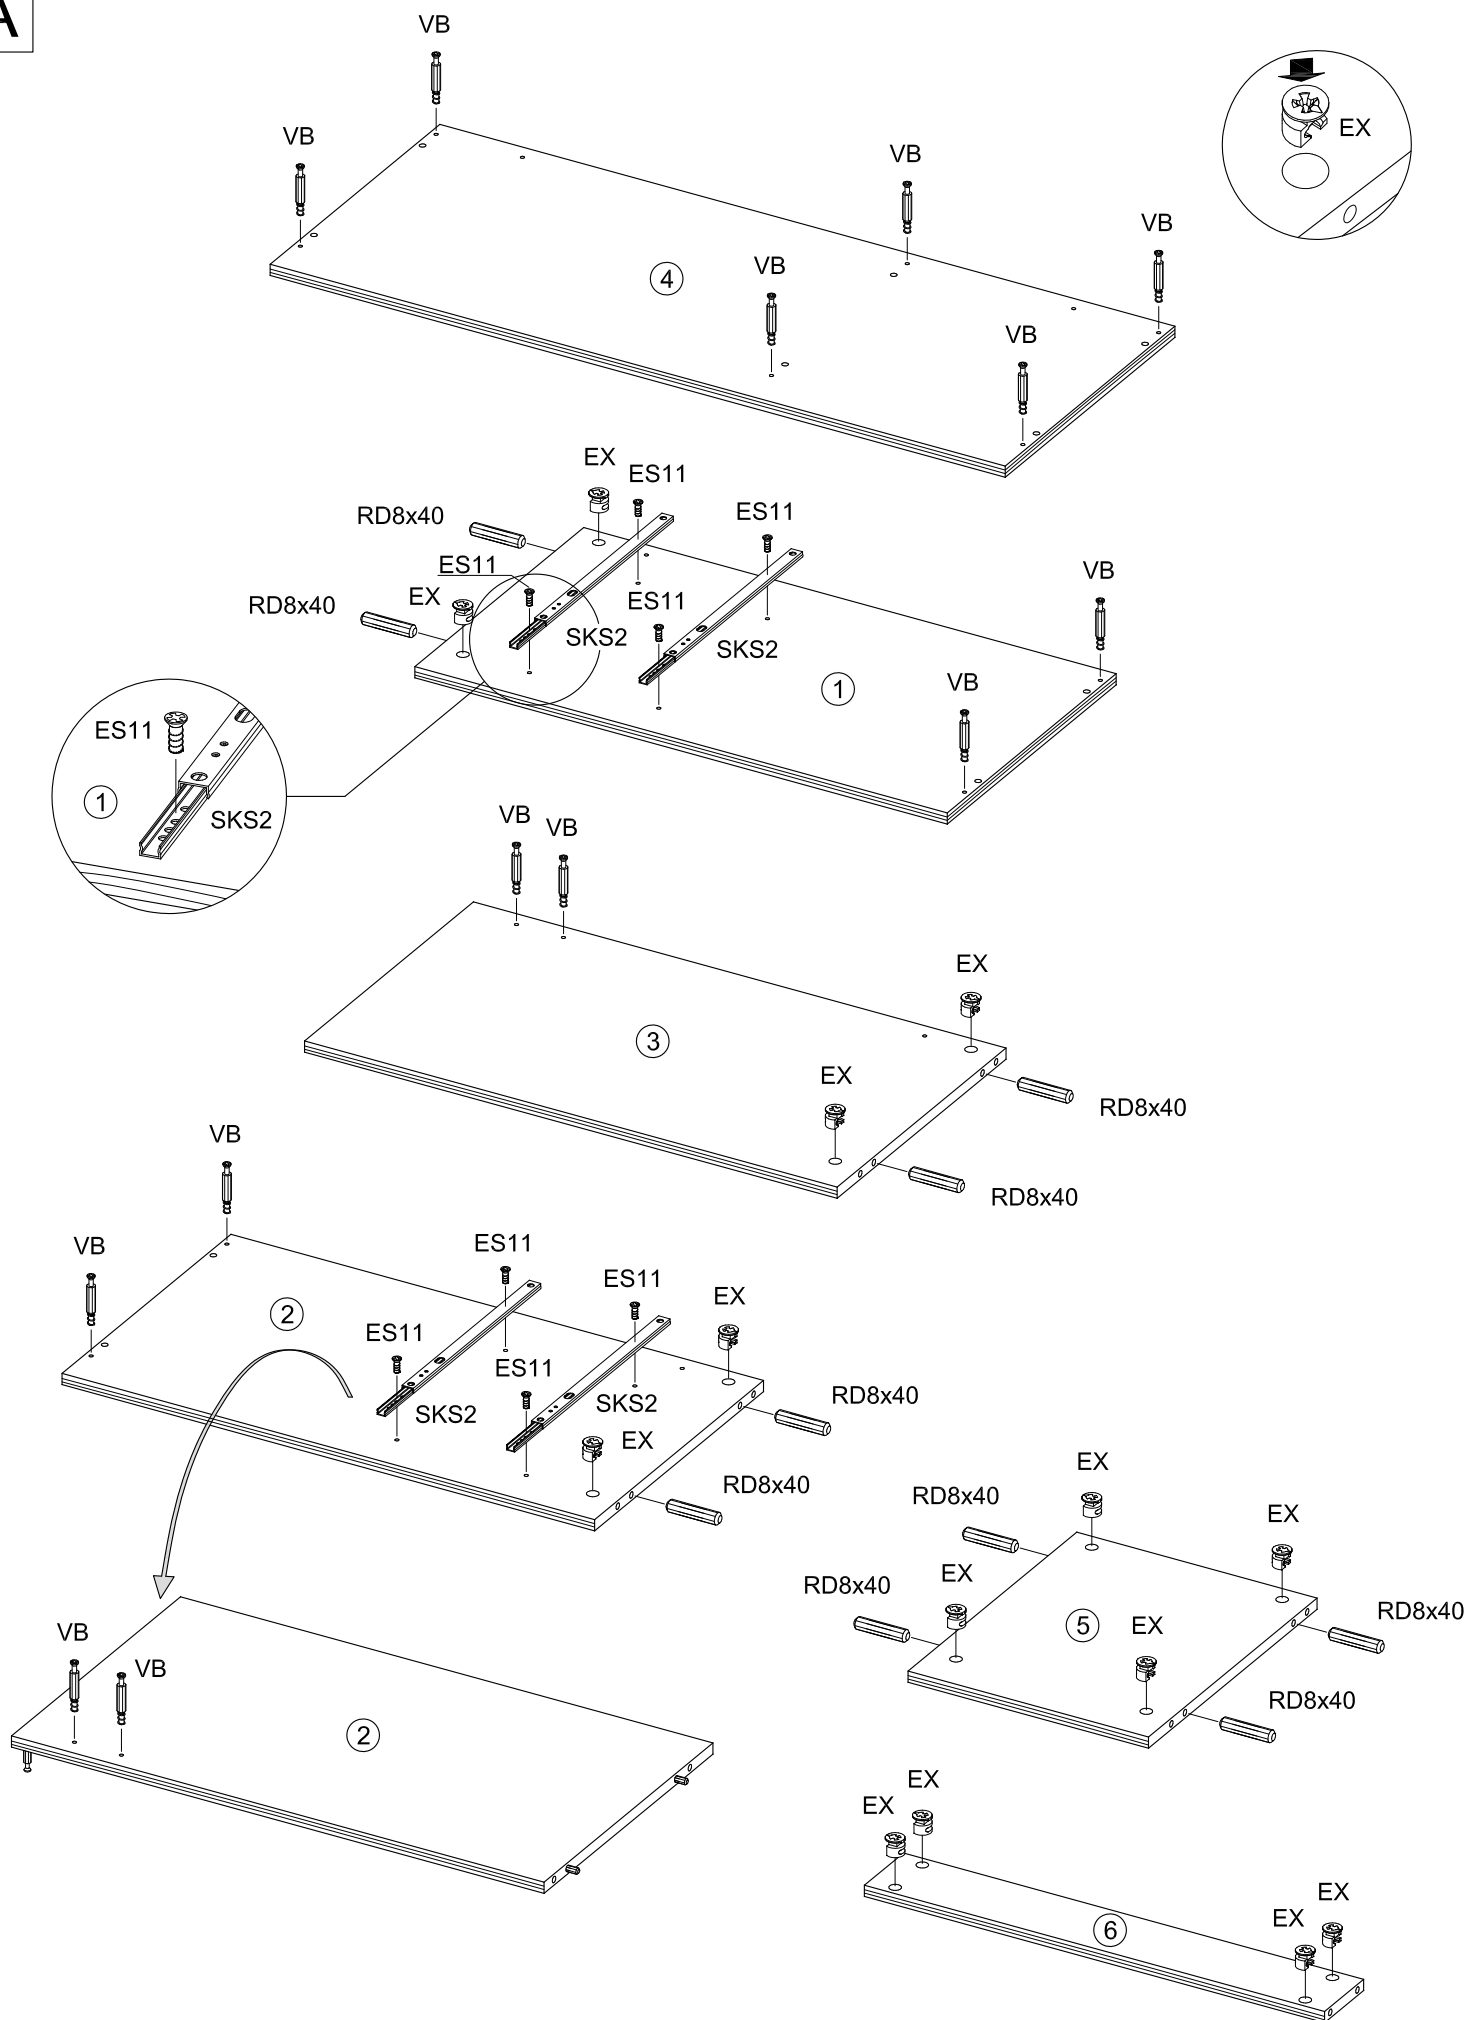
NL - Veiligheid

De In de Gebruiksaanwijzing beschreven instructies respecteren.









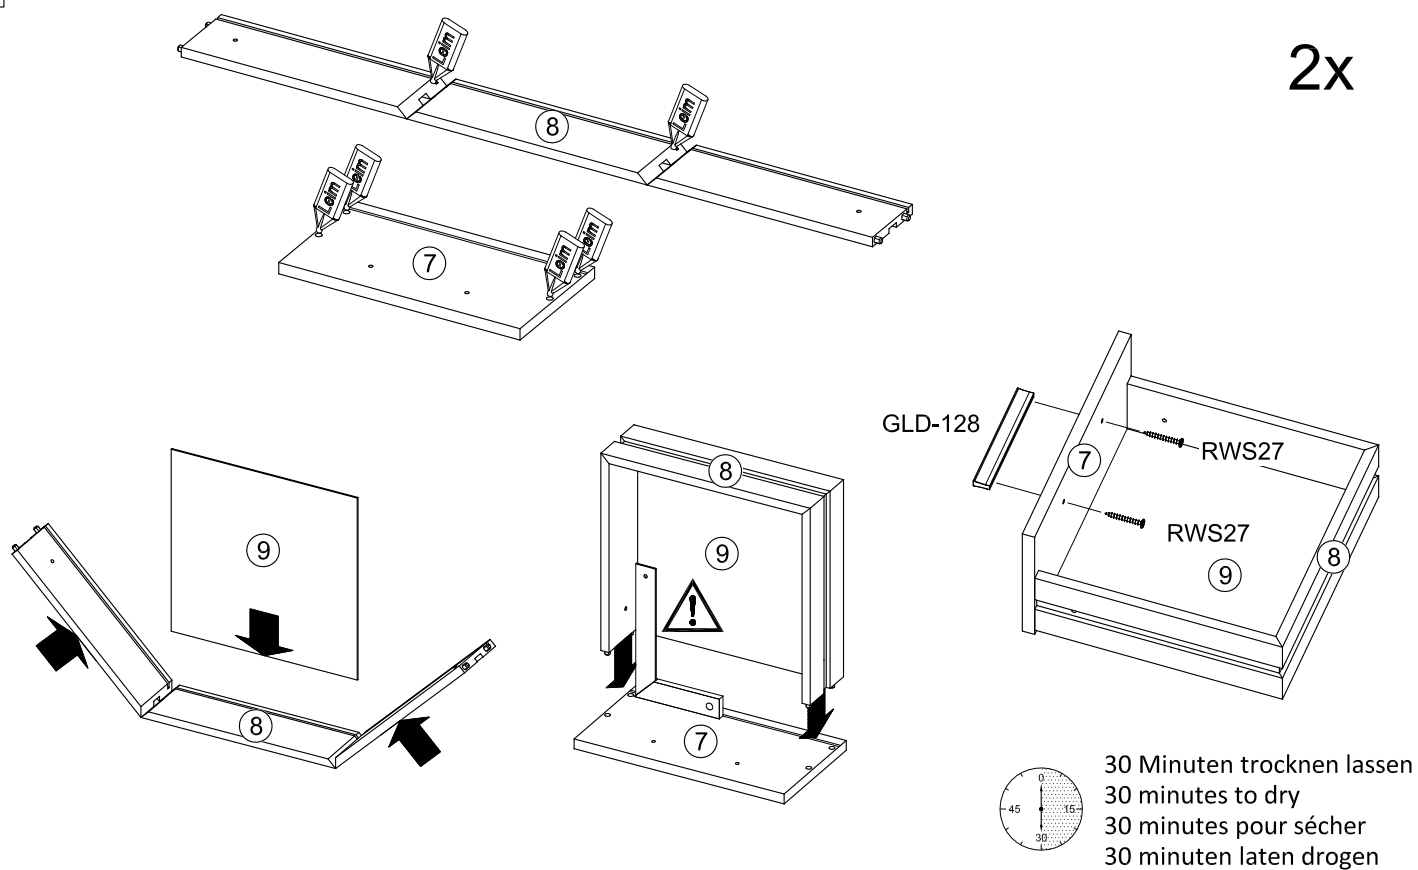
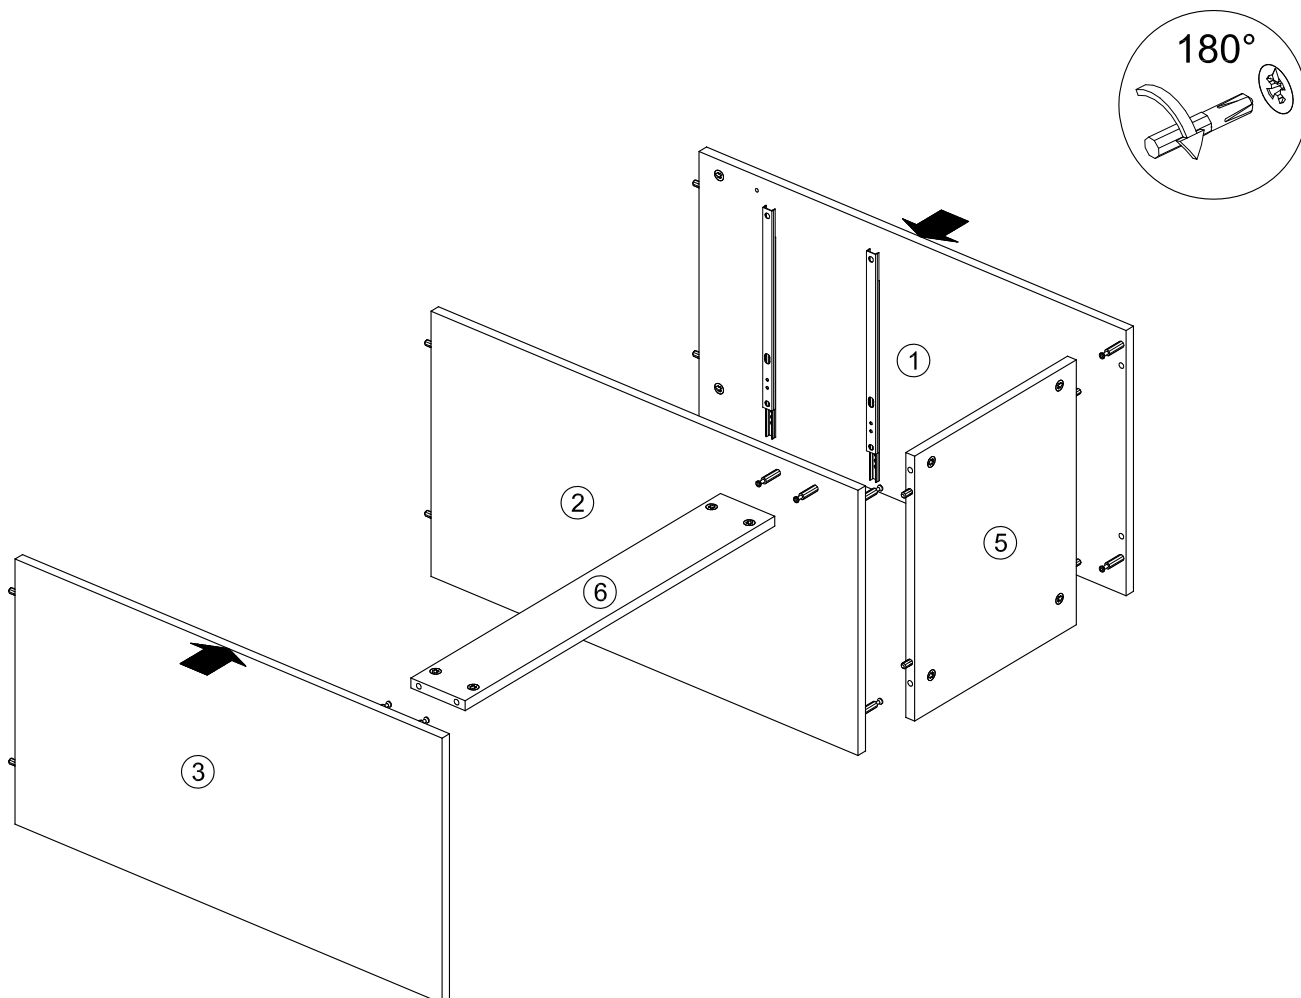
B**C**



Diagram illustrating the assembly of the backrest (10) to the seat frame (12). The backrest is attached using VBS screws and ES13-PH/KW brackets. A circular inset shows a 5x magnified view of the bracket installation.

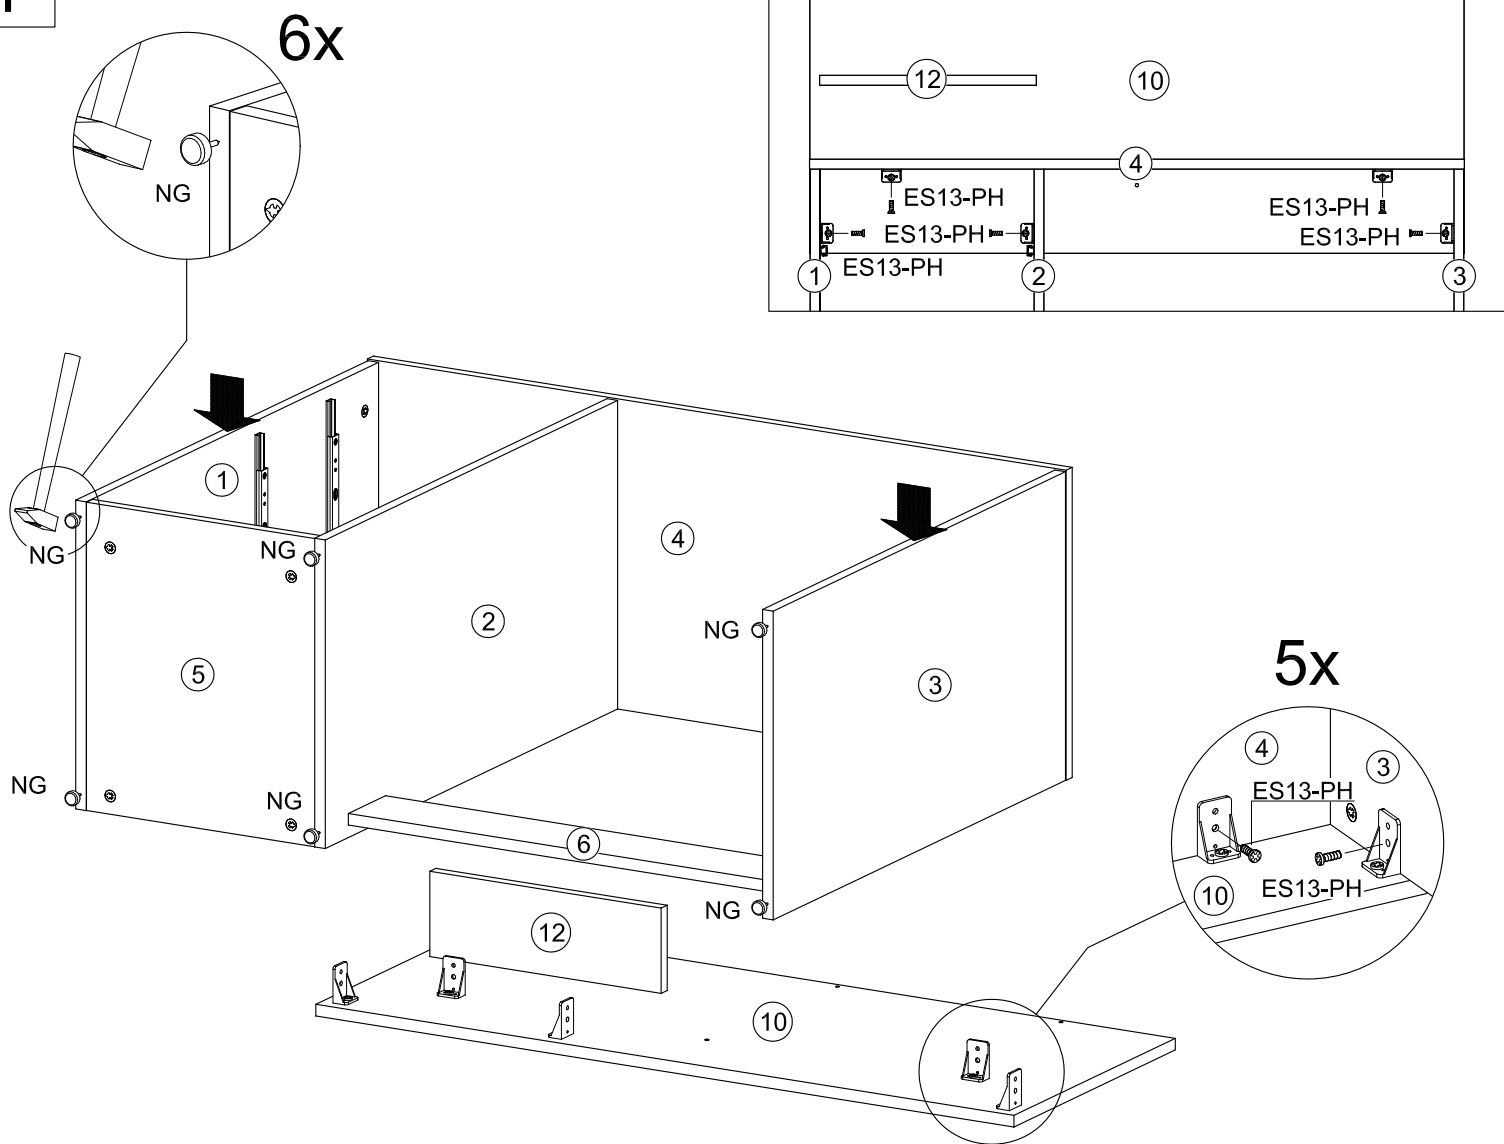F




G

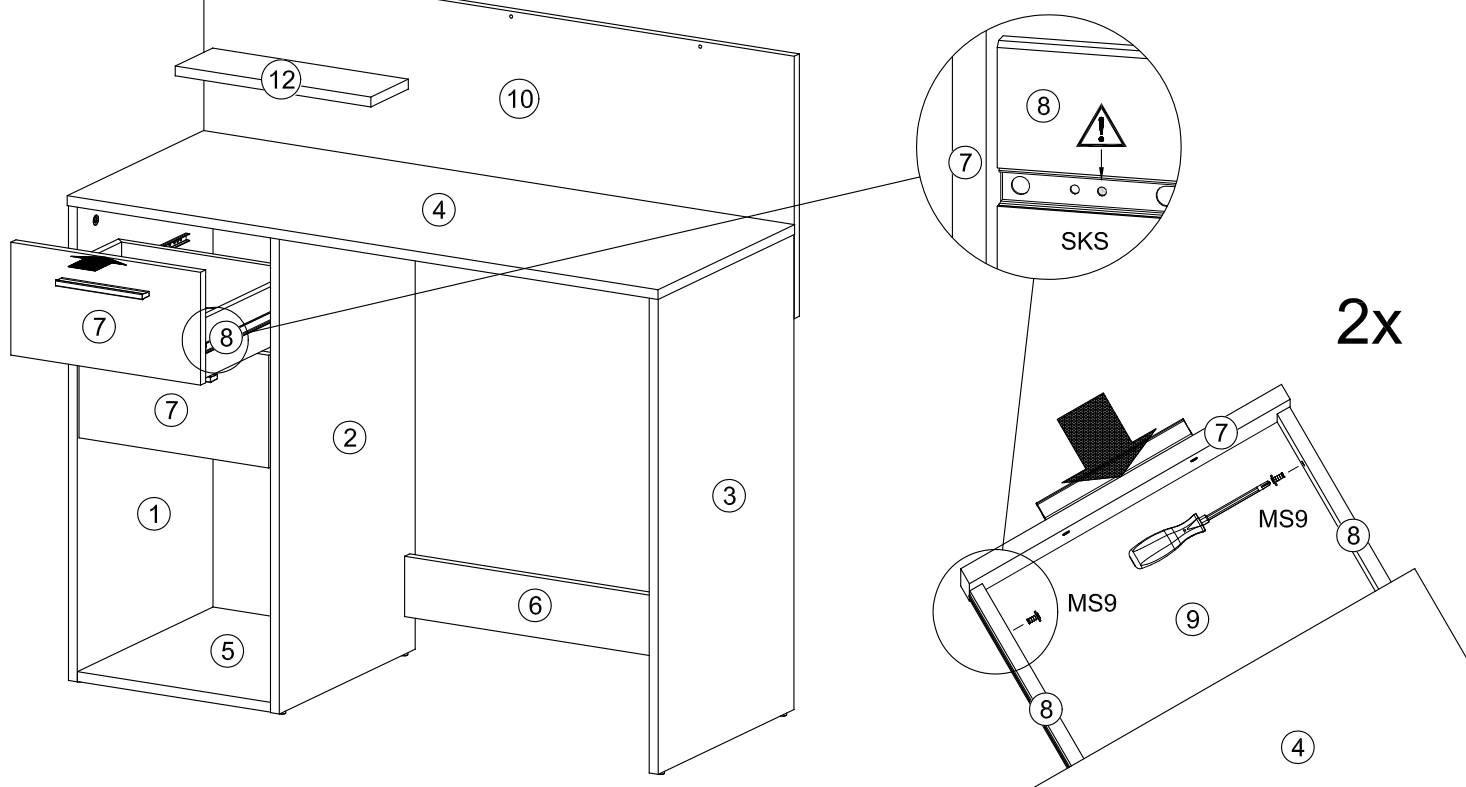

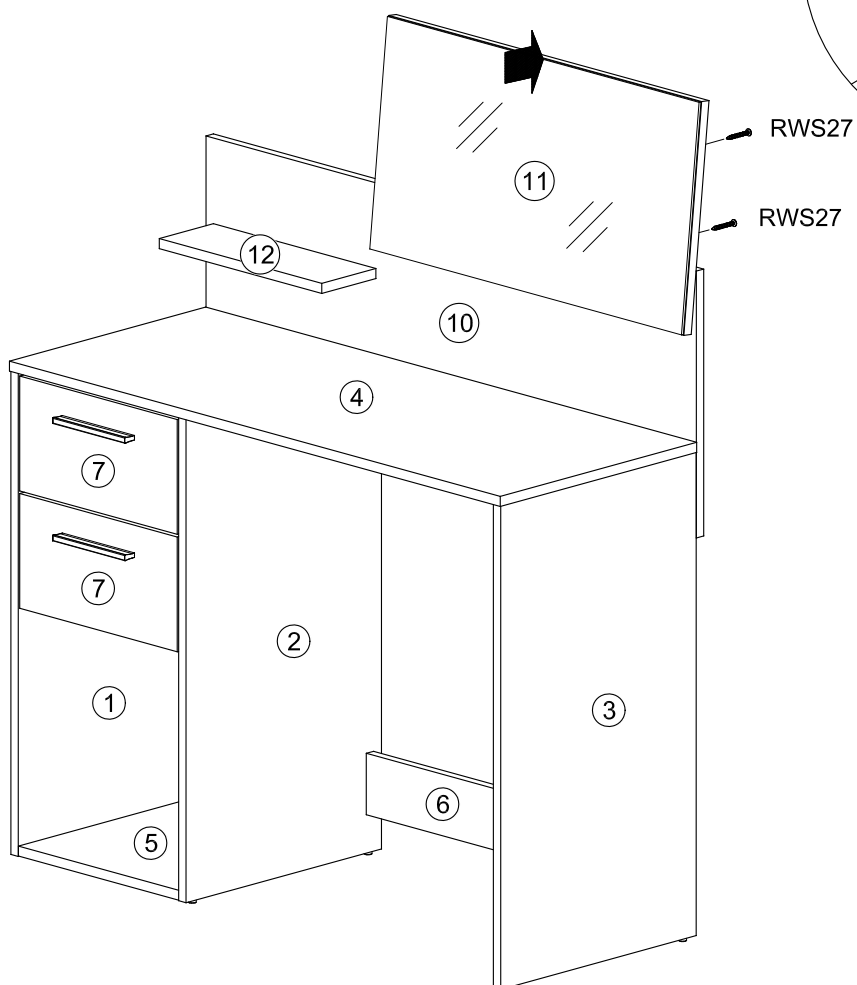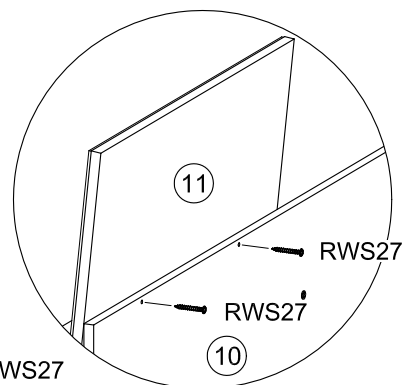

I

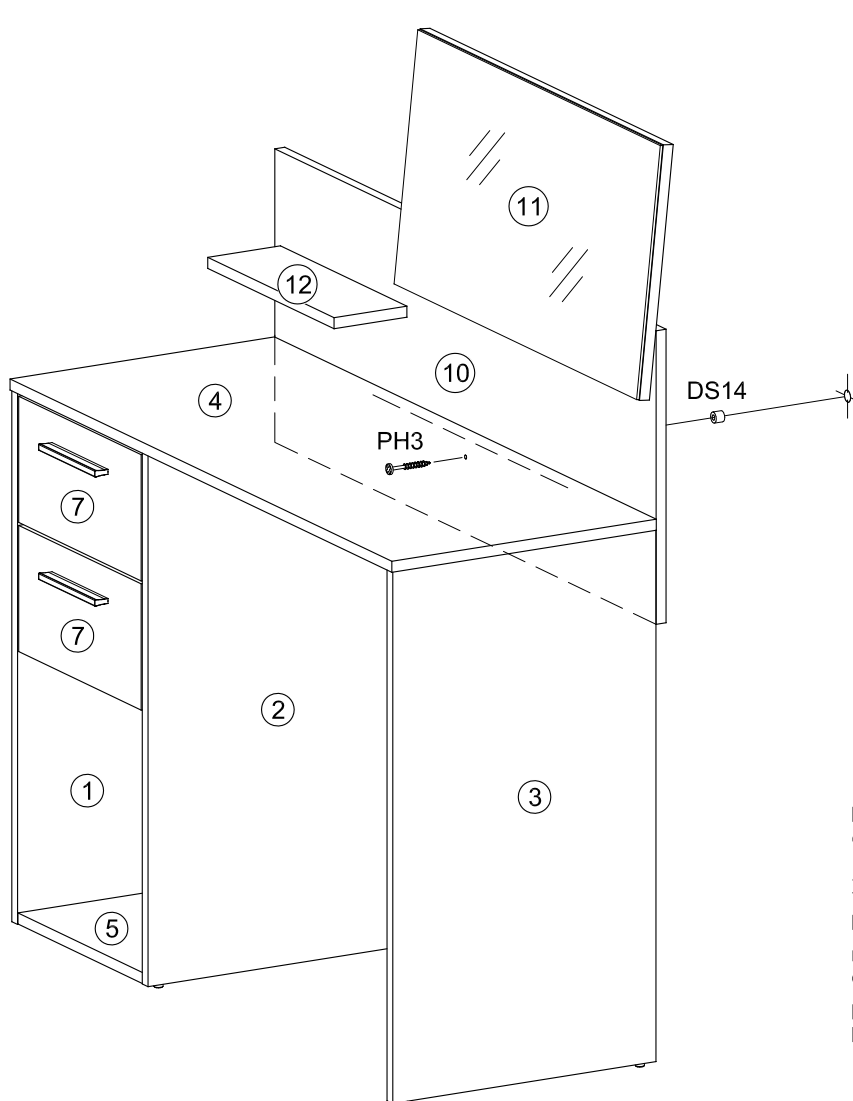


Befestigungsmaterial für die Kippsicherung ist der Wandeigenschaft anzupassen!

Attached wall-fastening-material is for massive walls only. For mounting on all other walls please use special dowels.

matériel de fixation pour le verrou d'inclinaison être adaptés à le matériau du mur

Beugel zowel aan de kast als aan de muur bevestigen om kiepen te voorkomen!

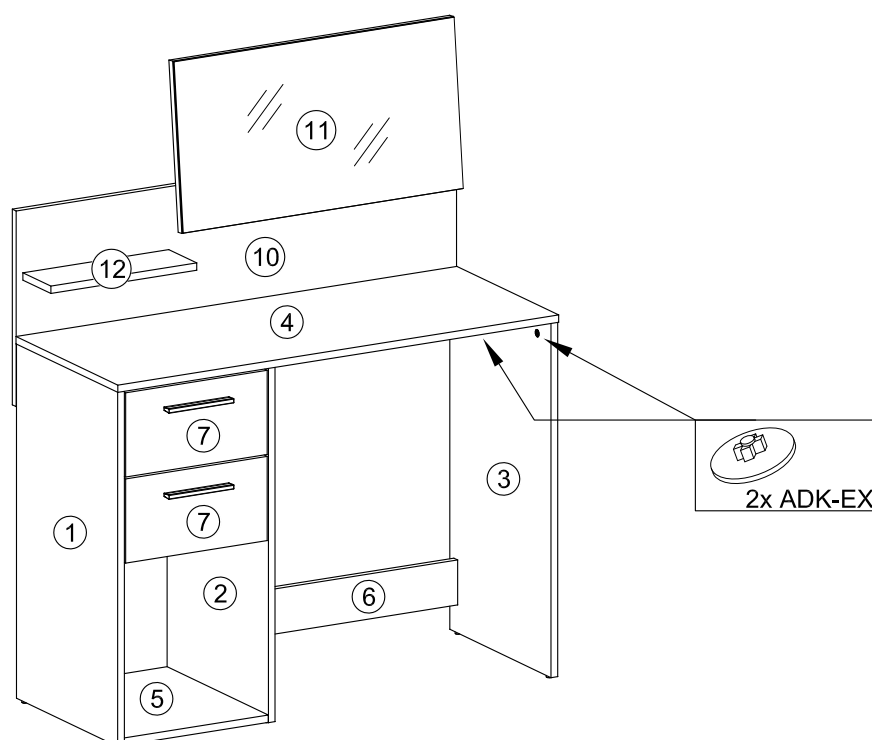J



2x ADK-EX