

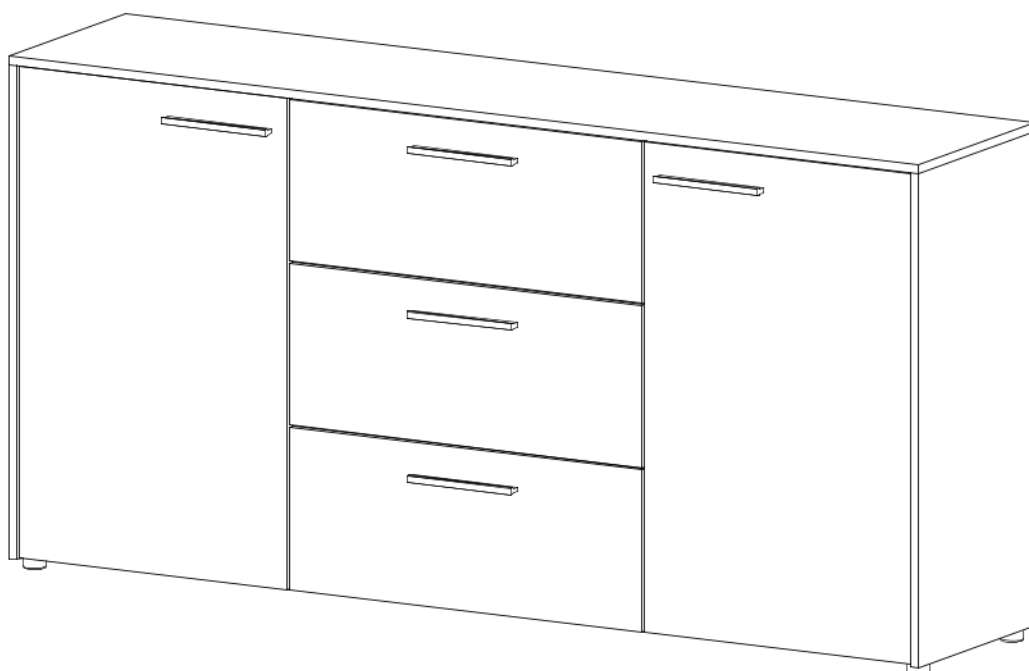



Panama 15, Kommode

2 Türen 3SK

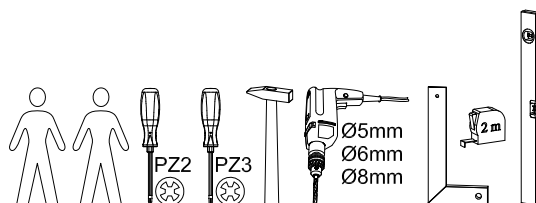


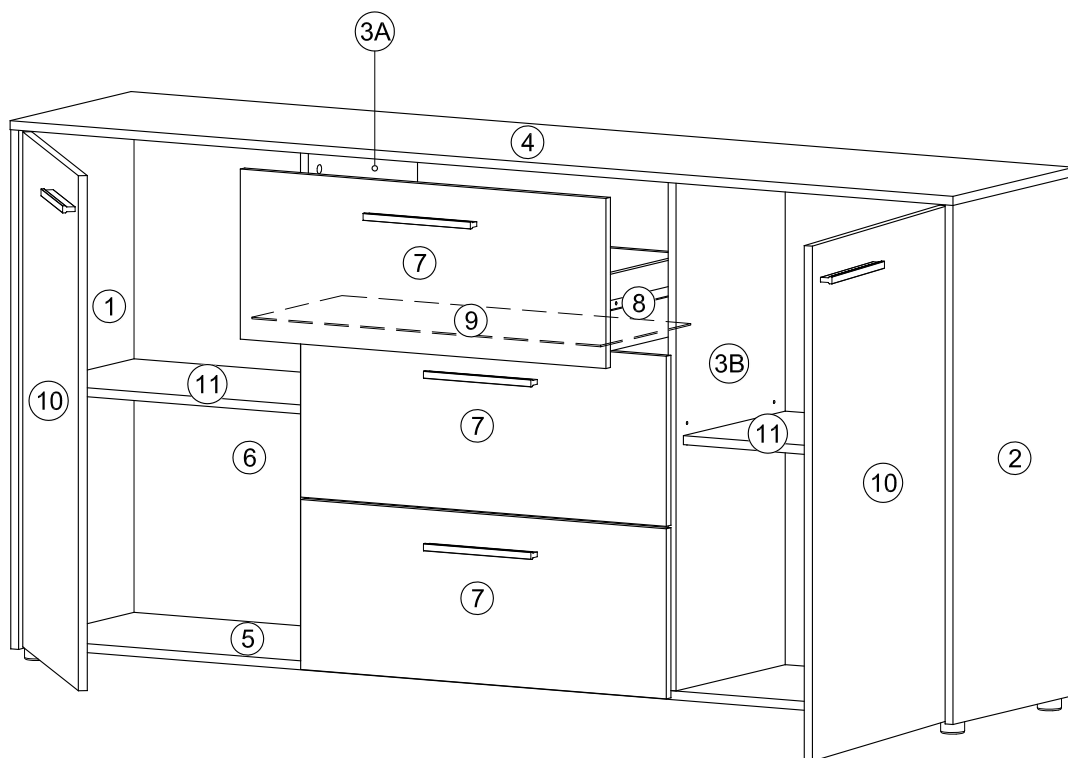


16x EX (Ø15mm)




4x ADK-EX




16x VB




8x RD8x40




4x TB26-16



4x KP0-26



8x SP1 (3,5x13)




12x ES11 (6,3x11)




6x MS9 (M4x9)



3x LM




13x SB




30x NA




6x KG




6x SP5 (4x30)





8x BT



10x MS22 (4x22)









1x WBF

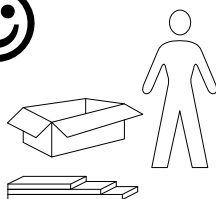









Box 1/2

P-2310

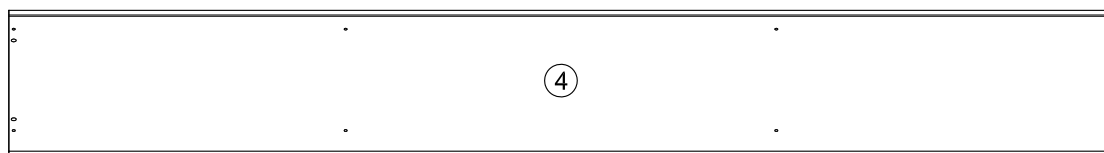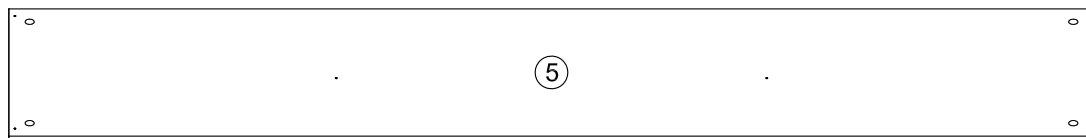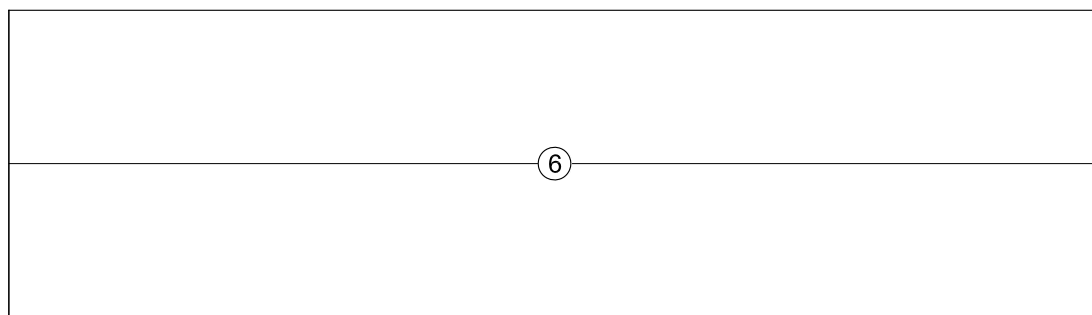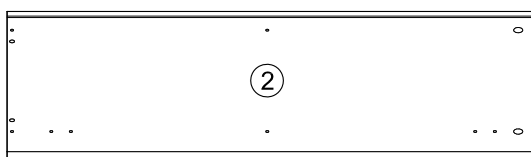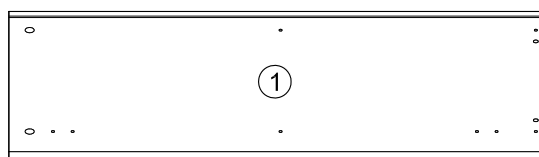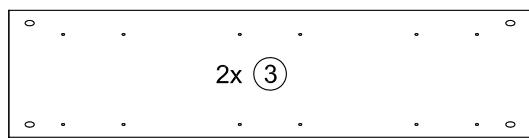


Box 2/2

P-2311

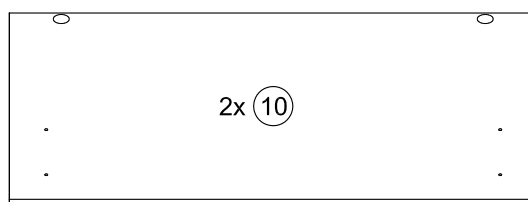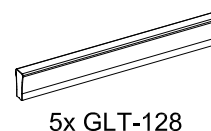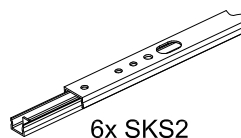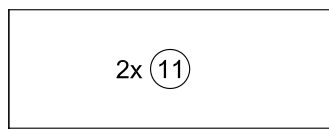

A

8x40




4x RD8x40




Ø15mm


4x EX



12x VB



1x WBF

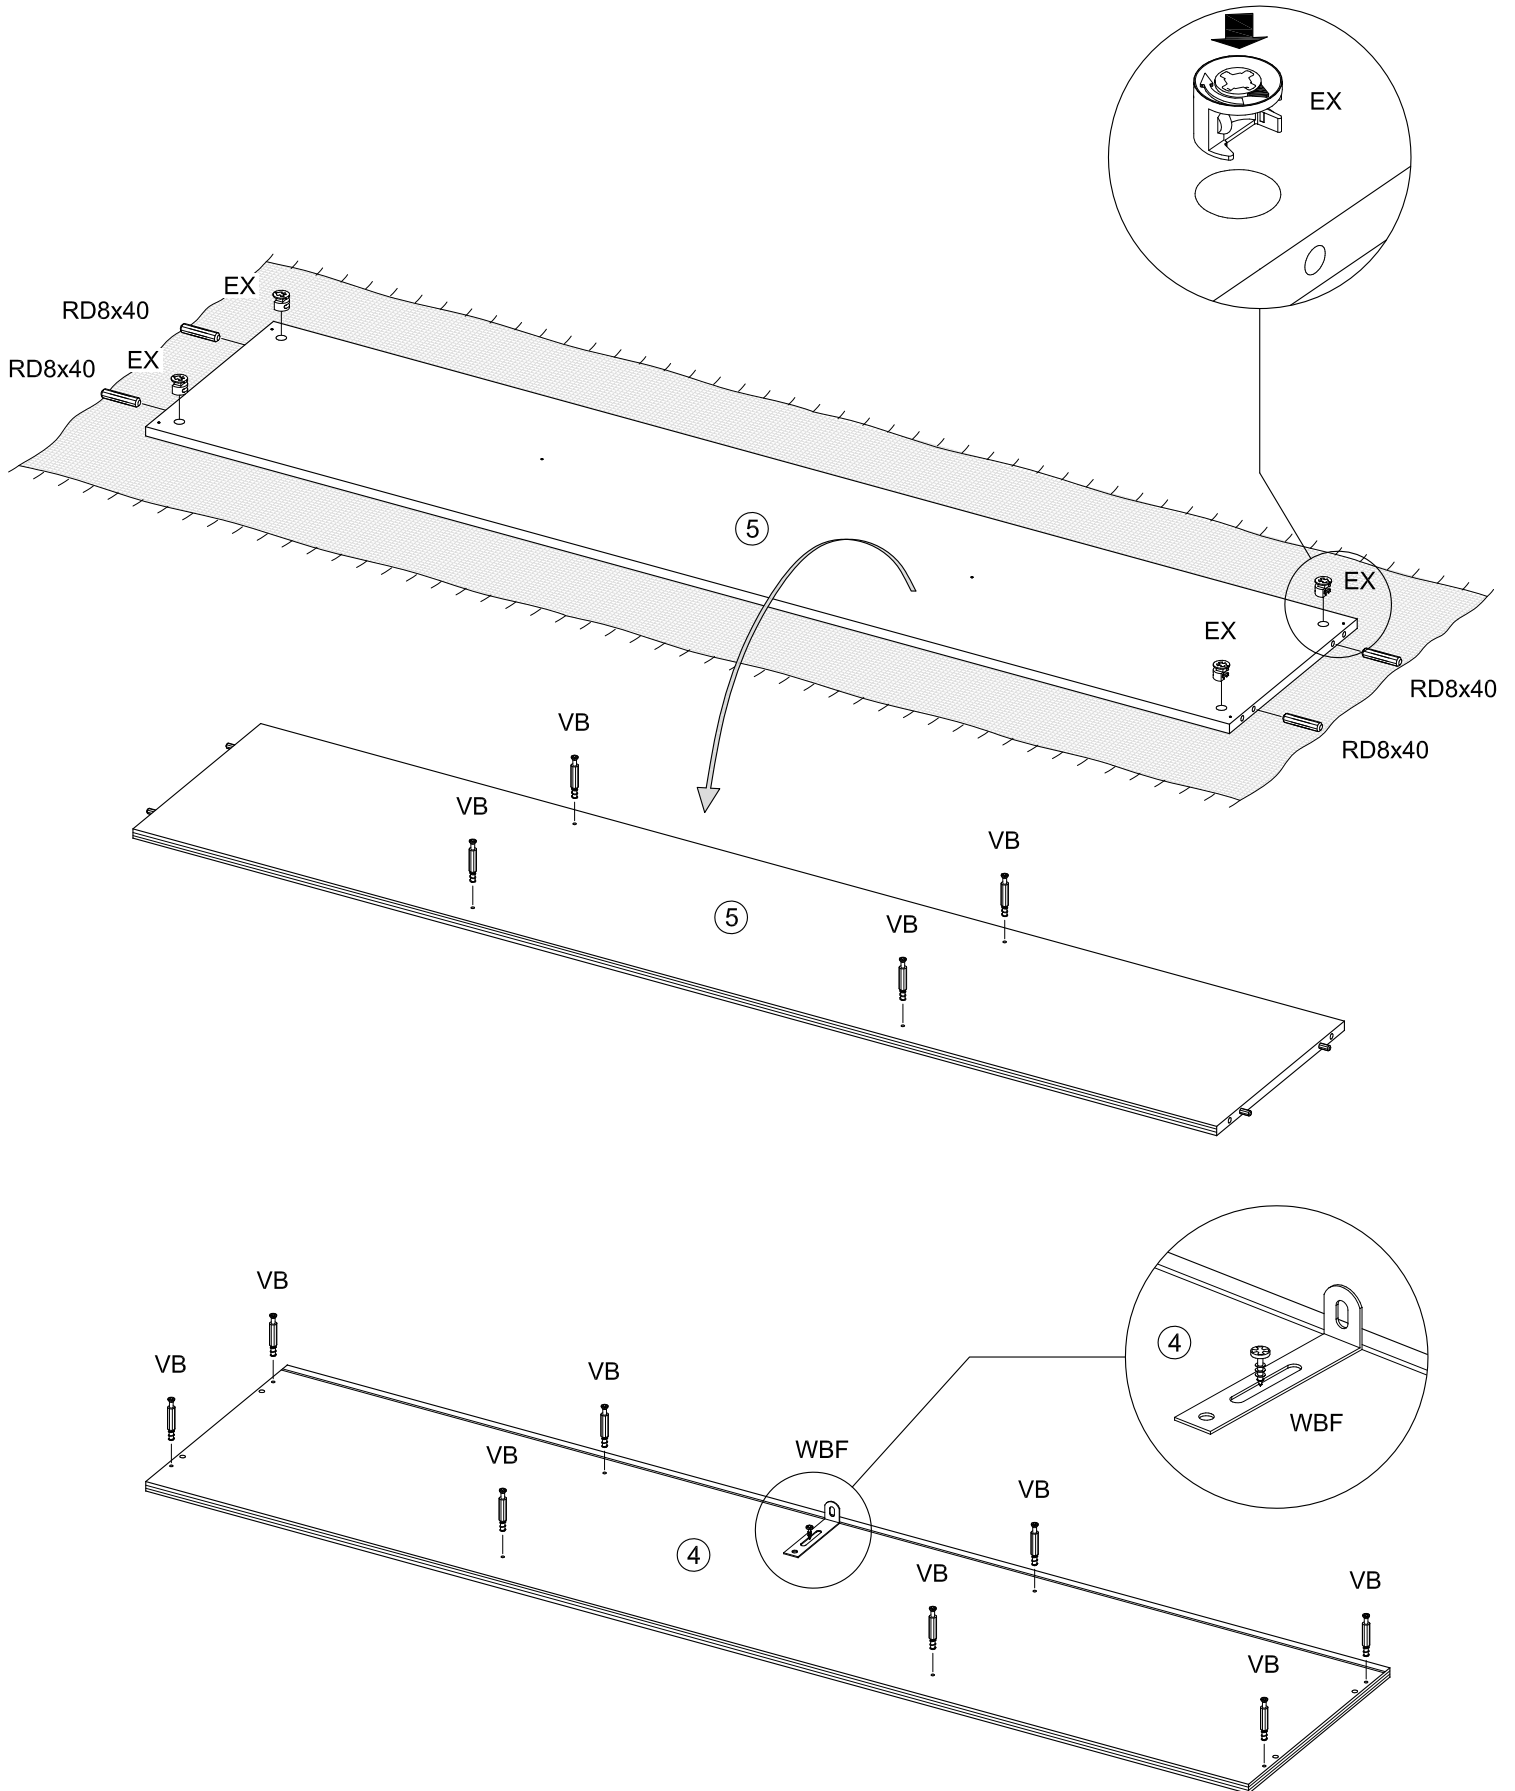


B

8x40
4x RD8x40

Ø15mm
4x EX

4x VB


4x KP0-26

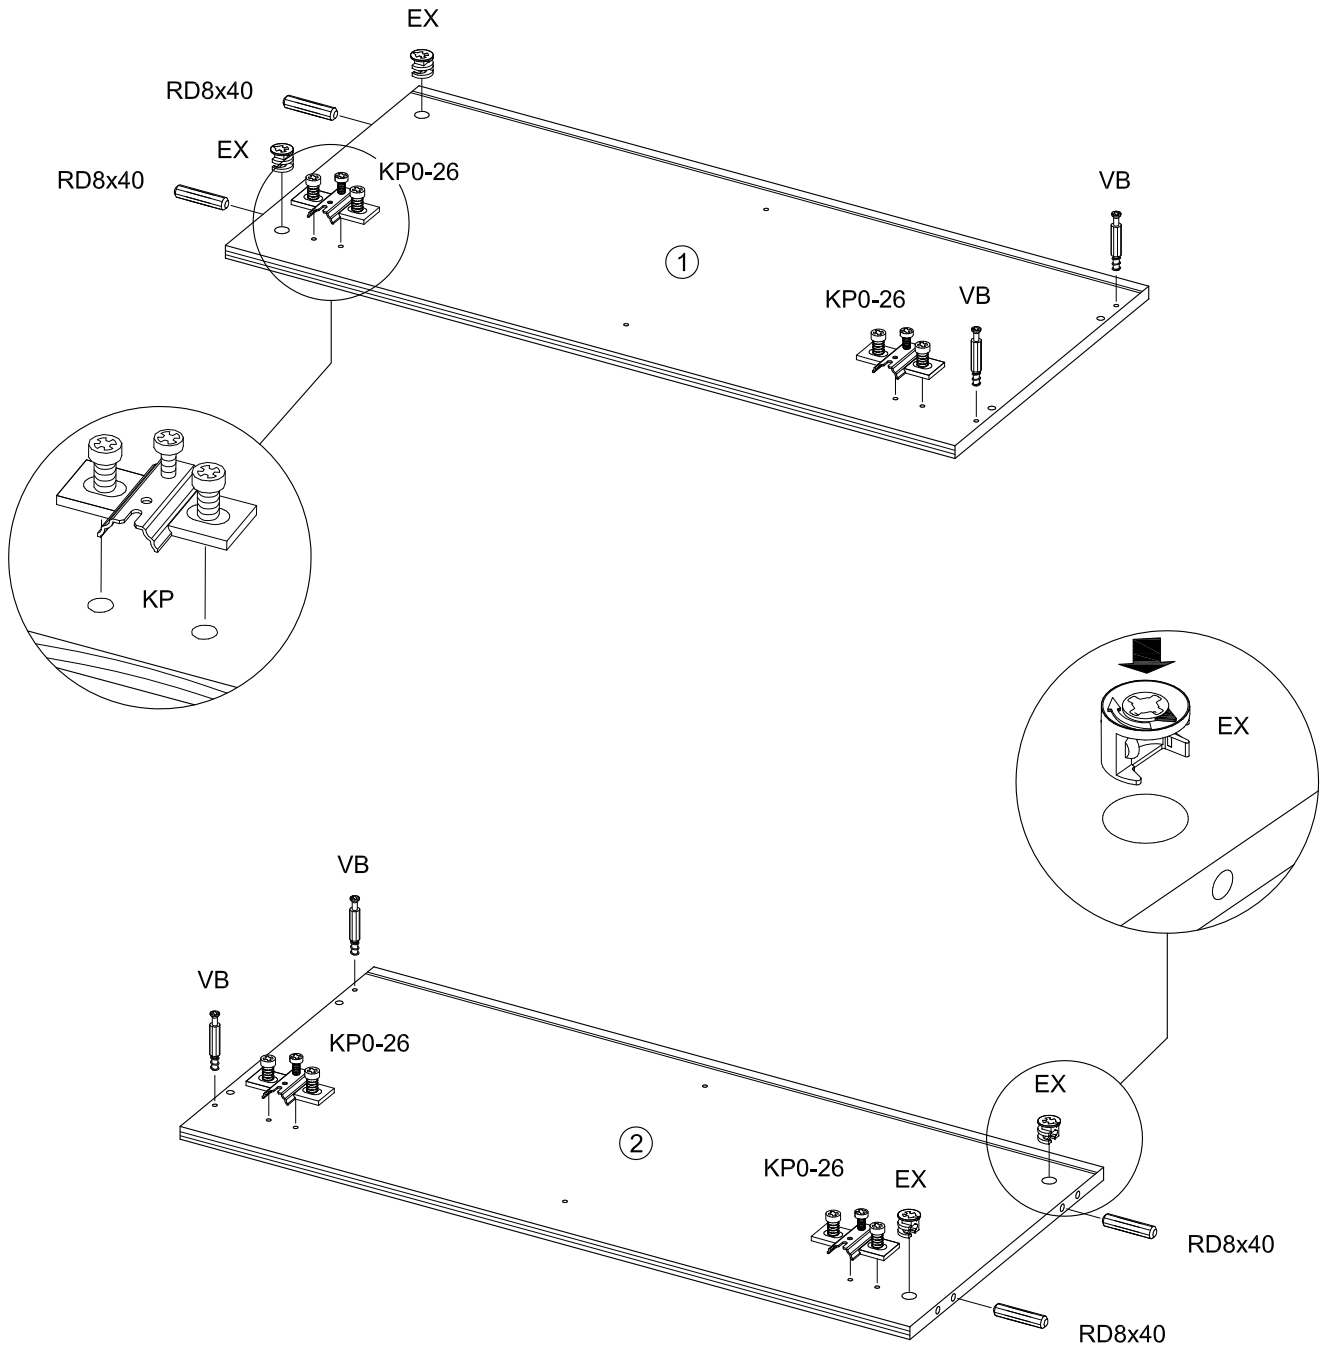


E




3x





1

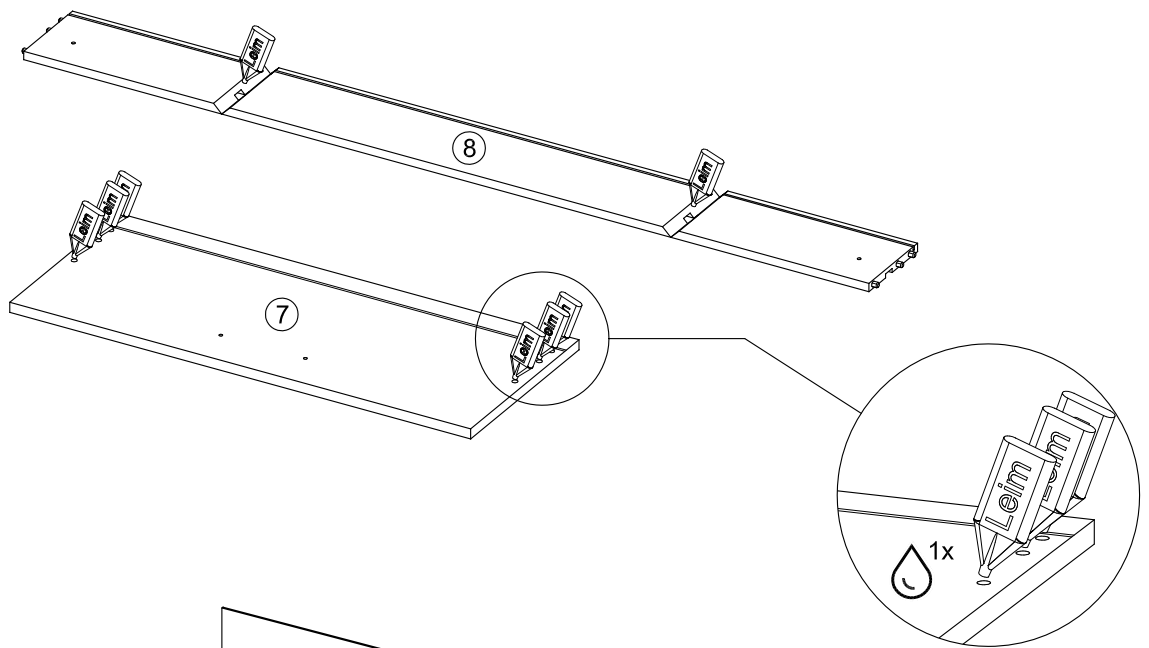

2

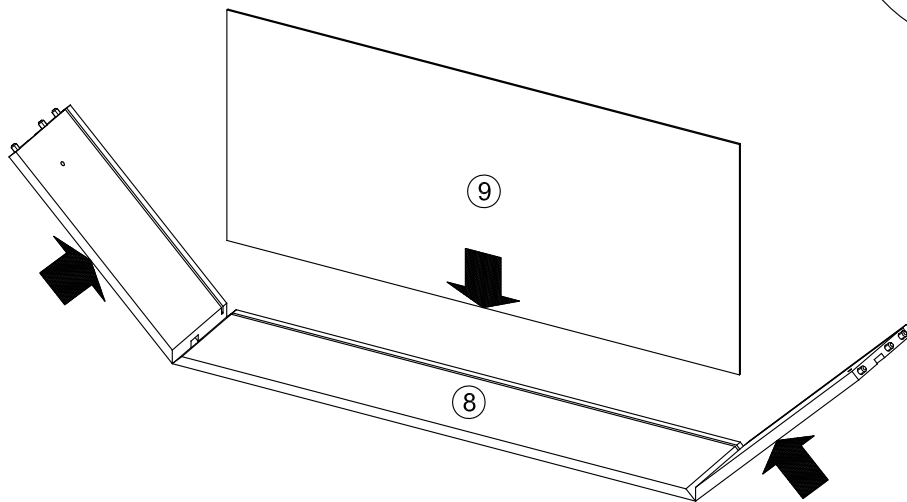


3


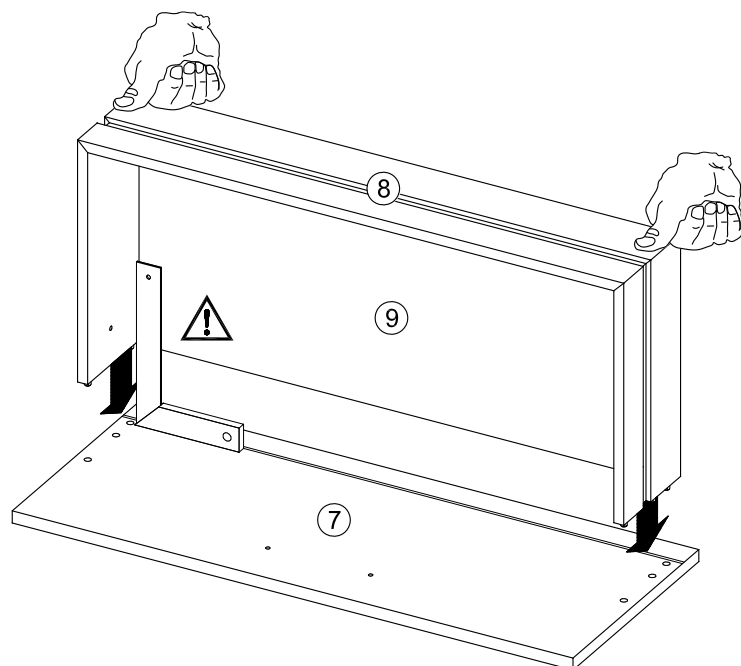




4

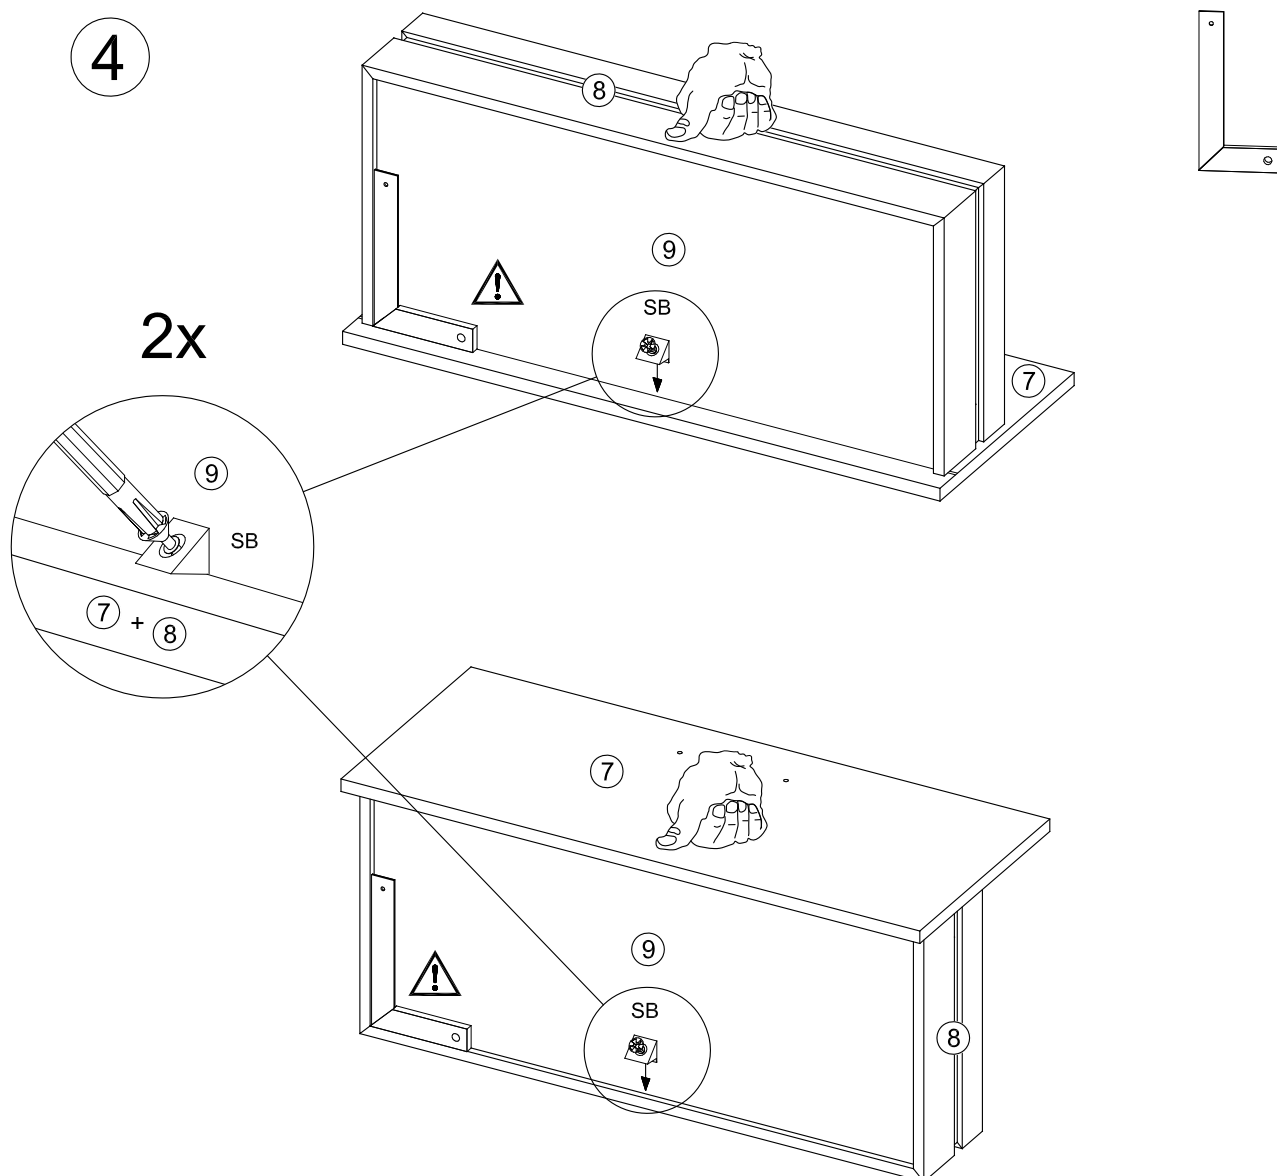


5

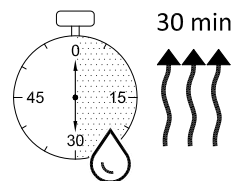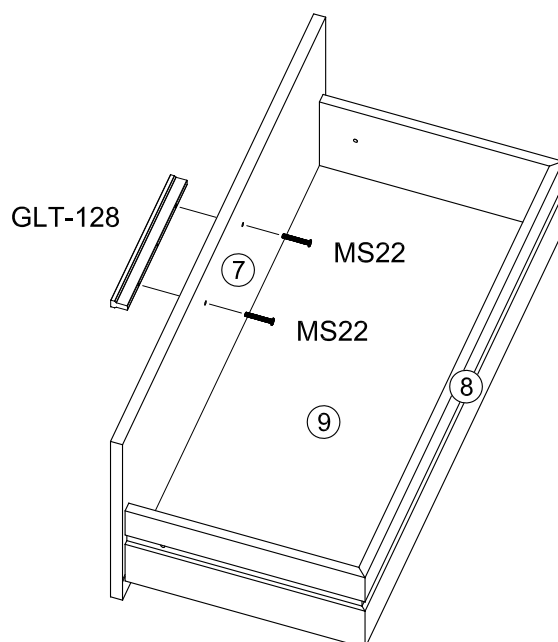


30 Minuten trocknen lassen
30 minutes to dry
30 minutes pour sécher
30 minuti asciugare lasciare
30 minuten laten drogen


F

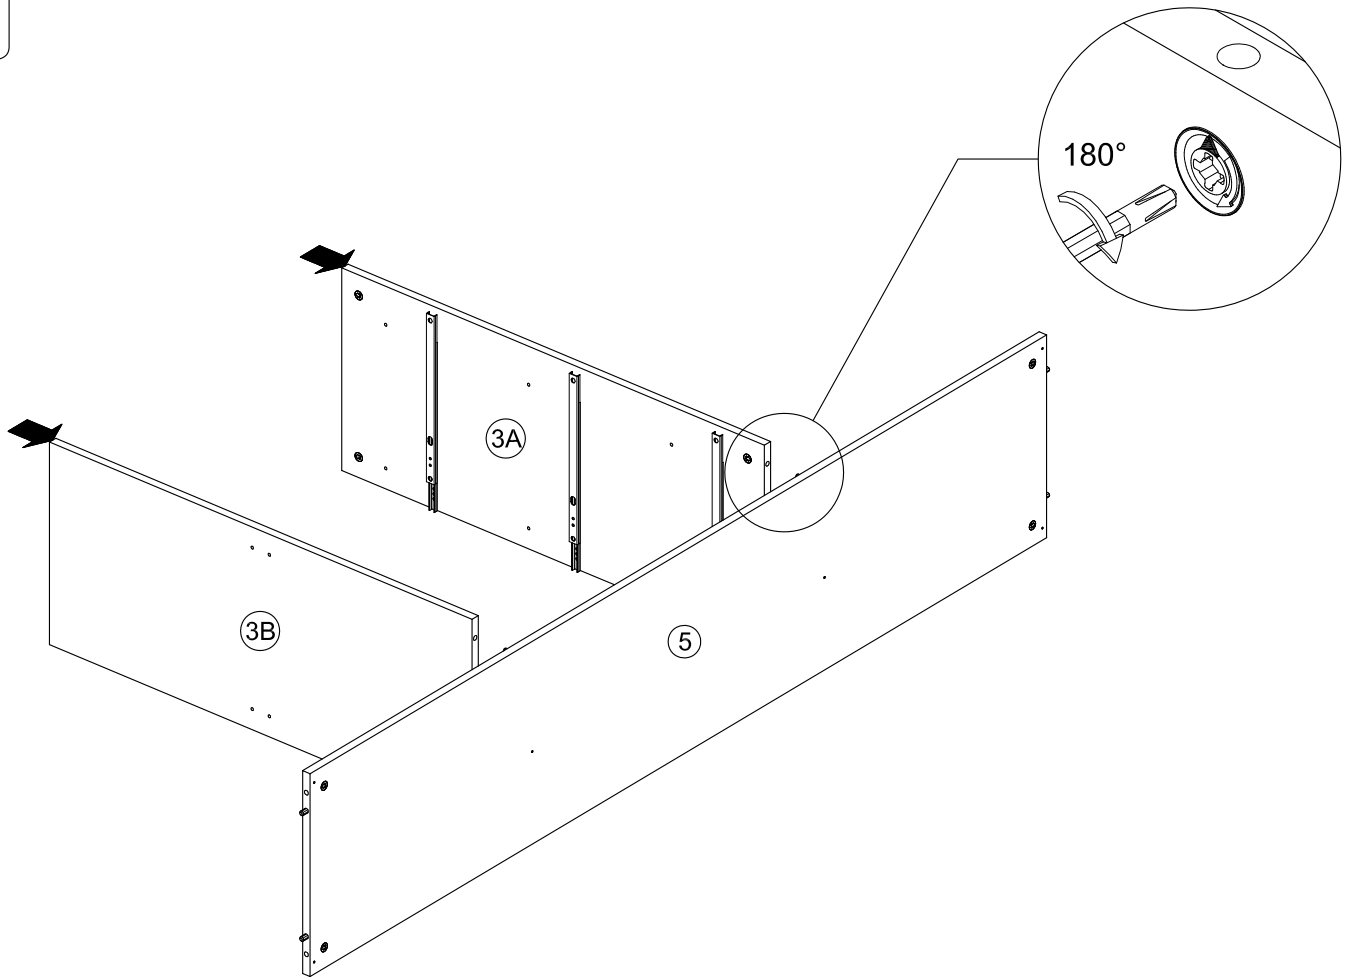


G

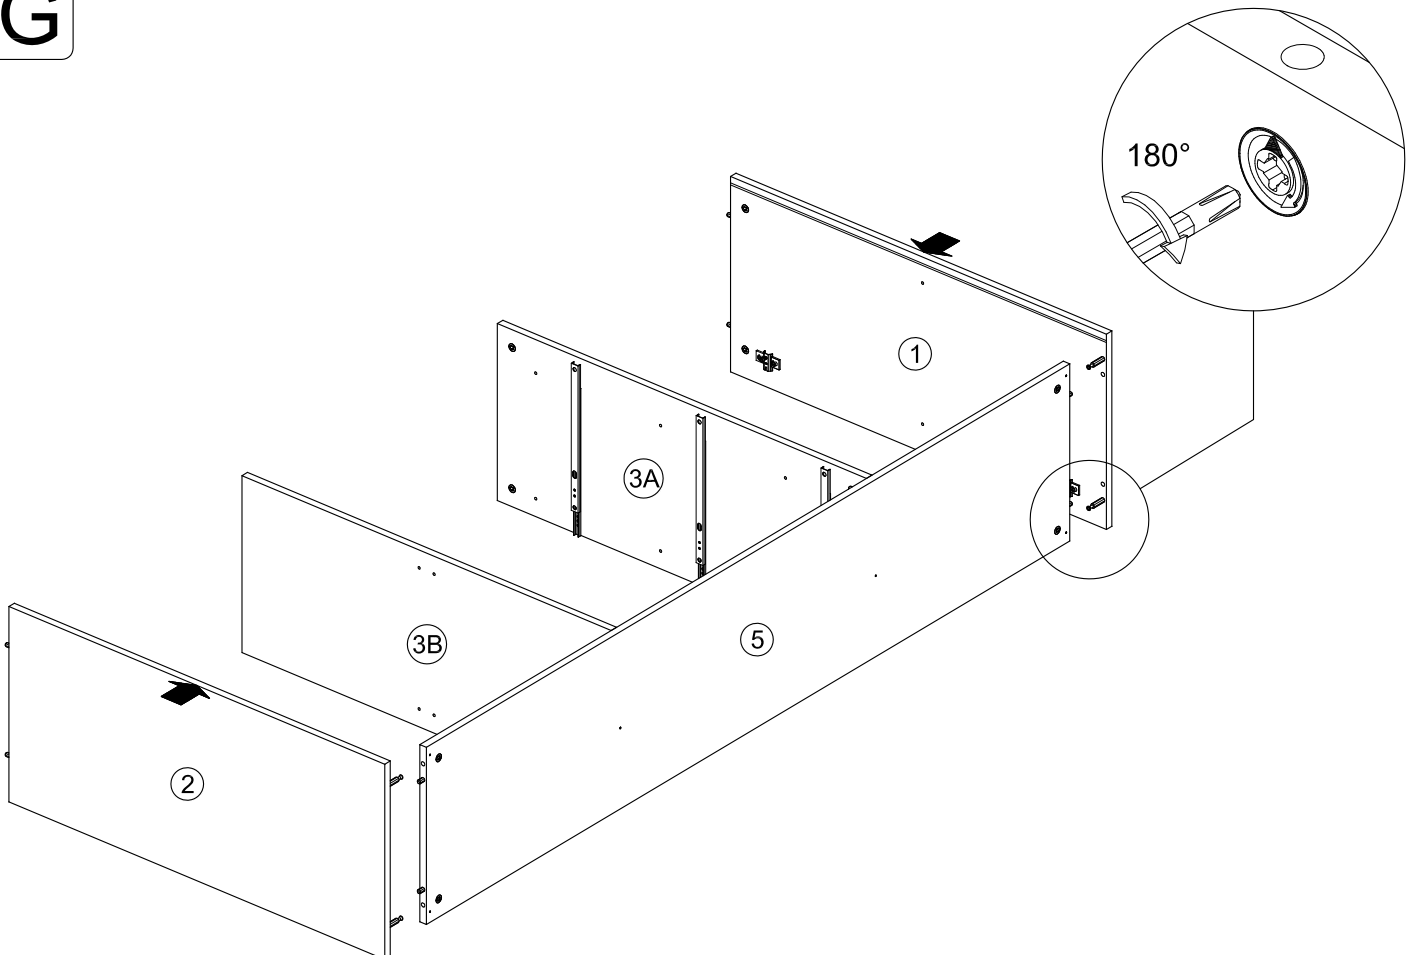




H

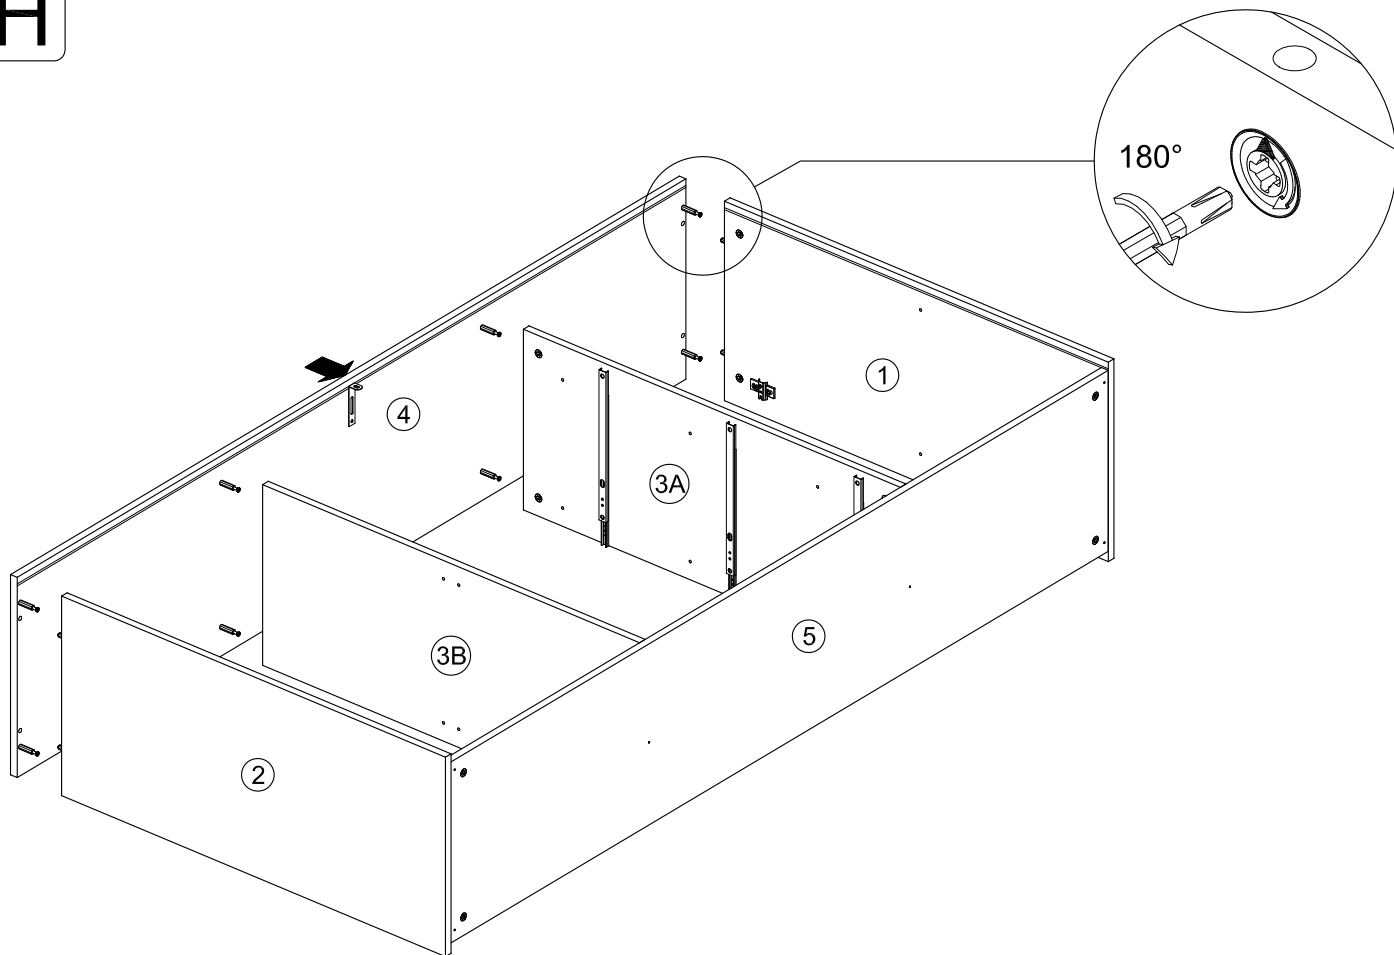



I

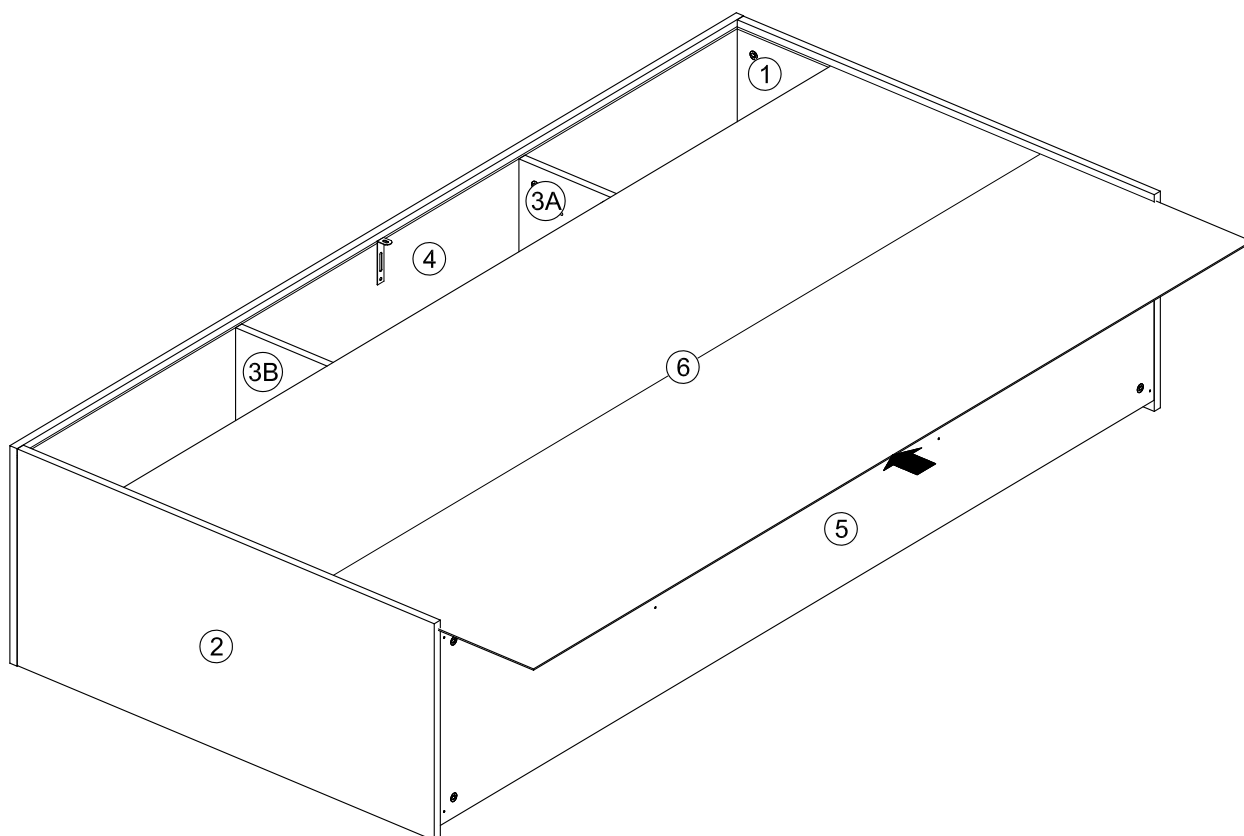




J

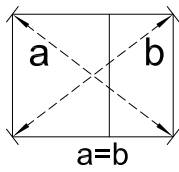


7x

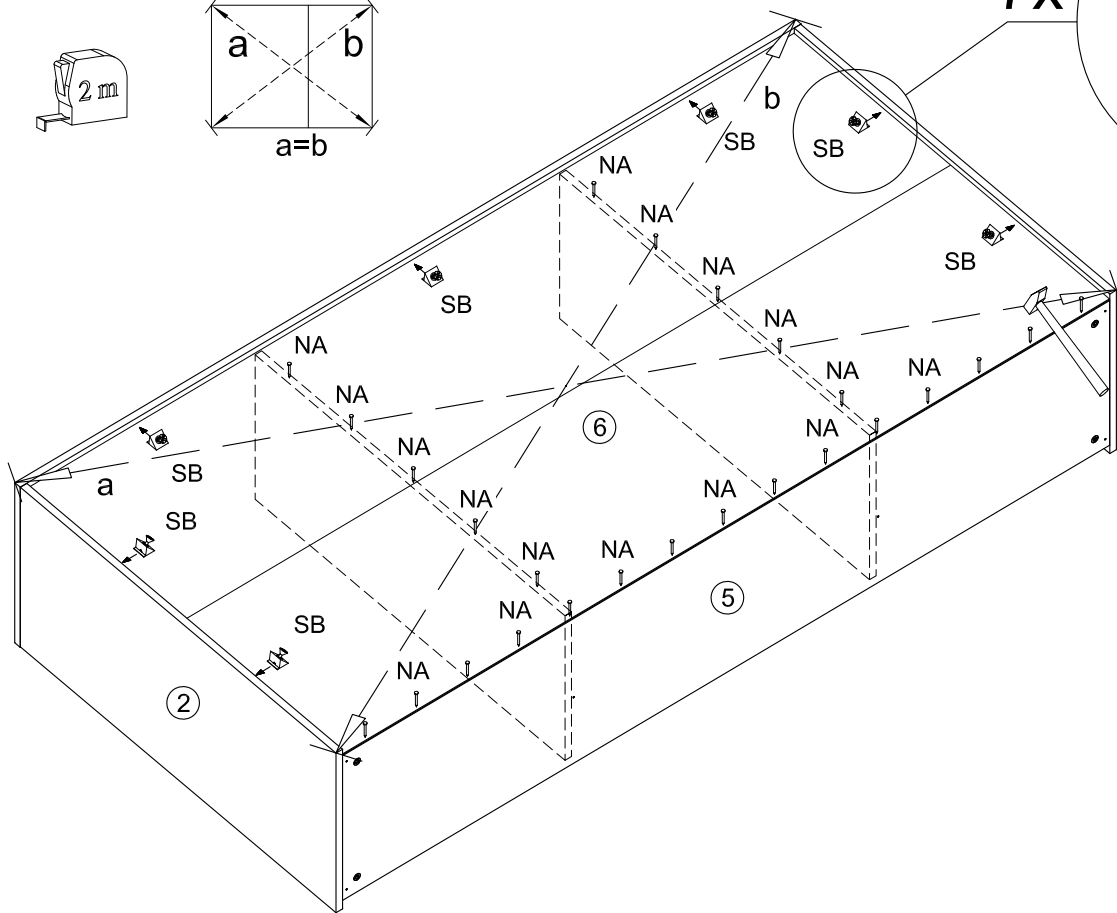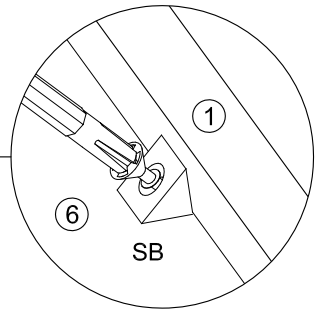

K

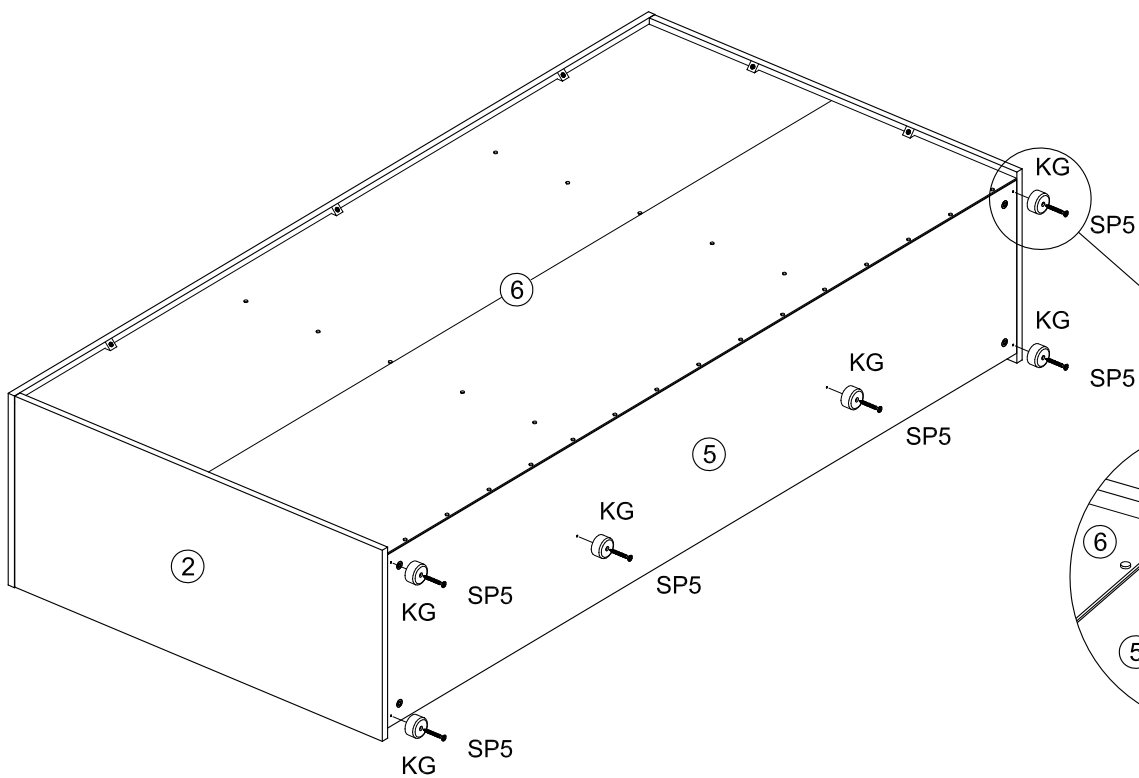

6x

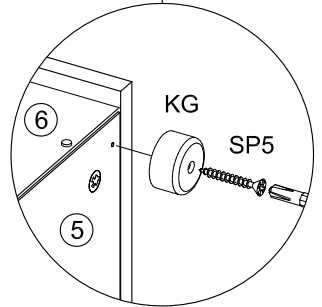

L


Befestigungsmaterial für die Kippsicherung ist der Wandeigenschaft anzupassen!

Attached wall-fastening-material is for massive walls only. For mounting on all other walls please use special dowels.

matériel de fixation pour le verrou d'inclinaison être adaptés à le matériau du mur.

L'hardware di fissaggio per il blocco dell'inclinazione deve essere adattato al materiale della parete.

Beugel zowel aan de kast als aan de muur bevestigen om kiepen te voorkomen!



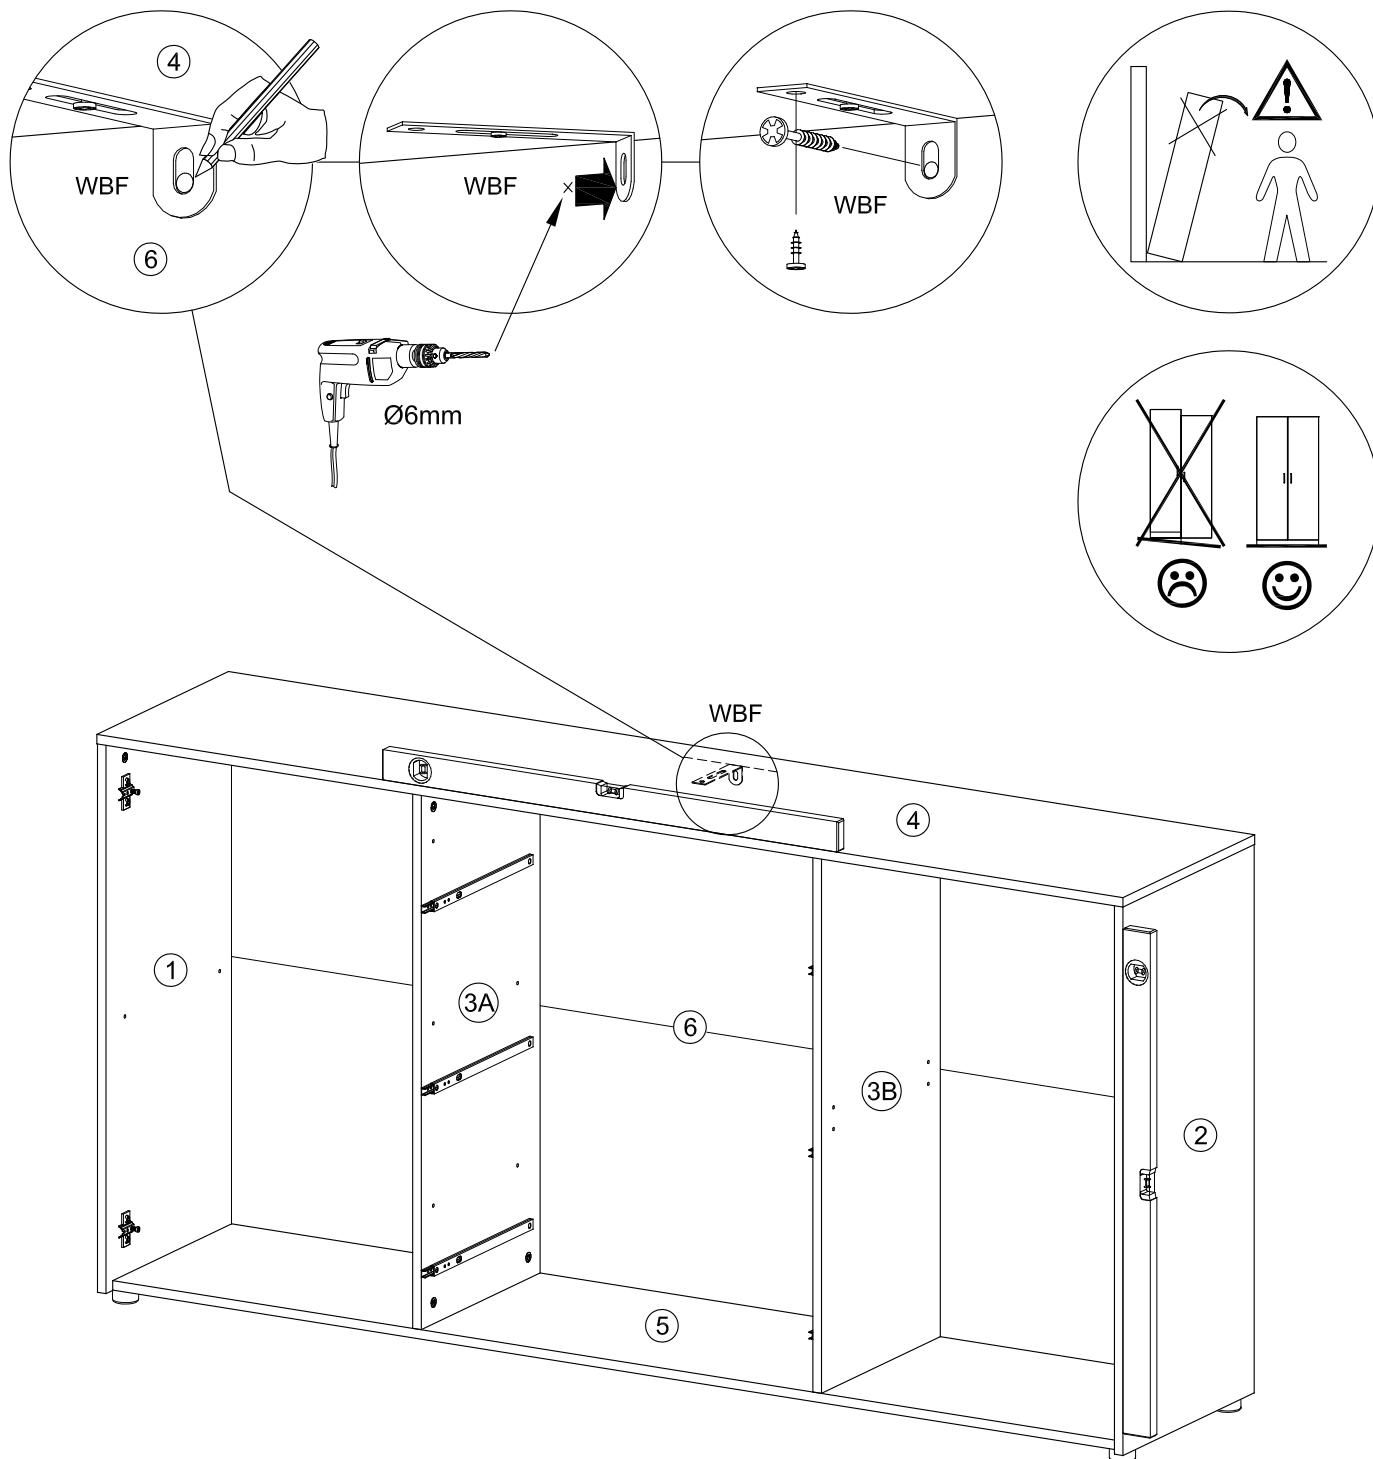


M



M4x9






6x MS9

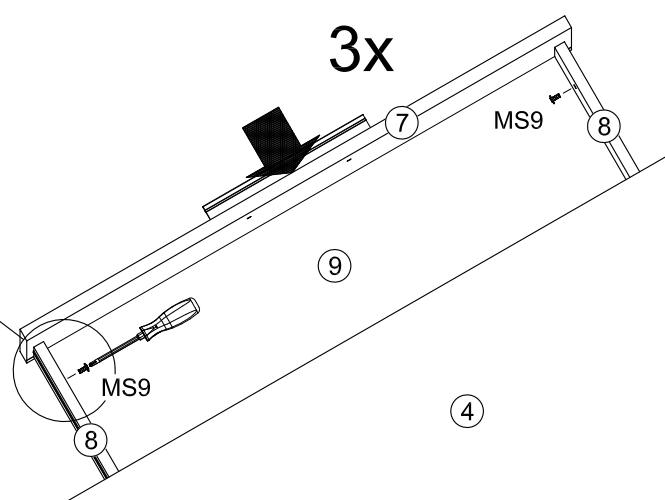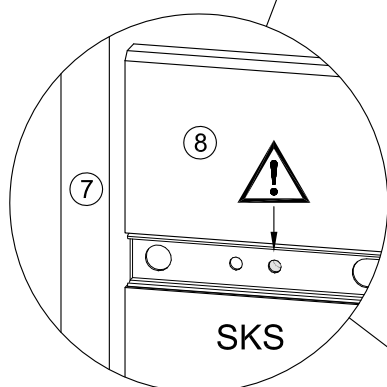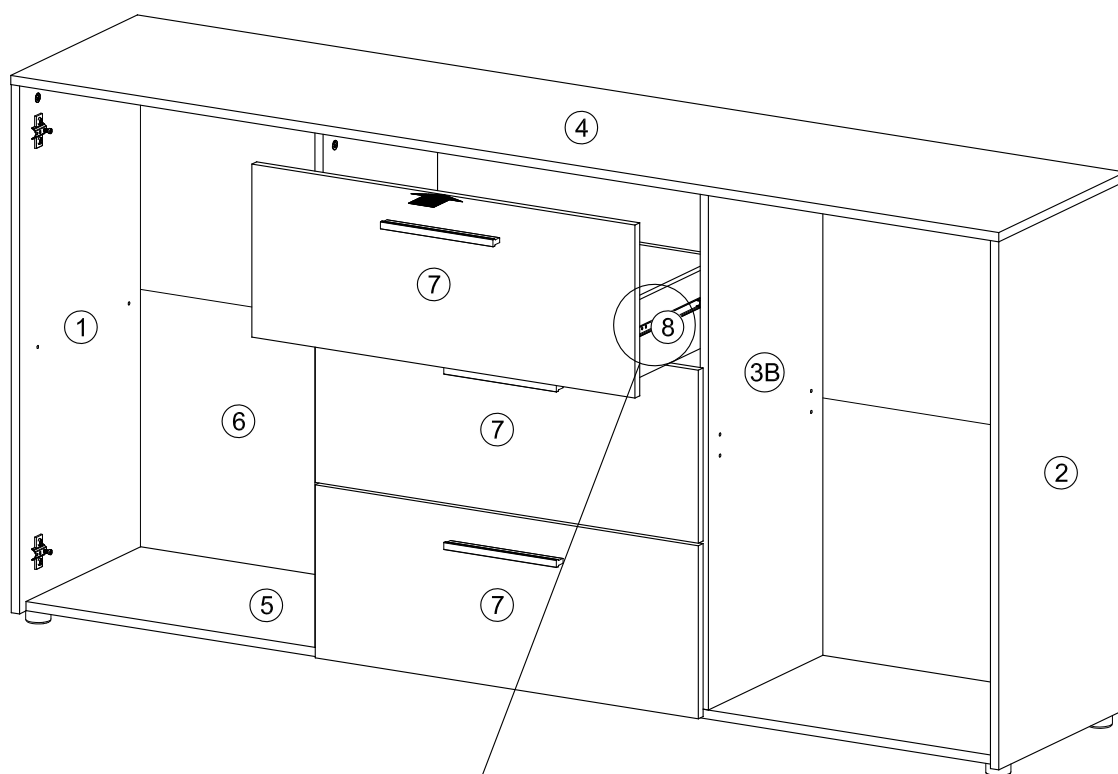

N

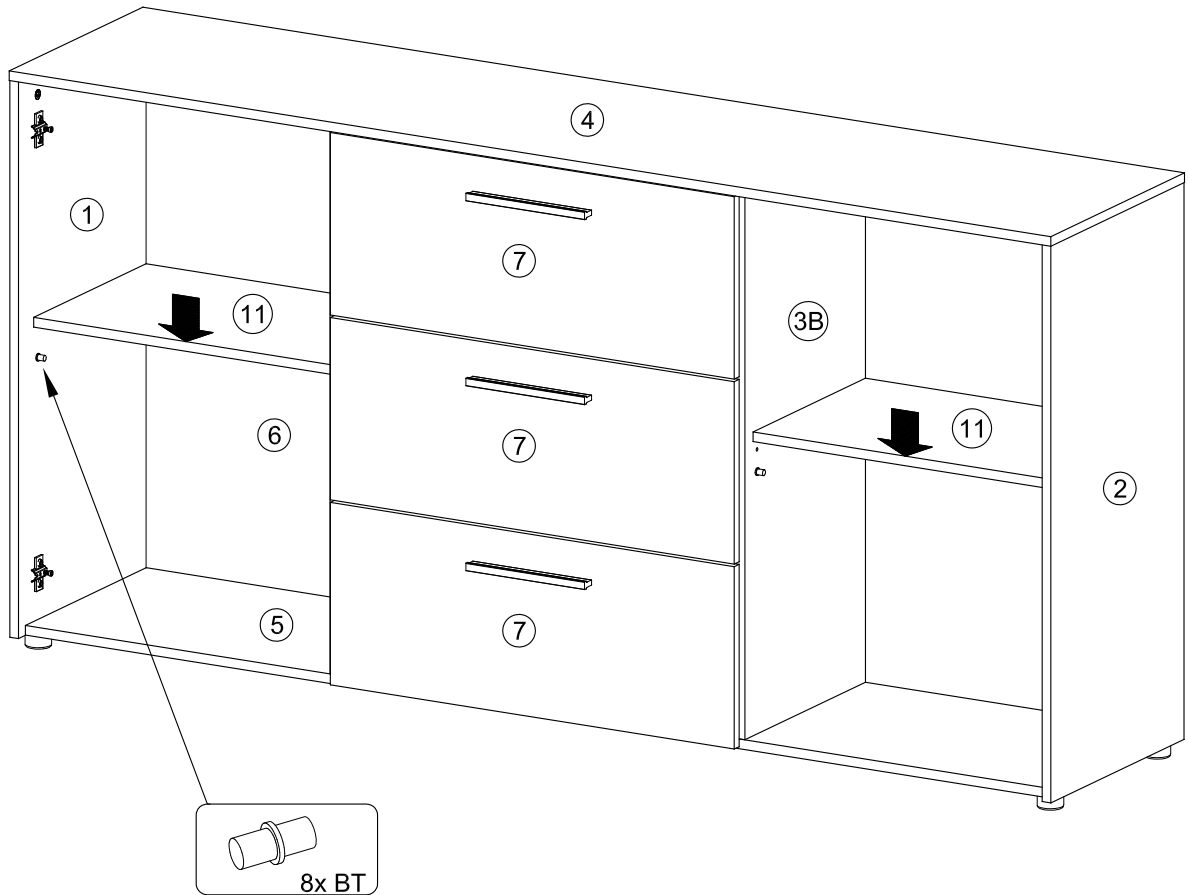

O

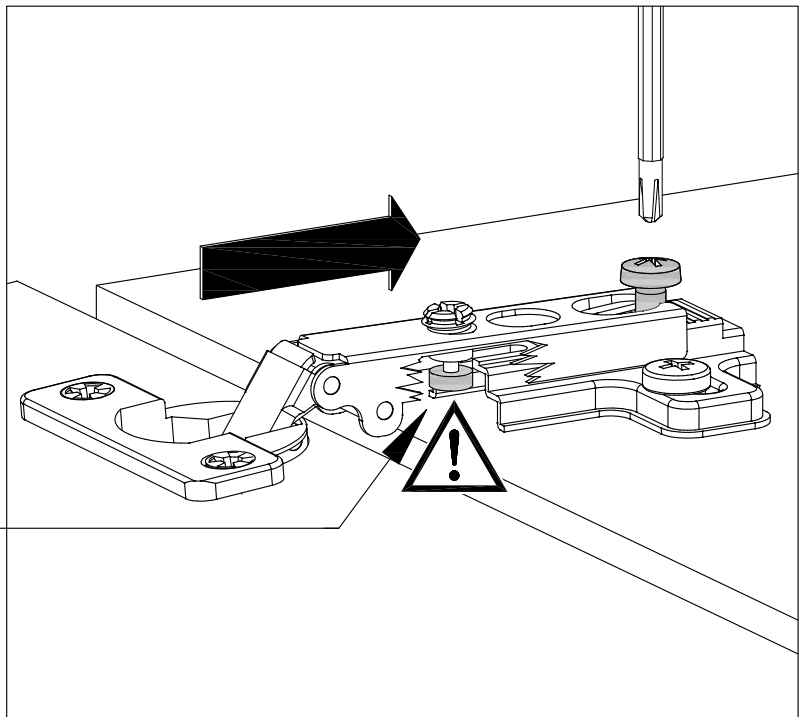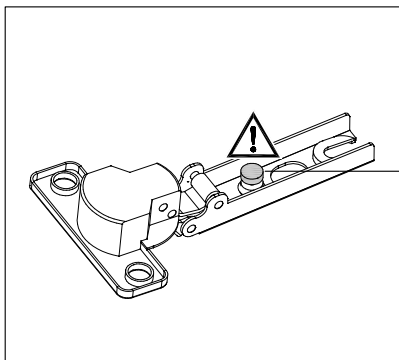


P

2x GLT-128


M4x22
4x MS22

4x ADK-EX




4x

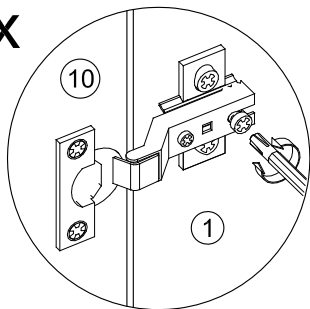


4x ADK-EX

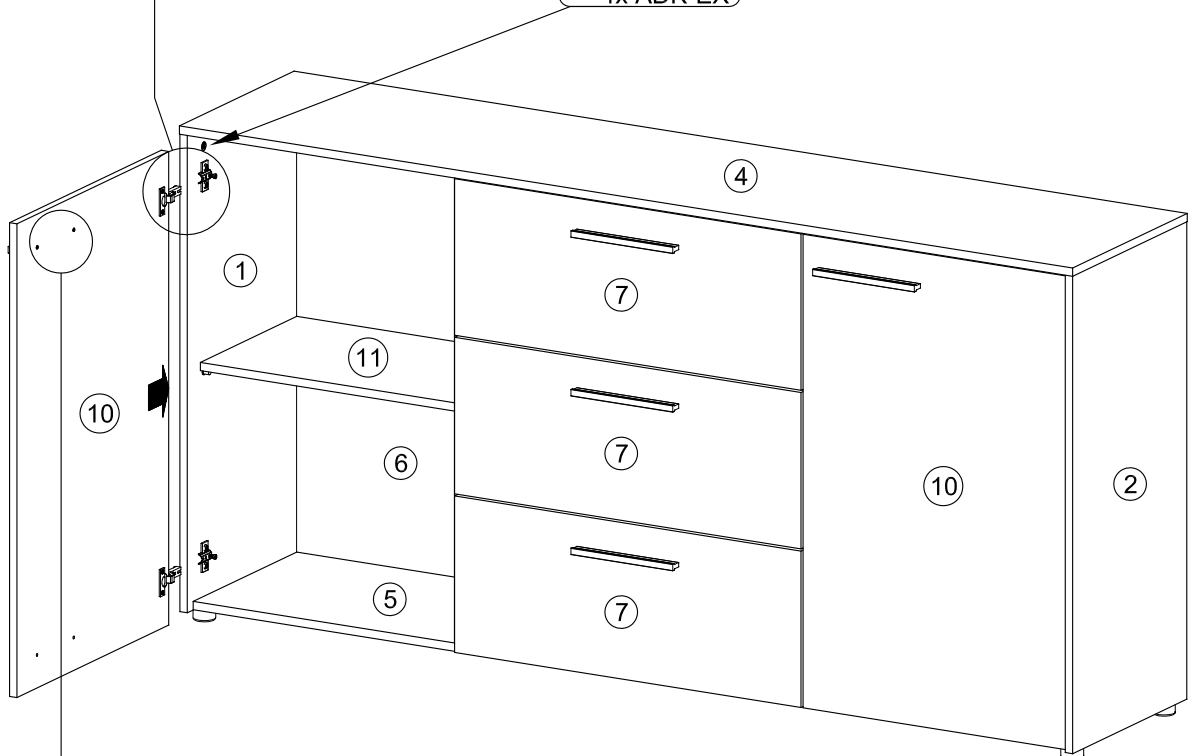




1 2x

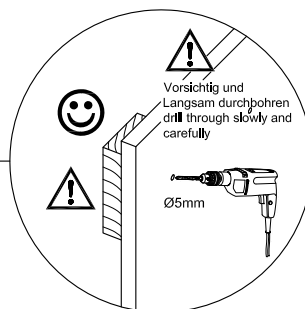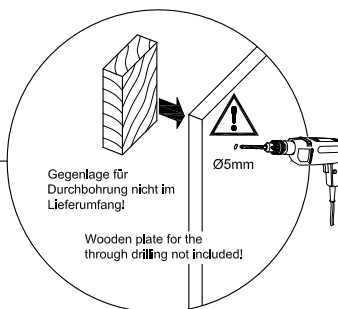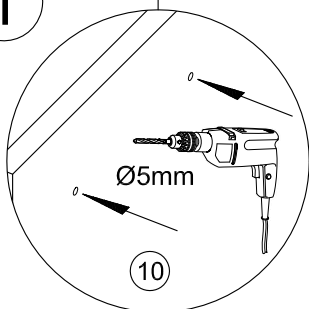

2

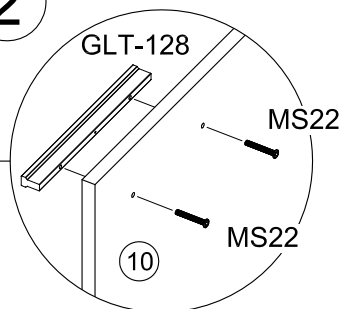

Q

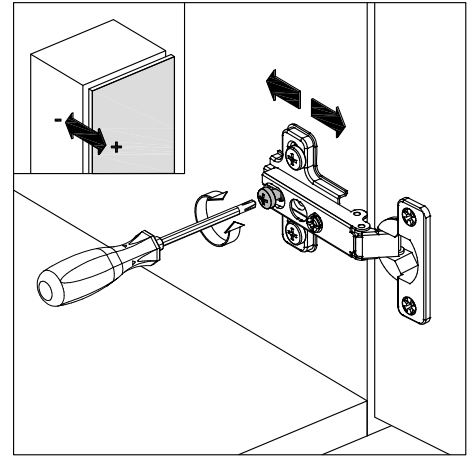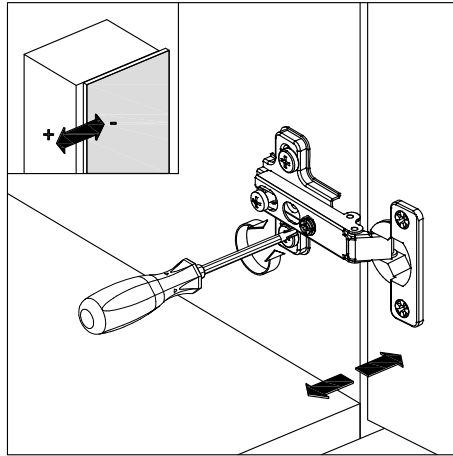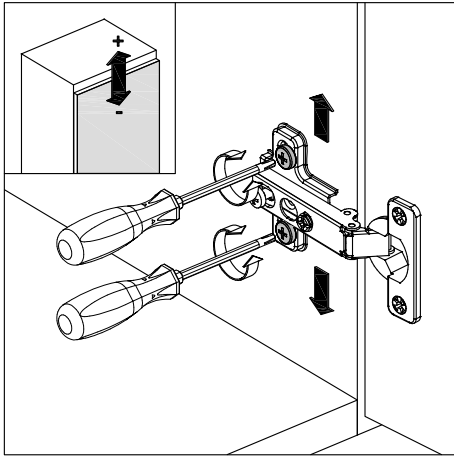

DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

EN - Caution

Follow carefully the assembling instructions described in the directions.

FR - Sécurité

Respecter les instructions de montage décrites dans la notice.

I - Norme di sicurezza

Si prega di assicurarsi di seguire le istruzioni di montaggio.

NL - Veiligheid

De in de Gebruiksaanwijzing beschreven Instructies respecteren.

